

MC60

AT Commands Manual

GSM/GPRS/GNSS Module Series

Rev. MC60_AT_Commands_Manual_V1.1

Date: 2016-08-17



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

Office 501, Building 13, No.99, Tianzhou Road, Shanghai, China, 200233

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local office. For more information, please visit:

<http://www.quectel.com/support/salesupport.aspx>

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/techsupport.aspx>

Or email to: Support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2016. All rights reserved.

About the Document

History

Revision	Date	Author	Description
1.0	2016-07-08	Hyman DING	Initial
1.1	2016-08-17	Hyman DING	Added AT+QDSIM command

Quectel
Confidential

Contents

About the Document	2
Contents	3
Table Index	9
1 Introduction	10
1.1. Scope of the Document.....	10
1.2. AT Command Syntax.....	10
1.2.1. Combining AT Commands on the Same Command Line	11
1.2.2. Entering Successive AT Commands on Separate Lines	11
1.3. Supported Character Sets.....	11
1.4. Flow Control	12
1.4.1. Software Flow Control (XON/XOFF Flow Control)	12
1.4.2. Hardware Flow Control (RTS/CTS Flow Control)	13
1.5. Unsolicited Result Codes	13
2 General Commands	14
2.1. ATI Display Product Identification.....	14
2.2. AT+GMI Request Manufacturer Identification	15
2.3. AT+GMM Request TA Model Identification.....	15
2.4. AT+GMR Request TA Revision Identification of Software Release	16
2.5. AT+GOI Request Global Object Identification.....	16
2.6. AT+CGMI Request Manufacturer Identification.....	17
2.7. AT+CGMM Request Model Identification	18
2.8. AT+CGMR Request TA Revision Identification of Software Release.....	18
2.9. AT+GSN Request International Mobile Equipment Identity (IMEI)	19
2.10. AT+CGSN Request Product Serial Number Identification (Identical with +GSN).....	19
2.11. AT+QGSN Request Product Serial Number Identification (IMEI)	20
2.12. AT&F Set All Current Parameters to Manufacturer Defaults	21
2.13. AT&V Display Current Configuration	21
2.14. AT&W Store Current Parameters to User Defined Profile.....	23
2.15. ATQ Set Result Code Presentation Mode	24
2.16. ATV TA Response Format	24
2.17. ATX Set CONNECT Result Code Format and Monitor Call Progress	26
2.18. ATZ Set All Current Parameters to User Defined Profile.....	27
2.19. AT+CFUN Set Phone Functionality	27
2.20. AT+QPOWD Power off	29
2.21. AT+CMEE Report Mobile Equipment Error.....	29
2.22. AT+CSCS Select TE Character Set	30
2.23. AT+GCAP Request Complete TA Capabilities List.....	31
3 Serial Interface Control Commands	33
3.1. AT&C Set DCD Function Mode	33
3.2. AT&D Set DTR Function Mode.....	33

3.3.	AT+ICF	Set TE-TA Control Character Framing	34
3.4.	AT+IFC	Set TE-TA Local Data Flow Control.....	35
3.5.	AT+ILRR	Set TE-TA Local Data Rate Reporting Mode	36
3.6.	AT+IPR	Set TE-TA Fixed Local Rate	37
3.6.1.	Adaptive Baud Rate		38
3.7.	AT+CMUX	Multiplexer Control.....	40
3.8.	AT+QEAUART	Configure Dual UART Function	41
3.9.	AT+QSEDCB	Configure Parameters of the Dual UART	42
4	Status Control Commands		44
4.1.	AT+CEER	Extended Error Report	44
4.2.	AT+CPAS	Mobile Equipment Activity Status	45
4.3.	AT+QINDRI	Indicate RI When Using URC.....	46
4.4.	AT+QMOSTAT	Show State of Mobile Originated Call	47
4.5.	AT+QREFUSECS	Refuse to Receive SMS/Incoming Call or Not	48
4.6.	AT+QIURC	Enable or Disable Initial URC Presentation	48
4.7.	AT+QEXTUNSOL	Enable/Disable Proprietary Unsolicited Indications.....	49
4.8.	AT+QINISTAT	Query State of Initialization	51
4.9.	AT+QNSTATUS	Query GSM Network Status.....	51
4.10.	AT+QNITZ	Network Time Synchronization.....	52
4.11.	AT+QLTS	Obtain Latest Network Time Synchronized	53
4.12.	AT+CTZU	Network Time Synchronization and Update the RTC Time	54
4.13.	AT+CTZR	Network Time Synchronization Report.....	55
4.14.	AT+QSIMDET	Enable/Disable SIM Card Detection.....	55
4.15.	AT+QSIMSTAT	SIM Inserted Status Reporting	56
4.16.	AT+QCGTIND	Circuit Switched Call or GPRS PDP Context Termination Indication	57
5	SIM Related Commands		59
5.1.	AT+CIMI	Request International Mobile Subscriber Identity (IMSI)	59
5.2.	AT+CLCK	Facility Lock	60
5.3.	AT+CPIN	Enter PIN	62
5.4.	AT+CPWD	Change Password.....	63
5.5.	AT+CRSM	Restricted SIM Access.....	65
5.6.	AT+CSIM	Generic SIM Access.....	66
5.7.	AT+QCSPWD	Change PS Super Password.....	66
5.8.	AT+CCID	Show CCID.....	67
5.9.	AT+QCCID	Show CCID.....	68
5.10.	AT+QGID	Get SIM Card Group Identifier	68
5.11.	AT+QSIMVOL	Select SIM Card Operating Voltage.....	69
5.12.	AT+QSPN	Get Service Provider Name from SIM	70
5.13.	AT+QTRPIN	Times Remain to Input SIM PIN/PUK	70
5.14.	AT+QDSIM	Dual SIM Switching	71
6	Network Service Commands		72
6.1.	AT+COPS	Operator Selection	72
6.2.	AT+CREG	Network Registration	74

6.3.	AT+CSQ	Signal Quality Report	75
6.4.	AT+CPOL	Preferred Operator List.....	76
6.5.	AT+COPN	Read Operator Names.....	77
6.6.	AT+QBAND	Get and Set Mobile Operation Band	78
6.7.	AT+QENG	Switch on or off Engineering Mode	79
6.8.	AT+QSCANF	Scan Power of GSM Frequency	82
6.9.	AT+QLOCKF	Lock GSM Frequency	83
7	Call Related Commands		84
7.1.	ATA	Answer an Incoming Call.....	84
7.2.	ATD	Mobile Originated Call to Dial a Number	85
7.3.	ATH	Disconnect Existing Connection	86
7.4.	+++	Switch from Data Mode to Command Mode	87
7.5.	ATO	Switch from Command Mode to Data Mode	88
7.6.	ATP	Select Pulse Dialing	88
7.7.	ATS0	Set Number of Rings before Automatically Answering Call.....	89
7.8.	ATS6	Set Pause before Blind Dialing	89
7.9.	ATS7	Set Number of Seconds to Wait for Connection Completion	90
7.10.	ATS8	Set the Number of Seconds to Wait for Comma Dial Modifier	91
7.11.	ATS10	Set Disconnect Delay after Indicating the Absence of Data Carrier.....	91
7.12.	ATT	Select Tone Dialing.....	92
7.13.	AT+CSTA	Select Type of Address	92
7.14.	AT+CLCC	List Current Calls of ME	93
7.15.	AT+CR	Service Reporting Control.....	94
7.16.	AT+CRC	Set Cellular Result Code for Incoming Call Indication	95
7.17.	AT+CRLP	Select Radio Link Protocol Parameter	97
7.18.	AT+CSNS	Single Numbering Scheme	98
7.19.	AT+CMOD	Configure Alternating Mode Calls	98
7.20.	AT+QSFR	Preference Speech Coding	99
7.21.	AT+QSPCH	Speech Channel Type Report	100
7.22.	AT+QDISH	Disable ATH.....	101
8	SMS Commands		102
8.1.	AT+CSMS	Select Message Service	102
8.2.	AT+CMGF	Select SMS Message Format.....	103
8.3.	AT+CSCA	SMS Service Center Address.....	103
8.4.	AT+CPMS	Preferred SMS Message Storage.....	105
8.5.	AT+CMGD	Delete SMS Message	106
8.6.	AT+CMGL	List SMS Messages from Preferred Storage	107
8.7.	AT+CMGR	Read SMS Message	110
8.8.	AT+CMGS	Send SMS Message.....	113
8.9.	AT+CMGW	Write SMS Message to Memory	115
8.10.	AT+CMSS	Send SMS Message from Storage	116
8.11.	AT+CMGC	Send SMS Command	117
8.12.	AT+CNMI	New SMS Message Indications	119

8.13.	AT+CRES	Restore SMS Settings.....	121
8.14.	AT+CSAS	Save SMS Settings	122
8.15.	AT+CSCB	Select Cell Broadcast SMS Messages	122
8.16.	AT+CSDH	Show SMS Text Mode Parameters.....	123
8.17.	AT+CSMP	Set SMS Text Mode Parameters	125
8.18.	AT+QCLASS0	Store Class 0 SMS to SIM when Receiving Class 0 SMS	126
8.19.	AT+QMGDA	Delete All SMS.....	127
8.20.	AT+QSMSCODE	Configure SMS Code Mode	128
9	Phonebook Commands.....		129
9.1.	AT+CPBS	Select Phonebook Memory Storage	129
9.2.	AT+CPBW	Write Phonebook Entry	130
9.3.	AT+CPBR	Read Current Phonebook Entries.....	131
9.4.	AT+CPBF	Find Phonebook Entries	132
9.5.	AT+CNUM	Subscriber Number	133
10	GPRS Commands		135
10.1.	AT+CGATT	Attach to/Detach from GPRS Service	135
10.2.	AT+CGDCONT	Define PDP Context.....	136
10.3.	AT+CGQREQ	Quality of Service Profile (Requested).....	137
10.4.	AT+CGQMIN	Quality of Service Profile (Minimum Acceptable).....	138
10.5.	AT+CGACT	PDP Context Activate or Deactivate.....	139
10.6.	AT+CGDATA	Enter Data State.....	140
10.7.	AT+CGPADDR	Show PDP Address	141
10.8.	AT+CGCLASS	GPRS Mobile Station Class.....	142
10.9.	AT+CGEREP	Control Unsolicited GPRS Event Reporting	143
10.10.	AT+CGREG	Network Registration Status	144
10.11.	AT+CGSMS	Select Service for MO SMS Messages	145
10.12.	AT+QGPCLASS	Change GPRS Multi-slot Class.....	146
11	TCPIP Commands.....		147
11.1.	AT+QIOPEN	Start up TCP or UDP Connection	147
11.2.	AT+QISEND	Send Data through TCP or UDP Connection.....	148
11.3.	AT+QICLOSE	Close TCP or UDP Connection.....	149
11.4.	AT+QIDEACT	Deactivate GPRS/CSD PDP Context	150
11.5.	AT+QILPORT	Set Local Port.....	151
11.6.	AT+QIREGAPP	Start TCPIP Task and Set APN, User Name and Password.....	152
11.7.	AT+QIACT	Activate GPRS/CSD Context	153
11.8.	AT+QILOCIP	Get Local IP Address.....	153
11.9.	AT+QISTAT	Query Current Connection Status	154
11.10.	AT+QISTATE	Query Connection Status of the Current Access	155
11.11.	AT+QISSTAT	Query the Current Server Status.....	157
11.12.	AT+QIDNSCFG	Configure Domain Name Server.....	158
11.13.	AT+QIDNSGIP	Query the IP Address of Given Domain Name	159
11.14.	AT+QIDNSIP	Connect with IP Address or Domain Name Server.....	159
11.15.	AT+QIHEAD	Add an IP Header When Receiving Data.....	160

11.16.	AT+QIAUTOS	Set Auto Sending Timer	161
11.17.	AT+QIPROMPT	Set Prompt of '>' When Sending Data	162
11.18.	AT+QISERVER	Configured as Server.....	162
11.19.	AT+QICSGP	Select CSD or GPRS as the Bearer	164
11.20.	AT+QISRVC	Choose Connection.....	165
11.21.	AT+QISHOWRA	Set Whether or Not to Display the Address of Sender	166
11.22.	AT+QISCON	Save TCPIP Application Context	166
11.23.	AT+QIMODE	Select TCPIP Transfer Mode.....	168
11.24.	AT+QITCFG	Configure Transparent Transfer Mode	169
11.25.	AT+QISHOWPT	Control Whether or Not to Show the Protocol Type	170
11.26.	AT+QIMUX	Control Whether or Not to Enable Multiple TCPIP Sessions.....	170
11.27.	AT+QISHOWLA	Control Whether or Not to Display Local IP Address	171
11.28.	AT+QIFGCNT	Select a Context as Foreground Context	172
11.29.	AT+QISACK	Query the Data Information for Sending	173
11.30.	AT+QINDI	Set the Method to Handle Received TCP/IP Data.....	174
11.31.	AT+QIRD	Retrieve the Received TCP/IP Data	175
11.32.	AT+QISDE	Control Whether or Not to Echo the Data for QISEND	176
11.33.	AT+QPING	Ping a Remote Server	177
11.34.	AT+QNTP	Synchronize the Local Time via NTP	178
12	Supplementary Service Commands		180
12.1.	AT+CCFC	Call Forwarding Number and Conditions Control	180
12.2.	AT+CCUG	Closed User Group Control	182
12.3.	AT+CCWA	Call Waiting Control.....	183
12.4.	AT+CHLD	Call Hold and Multiparty	184
12.5.	AT+CLIP	Calling Line Identification Presentation.....	186
12.6.	AT+QCLIP	Control Whether or Not to Show the Name of Incoming Call Number	188
12.7.	AT+CLIR	Calling Line Identification Restriction.....	189
12.8.	AT+COLP	Connected Line Identification Presentation	190
12.9.	AT+QCOLP	Show Alpha Field in +COLP String.....	191
12.10.	AT+CUSD	Unstructured Supplementary Service Data	192
12.11.	AT+CSSN	Supplementary Services Notification	193
13	Audio Commands		195
13.1.	ATL	Set Monitor Speaker Loudness	195
13.2.	ATM	Set Monitor Speaker Mode.....	195
13.3.	AT+VTD	Tone Duration.....	196
13.4.	AT+VTS	DTMF and Tone Generation.....	197
13.5.	AT+CALM	Alert Sound Mode	198
13.6.	AT+CRSL	Ringer Sound Level	198
13.7.	AT+CLVL	Loud Speaker Volume Level.....	199
13.8.	AT+CMUT	Mute Control	200
13.9.	AT+QSIDET	Change the Side Tone Gain Level.....	200
13.10.	AT+QMIC	Change the Microphone Gain Level.....	201
13.11.	AT+QLDTMF	Generate Local DTMF Tones.....	202

13.12.	AT+QAUDCH	Swap the Audio Channels	203
13.13.	AT+QAUDLOOP	Audio Channel Loop Back Test	204
13.14.	AT+QLTONE	Generate Local Specific Tone.....	204
13.15.	AT+QTONEP	Set DTMF Output Path	205
13.16.	AT+QTDMOD	Set Tone Detection Mode.....	206
13.17.	AT+QTONEDET	Detect DTMF	207
13.18.	AT+QWDTMF	Play DTMF Tone During the Call	209
14	Hardware Related Commands		212
14.1.	AT+CCLK	Clock.....	212
14.2.	AT+QALARM	Set Alarm.....	213
14.3.	AT+CBC	Battery Charge.....	214
14.4.	AT+QADC	Read ADC	214
14.5.	AT+QSCLK	Configure Slow Clock.....	215
14.6.	AT+QLEDMODE	Configure the Network Indication LED Patterns	216
14.7.	AT+QVBATT	Configure the Threshold of Voltage	217
15	Others Commands		220
15.1.	A/	Re-issue the Last Command Given	220
15.2.	ATE	Set Command Echo Mode.....	220
15.3.	ATS3	Set Command Line Termination Character	221
15.4.	ATS4	Set Response Formatting Character	221
15.5.	ATS5	Set Command Line Editing Character	222
15.6.	AT+QRIMODE	Set RI Time	222
15.7.	AT+QCFG="RFTXburst"	Burst Transition Signal Indication.....	223
16	Appendixes		225
16.1.	Related Documents		225
16.2.	Terms and Abbreviations		226
16.3.	Factory Default Settings Restorable with AT&F		227
16.4.	AT Command Settings Storable with AT&W.....		229
16.5.	AT Command Settings Storable with ATZ		231
16.6.	Summary of URC		233
16.7.	Summary of CME ERROR Codes		236
16.8.	Summary of CMS ERROR Codes		239
16.9.	Summary of Cause for Extended Error Report.....		241
16.9.1.	Location ID for the Extended Error Report		241
16.9.2.	Cause for Protocol Stack (PS) Layer		242
16.9.3.	Internal Cause for MM Layer.....		254
16.9.4.	Cause for PPP/IP-Stack		255

Table Index

TABLE 1: TYPES OF AT COMMANDS AND RESPONSES	11
TABLE 2: CURRENT CONFIGURATION LIST WHEN EXECUTING AT&V COMMAND	22
TABLE 3: ATV0&ATV1 RESULT CODES NUMERIC EQUIVALENTS AND BRIEF DESCRIPTIONS.....	25
TABLE 4: RELATED DOCUMENTS	225
TABLE 5: TERMS AND ABBREVIATIONS	226
TABLE 6: FACTORY DEFAULT SETTINGS RESTORABLE WITH AT&F	227
TABLE 7: AT COMMAND SETTINGS STORABLE WITH AT&W	229
TABLE 8: AT COMMAND SETTINGS STORABLE WITH ATZ.....	231
TABLE 9: SUMMARY OF URC	233
TABLE 10: DIFFERENT CODING SCHEMES OF +CME ERROR: <ERR>	236
TABLE 11: DIFFERENT CODING SCHEMES OF +CMS ERROR: <ERR>	239
TABLE 12: LOCATION ID FOR THE EXTENDED ERROR REPORT	241
TABLE 13: CAUSE FOR PROTOCOL STACK (PS) LAYER	242
TABLE 14: INTERNAL CAUSE FOR MM LAYER	254
TABLE 15: CAUSE FOR PPP/IP-STACK	255

Quectel
Confidential

1 Introduction

1.1. Scope of the Document

This document presents the AT Commands Set for Quectel cellular engine MC60.

1.2. AT Command Syntax

The “AT” or “at” prefix must be set at the beginning of each command line. To terminate a command line enter <CR>. Commands are usually followed by a response that includes “<CR><LF><response><CR><LF>”. Throughout this document, only the responses are presented, “<CR><LF>” are omitted intentionally.

The AT Commands Set implemented by MC60 is a combination of GSM07.05, GSM07.07 and ITU-T recommendation V.25ter as well as the AT commands developed by Quectel.

All these AT commands can be split into three categories syntactically: “basic”, “S parameter”, and “extended”. They are listed as follows:

- **Basic syntax**

These AT commands have the format of “AT<x><n>”, or “AT&<x><n>”, where “<x>” is the command, and “<n>” is/are the argument(s) for that command. An example of this is “ATE<n>”, which tells the DCE whether received characters should be echoed back to the DTE according to the value of “<n>”. “<n>” is optional and a default will be used if it is missing.

- **S parameter syntax**

These AT commands have the format of “ATS<n>=<m>”, where “<n>” is the index of the S register to set, and “<m>” is the value to assign to it. “<m>” is optional; if it is missing, then a default value is assigned.

- **Extended syntax**

These commands can be operated in several modes, as following table:

Table 1: Types of AT Commands and Responses

Test Command	AT+<x>=?	This command returns the list of parameters and value ranges set by the corresponding Write Command or internal processes.
Read Command	AT+<x>?	This command returns the currently set value of the parameter or parameters.
Write Command	AT+<x>=<...>	This command sets the user-definable parameter values.
Execution Command	AT+<x>	This command reads non-variable parameters affected by internal processes in the GSM engine.

1.2.1. Combining AT Commands on the Same Command Line

You can enter several AT commands on the same line. In this case, you do not need to type the “AT” or “at” prefix before every command. Instead, you only need to type “AT” or “at” at the beginning of the command line. Please note that use a semicolon as command delimiter.

The command line buffer can accept a maximum of 256 characters. If the input characters exceeded the maximum then no command will be executed and TA will return “ERROR”.

1.2.2. Entering Successive AT Commands on Separate Lines

When you need to enter a series of AT commands on separate lines, please note that you need to wait the final response (for example OK, CME error, CMS error) of the last AT command you entered before you enter the next AT command.

1.3. Supported Character Sets

The MC60 AT command interface defaults to the GSM character set. The MC60 supports the following character sets:

- GSM
- UCS2
- HEX
- IRA
- PCCP437
- 8859-1

The character set can be configured and interrogated using the “AT+CSCS” command (GSM 07.07). The character set is defined in GSM specification 07.05. The character set affects transmission and reception

of SMS and SMS Cell Broadcast Messages, as well as the entry and display of phone book entries text field and SIM Application Toolkit alpha strings.

1.4. Flow Control

Flow control is very important for correct communication between the GSM engine and the DTE. In cases such as a data or fax call, the sending device is transferring data faster than the receiving side ready to accept. When the receiving buffer reaches its capacity, the receiving device should be able to cause the sending device to pause until it catches up.

There are basically two approaches to achieve data flow control: software flow control and hardware flow control. MC60 supports both two kinds of flow control.

In multiplex mode, it is recommended to use the hardware flow control.

The default flow control approach of MC60 is disabled.

1.4.1. Software Flow Control (XON/XOFF Flow Control)

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. It is quite useful in some applications that only use three wires on the serial interface.

The default flow control approach of MC60 is disabled. To enable software flow control in the DTE interface and within GSM engine, type the following AT command:

```
AT+IFC=1, 1<CR>
```

This setting is stored in volatile memory, for use after restart. **AT+IFC=1, 1<CR>** should be stored to the user profile with **AT&W<CR>**.

Ensure that all communication software packages (e.g. ProComm Plus, Hyper Terminal or WinFax Pro) use software flow control.

NOTE

Software Flow Control should not be used for data calls where binary data will be transmitted or received (e.g. TCP/IP), because the DTE interface may interpret binary data as flow control characters.

1.4.2. Hardware Flow Control (RTS/CTS Flow Control)

The default flow control approach of MC60 is disabled. To enable hardware flow control (RTS/CTS flow control) in the DTE interface and within GSM engine, type the following AT command:

```
AT+IFC=2, 2<CR>
```

This setting is stored volatile, for use after restart. **AT+IFC=2, 2<CR>** should be stored to the user profile with **AT&W<CR>**.

Hardware flow control achieves the data flow control by controlling the RTS/CTS line. When the data transfer is suspended, the CTS line is set inactive until the transfer from the receiving buffer has been completed. When the receiving buffer is ready to receive more data, CTS goes active once again.

To achieve hardware flow control, ensure that the RTS/CTS lines are available on your application platform.

1.5. Unsolicited Result Codes

A URC is a report message sent from the ME to the TE. An unsolicited result code can be delivered automatically when an event occurs, reflect changes in system state, or act as the result of a query the ME received before. It is often delivered due to occurrences of errors in executing the queries. However, a URC is not issued as a direct response to an executed AT command. AT commands have their own implementations to validate inputs such as "OK" or "ERROR".

Typical URCs may be information about incoming calls, received SMS, changing temperature, status of the battery, etc. A summary of URCs is listed in **Chapter 16.6**.

When sending a URC, the ME activates its Ring Interrupt (Logic "1"), i.e. the line goes active low for a few milliseconds. If an event which delivers a URC coincides with the execution of an AT command, the URC will be output after command execution has been completed.

2 General Commands

2.1. ATI Display Product Identification Information

ATI Display Product Identification Information

Execution Command ATI	Response TA returns a product information text. Quectel_Ltd <Object Id> Revision: <revision> OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<Object Id>	Identifier of device type
<revision>	Revision of software release

Example

```
ATI
Quectel_Ltd
Quectel_MC60
Revision: MC60CAR01A01

OK
```


2.2. AT+GMI Request Manufacturer Identification

AT+GMI Request Manufacturer Identification	
Test Command AT+GMI=?	Response OK
Execution Command AT+GMI	Response TA reports one or more lines of information text which permit the user to identify the manufacturer. Quectel_Ltd <Object Id> Revision: MTK 0828 OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<Object Id> Identifier of device type

2.3. AT+GMM Request TA Model Identification

AT+GMM Request TA Model Identification	
Test Command AT+GMM=?	Response OK
Execution Command AT+GMM	Response TA returns a product model identification text. <Object Id> OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<Object Id> Identifier of device type

2.4. AT+GMR Request TA Revision Identification of Software Release

AT+GMR Request TA Revision Identification of Software Release

Test Command AT+GMR=?	Response OK
Execution Command AT+GMR	Response TA reports one or more lines of information text which permit the user to identify the revision of software release. Revision: <revision> OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<revision> Revision of software release

Example

```
AT+GMR
Revision: MC60CAR01A01

OK
```

2.5. AT+GOI Request Global Object Identification

AT+GOI Request Global Object Identification

Test Command AT+GOI=?	Response OK
Execution Command	Response

AT+GOI	TA reports one or more lines of information text which permit the user to identify the device, based on the ISO system for registering unique object identifiers. <Object Id>
	OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<Object Id> Identifier of device type

NOTE

See X.208, 209 for the format of **<Object Id>**. For example, in MC60 wireless module, string "MC60" is displayed.

2.6. AT+CGMI Request Manufacturer Identification

AT+CGMI Request Manufacturer Identification	
Test Command AT+CGMI=?	Response OK
Execution Command AT+CGMI	Response TA returns manufacturer identification text. Quectel_Ltd <Object Id> Revision: MTK 0828 OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<Object Id> Identifier of device type

2.7. AT+CGMM Request Model Identification

AT+CGMM Request Model Identification	
Test Command AT+CGMM=?	Response OK
Execution Command AT+CGMM	Response TA returns product model identification text. <Object Id> OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<Object Id> Identifier of device type

2.8. AT+CGMR Request TA Revision Identification of Software Release

AT+CGMR Request TA Revision Identification of Software Release	
Test Command AT+CGMR=?	Response OK
Execution Command AT+CGMR	Response TA returns product software version identification text. Revision: <revision> OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<revision> Product software version identification text

2.9. AT+GSN Request International Mobile Equipment Identity (IMEI)

AT+GSN Request International Mobile Equipment Identity (IMEI)

Test Command AT+GSN=?	Response OK
Execution Command AT+GSN	Response TA reports the IMEI (International Mobile Equipment Identity) number in information text which permits the user to identify the individual ME device. <sn> OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<sn> IMEI of the ME

NOTE

The serial number (**IMEI**) is varied with the individual ME device.

2.10. AT+CGSN Request Product Serial Number Identification (Identical with +GSN)

AT+CGSN Request Product Serial Number Identification (Identical with +GSN)

Test Command AT+CGSN=?	Response OK
Execution Command AT+CGSN	Response <sn> OK
Maximum Response Time	300ms

Reference
GSM 07.07

NOTE

See **AT+GSN**.

2.11. AT+QGSN Request Product Serial Number Identification (IMEI)

AT+QGSN Request Product Serial Number Identification (IMEI)

Test Command AT+QGSN=?	Response OK
Execution Command AT+QGSN	Response +QGSN: <sn> OK
Maximum Response Time	300ms
Reference	

Parameter

<sn> A string parameter which indicates the IMEI of the ME

NOTE

The serial number (**IMEI**) is varied with the individual ME device.

Example

```
AT+QGSN //Query the IMEI
+QGSN: "865734020000749"
OK
```

2.12. AT&F Set All Current Parameters to Manufacturer Defaults

AT&F Set All Current Parameters to Manufacturer Defaults

Execution Command AT&F[<value>]	Response TA sets all current parameters to the manufacturer defined profile. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	Set all TA parameters to manufacturer defaults
----------------------	---	--

NOTE

The command resets AT command settings to their factory default values. However, it does not change the current baud rate of UART.

2.13. AT&V Display Current Configuration

AT&V Display Current Configuration

Execution Command AT&V[<n>]	Response TA returns the current parameter setting. ACTIVE PROFILE <current configurations text> OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	0	Profile number
------------------	---	----------------

Table 2: Current Configuration List When Executing AT&V Command

AT&V or AT&V0
AT&V
ACTIVE PROFILE
E: 1
Q: 0
V: 1
X: 4
S0: 0
S2: 43
S3: 13
S4: 10
S5: 8
S6: 2
S7: 60
S8: 2
S10: 15
+CR: 0
+FCLASS: 0
+CMGF: 0
+CSDH: 0
+ILRR: 0
+CMEE: 1
+CBST: 7,0,1
+IFC: 0,0
+ICF: 3,3
+CNMI: 2,1,0,0,0
+CSCS: "GSM"
+IPR: 0
&C: 1
&D: 0
+CSTA: 129
+CRLP: 61,61,128,6,0,3
+CCWE: 0
+QSIMSTAT: 0
+CMUX: -1
+CCUG: 0,0,0
+CLIP: 0
+COLP: 0
+CCWA: 0
+CAOC: 1
+CLIR: 0
+CUSD: 0

```
+CREG: 0
+QSIMDET: 0,0,0
+QMIC: 4,9,8
+QECHO(NORMAL_AUDIO): 253,96,16388,57351,0
+QECHO(Earphone_AUDIO): 253,0,10756,57351,1
+QECHO(LoudSpk_AUDIO): 224,96,5256,57351,2
+QSIDET(NORMAL_AUDIO): 80
+QSIDET(HEADSET_AUDIO): 144
+QCLIP: 0
+QCOLP: 0
+CSNS: 0
```

OK

2.14. AT&W Store Current Parameters to User Defined Profile

AT&W Store Current Parameters to User Defined Profile

Execution Command AT&W[<n>]	Response TA stores the current parameter setting in the user defined profile. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n> 0 Profile number to store current parameters

NOTE

The profile defined by user is stored in nonvolatile memory.

2.15. ATQ Set Result Code Presentation Mode

ATQ Set Result Code Presentation Mode

Execution Command ATQ[<n>]	Response This parameter setting determines whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting. If <n>=0: OK If <n>=1: (none)
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	0	TA transmits result code
	1	Result codes are suppressed and not transmitted

2.16. ATV TA Response Format

ATV TA Response Format

Execution Command ATV[<value>]	Response This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses. When <value>=0 0 When <value>=1 OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	Information response: <text><CR><LF>
---------	---	--------------------------------------

1 Short result code format: <numeric code><CR>
Information response: <CR><LF><text><CR><LF>
Long result code format: <CR><LF><verbose code><CR><LF>

NOTE

The result codes, their numeric equivalents and brief descriptions of the use of each are listed in the following table.

Example

```

ATV1 //Set <value>=1
OK
AT+CSQ
+CSQ: 30,0

OK //When <value>=1, the result code is OK
ATV0 //Set <value>=0
0
AT+CSQ
+CSQ: 30,0
0 //When <value>=0, the result code is 0
    
```

Table 3: ATV0&ATV1 Result Codes Numeric Equivalents and Brief Descriptions

ATV1	ATV0	Description
OK	0	Acknowledges execution of a command
CONNECT	1	A connection has been established; the DCE is moving from command state to online data state
RING	2	The DCE has detected an incoming call signal from network
NO CARRIER	3	The connection has been terminated or the attempt to establish a connection is failed
ERROR	4	Command not recognized, command line maximum length exceeded, parameter value invalid, or other problem with processing the command line
NO DIALTONE	6	No dial tone detected
BUSY	7	Engaged (busy) signal detected
NO ANSWER	8	"@" (Wait for Quiet Answer) dial modifier was used, but

		remote ringing followed by five seconds of silence was not detected before expiration of the connection timer (S7)
PROCEEDING	9	An AT command is being processed
CONNECT <text>	Manufacturer-specific	Same as CONNECT , but includes manufacturer-specific text that may specify DTE speed, line speed, error control, data compression, or other status

2.17. ATX Set CONNECT Result Code Format and Monitor Call

Progress

ATX Set CONNECT Result Code Format and Monitor Call Progress

Execution Command ATX[<value>]	Response This parameter setting determines whether or not the TA detected the presence of a dial tone or busy signal, and whether or not the TA transmits particular result codes. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	CONNECT result code only returned; dial tone and busy signal detection are both disabled
	1	CONNECT<text> result code only returned; dial tone and busy signal detection are both disabled
	2	CONNECT<text> result code returned; dial tone detection is enabled, while busy signal detection is disabled
	3	CONNECT<text> result code returned; dial tone detection is disabled, while busy signal detection is enabled
	4	CONNECT<text> result code returned; dial tone and busy signal detection are both enabled

NOTES

1. If parameter is omitted, the command has the same behavior as **ATX0**.
2. The factory default is <value>=4.

2.18. ATZ Set All Current Parameters to User Defined Profile

ATZ Set All Current Parameters to User Defined Profile

Execution Command ATZ[<value>]	Response TA sets all current parameters to the user defined profile. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	Reset to profile number 0
----------------------	---	---------------------------

NOTES

1. The command restores the current AT command settings to the user defined profile in non-volatile memory, if one was stored with AT&W before.
2. Any additional commands on the same command line are ignored.
3. The command won't change the current baud rate of UART.
4. If the user profile is invalid, it will default to the factory default profile.

2.19. AT+CFUN Set Phone Functionality

AT+CFUN Set Phone Functionality

Test Command AT+CFUN=?	Response +CFUN: (list of supported <fun>s), (list of supported <rst>s) OK
Read Command AT+CFUN?	Response +CFUN: <fun> OK
Write Command AT+CFUN=<fun>[,<rst>]	Response OK If error is related to ME functionality: +CME ERROR: <err>

Maximum Response Time	15s, determined by network.
Reference GSM 07.07	

Parameter

<fun>	0	Minimum functionality
	<u>1</u>	Full functionality (Default)
	4	Disable phone from both transmitting and receiving RF signals
<rst>	<u>0</u>	Do not reset the ME before setting it to <fun> power level This is default when <rst> is not given
	1	Reset the ME before setting it to <fun> power level

Example

```

AT+CFUN=0 //Switch phone to minimum functionality
+CPIN: NOT READY

OK
AT+COPS?
+COPS: 0 //Not registered to any operator

OK
AT+CPIN?
+CME ERROR: 13 //SIM failure
AT+CFUN=1 //Switch phone to full functionality
OK

+CPIN: SIM PIN
AT+CPIN=1234
+CPIN: READY

OK

Call Ready
AT+CPIN?
+CPIN: READY

OK
AT+COPS?
+COPS: 0,0,"CHINA MOBILE" //Registered to an operator

OK

```


2.20. AT+QPOWD Power off

AT+QPOWD Power off

Write Command AT+QPOWD=<n>	Response When <n>=0 OK When <n>=1 NORMAL POWER DOWN
Maximum Response Time	300ms
Reference	

Parameter

<n>	0	Urgent power off (Do not send out URC "NORMAL POWER DOWN")
	1	Normal power off (Send out URC "NORMAL POWER DOWN")

Example

AT+QPOWD=0	
OK	//Urgent power off: returns OK
AT+QPOWD=1	
NORMAL POWER DOWN	//Normal power off: sends out URC "NORMAL POWER DOWN"

2.21. AT+CMEE Report Mobile Equipment Error

AT+CMEE Report Mobile Equipment Error

Test Command AT+CMEE=?	Response +CMEE: (list of supported <n>s) OK
Read Command AT+CMEE?	Response +CMEE: <n> OK
Write Command AT+CMEE=[<n>]	Response TA disables or enables the use of result code +CME ERROR: <err> as an indication of an error related to the functionality of the ME.

	OK
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<n>	0	Disable result code
	1	Enable result code and use numeric values
	2	Enable result code and use verbose values

Example

```

AT+CMEE=0 //Disable result code
OK
AT+CPIN=1234
ERROR //Only "ERROR" will be displayed
AT+CMEE=1 //Enable error result code with numeric values
OK
AT+CPIN=1234
+CME ERROR: 10
AT+CMEE=2 //Enable error result code with verbose (string)
values
OK
AT+CPIN=1234
+CME ERROR: SIM not inserted
    
```

2.22. AT+CSCS Select TE Character Set

AT+CSCS Select TE Character Set

Test Command AT+CSCS=?	Response +CSCS: (list of supported <chset>s) OK
Read Command AT+CSCS?	Response +CSCS: <chset> OK
Write Command AT+CSCS=<chset>	Response Set character set <chset> which is used by the TE. The TA

	can then convert character strings correctly between the TE and ME character sets. OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<chset>	"GSM"	GSM default alphabet
	"HEX"	Character strings consist only of hexadecimal numbers from 00 to FF
	"IRA"	International reference alphabet
	"PCCP437"	PC character set code
	"UCS2"	UCS2 alphabet
	"8859-1"	ISO 8859 Latin 1 character set

Example

```

AT+CSCS? //Query the current character set
+CSCS: "GSM"

OK
AT+CSCS="UCS2" //Set the character set to "UCS2"
OK
AT+CSCS?
+CSCS: "UCS2"

OK

```

2.23. AT+GCAP Request Complete TA Capabilities List

AT+GCAP Request Complete TA Capabilities List

Test Command AT+GCAP=?	Response OK
Execution Command AT+GCAP	Response TA reports a list of additional capabilities. +GCAP: <name> OK
Maximum Response Time	300ms

Reference
V.25ter

Parameter

<name>	+CGSM	GSM function is supported
	+FCLASS	FAX function is supported

Quectel
Confidential

3 Serial Interface Control Commands

3.1. AT&C Set DCD Function Mode

AT&C Set DCD Function Mode

Execution Command AT&C[<value>]	Response This parameter determines how the state of circuit 109 (DCD) relates to the detection of received line signal from the distant end. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	DCD line is always ON
	1	DCD line is ON only in the presence of data carrier

3.2. AT&D Set DTR Function Mode

AT&D Set DTR Function Mode

Execution Command AT&D[<value>]	Response This parameter determines how the TA responds when circuit 108/2 (DTR) is changed from ON to OFF condition during data mode. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	<u>0</u>	TA ignores status on DTR
	1	ON→OFF on DTR: Change to command mode while remaining the connected call
	2	ON→OFF on DTR: Disconnect data call, and then change to command mode. During state DTR=OFF, auto-answer is off

3.3. AT+ICF Set TE-TA Control Character Framing

AT+ICF Set TE-TA Control Character Framing	
Test Command AT+ICF=?	Response +ICF: (list of supported <format>s), (list of supported <parity>s) OK
Read Command AT+ICF?	Response +ICF: <format> , <parity> OK
Write Command AT+ICF=<format>[,<parity>]	Response This parameter setting determines the serial interface character framing format and parity received by TA from TE. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<format>	1	8 data 0 parity 2 stop
	2	8 data 1 parity 1 stop
	<u>3</u>	8 data 0 parity 1 stop
	4	7 data 0 parity 2 stop
	5	7 data 1 parity 1 stop
	6	7 data 0 parity 1 stop
<parity>	0	Odd
	1	Even
	2	Mark
	<u>3</u>	Space

NOTES

1. The command is applied for command state.
2. The **<parity>** field is ignored if the **<format>** field specifies no parity.

3.4. AT+IFC Set TE-TA Local Data Flow Control

AT+IFC Set TE-TA Local Data Flow Control

Test Command AT+IFC=?	Response +IFC: (list of supported <dce_by_dte> s), (list of supported <dte_by_dce> s) OK
Read Command AT+IFC?	Response +IFC: <dce_by_dte> , <dte_by_dce> OK
Write Command AT+IFC=<dce_by_dte>,<dte_by_dce>	Response This parameter setting determines the data flow control on the serial interface for data mode. OK
Maximum Response Time	300ms
Reference	V.25ter

Parameter

<dce_by_dte>	Specifies the method that will be used by TE when receiving data from TA
0	None
1	XON/XOFF
2	RTS flow control
<dte_by_dce>	Specifies the method that will be used by TA when receiving data from TE
0	None
1	XON/XOFF
2	CTS flow control

Example

```
AT+IFC=2,2 //Open the hardware flow control
OK
```


AT+IFC?

+IFC: 2,2

OK

3.5. AT+ILRR Set TE-TA Local Data Rate Reporting Mode

AT+ILRR Set TE-TA Local Data Rate Reporting Mode

Test Command AT+ILRR=?	Response +ILRR: (list of supported <value>s) OK
Read Command AT+ILRR?	Response +ILRR: <value> OK
Write Command AT+ILRR=[<value>]	Response This parameter setting determines whether or not an intermediate result code of local rate is reported when the connection is established. The rate is applied after the final result code of the connection is transmitted to TE. OK
Maximum Response Time	300ms
Reference	V.25ter

Parameter

<value>	0	Disables reporting of local port rate
	1	Enables reporting of local port rate

NOTE

If the <value> is set to 1, the following intermediate result will come out on connection to indicate the port rate settings.

+ILRR:<rate>

<rate> Port rate setting on call connection in Baud per second
300
1200
2400

4800
9600
14400
19200
28800
38400
57600
115200

3.6. AT+IPR Set TE-TA Fixed Local Rate

AT+IPR Set TE-TA Fixed Local Rate

Test Command AT+IPR=?	Response +IPR: (list of supported auto detectable <rate> s),(list of supported fixed-only <rate> s) OK
Read Command AT+IPR?	Response +IPR: <rate> OK
Write Command AT+IPR=<rate>	Response This parameter setting determines the data rate of the TA on the serial interface. After the delivery of any result code associated with the current command line, the rate set by the command takes effect. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<rate>	Baud rate per second <u>0</u> (Autobauding) 75 150 300 600 1200
---------------------	---

2400
4800
9600
14400
19200
28800
38400
57600
115200

NOTES

1. The default configuration of **AT+IPR** is adaptive baud rate enabled (**AT+IPR=0**).
2. If a fixed baud rate is set, make sure that both TE (DTE, usually external processor) and TA (DCE, Quectel GSM module) are configured to the same rate. If adaptive baud rate is enabled, the TA could automatically recognize the baud rate currently used by the TE after receiving “AT” or “at” string.
3. The value of **AT+IPR** cannot be restored with **AT&F** and **ATZ**, but it is still storable with **AT&W** and visible in **AT&V**.
4. In multiplex mode, the baud rate cannot be changed by the write command **AT+IPR=<rate>**, and the setting is invalid and not stored even if **AT&W** is executed after the write command.
5. A selected baud rate takes effect after the write commands are executed and acknowledged by “OK”.

Example

```

AT+IPR=115200 //Set fixed baud rate to 115200bps

OK
AT&W //Store current setting, that is, the serial
      communication speed is 115200bps after restart
      module

OK
AT+IPR?
+IPR: 115200

OK
    
```

3.6.1. Adaptive Baud Rate

To take advantage of adaptive baud rate mode, specific attention must be paid to the following requirements:

1. Adaptive baud rate synchronization between TE and TA.
 - Ensure that TE and TA are correctly synchronized and the baud rate used by the TE is detected

by the TA. The baud rate can be synchronized simply by use an “AT” or “at” string. This is necessary after customer activates adaptive baud rate or when customer starts up the module with adaptive baud rate enabled.

- It is recommended to wait for 2 to 3 seconds before sending the first “AT” or “at” string after the module is started up with adaptive baud rate enabled. Otherwise undefined characters might be returned.

2. Restriction on adaptive baud rate operation.

- The serial interface shall be used with 8 data bits, no parity and 1 stop bit (factory setting).
- The command “A” can’t be used.
- Only the string “AT” or “at” can be detected (either “AT” or “at”).
- URCs that may be issued before the TA detect a new baud rate by receiving the first AT character, and they will be sent at the previously detected baud rate.
- If TE’s baud rate is changed after TA has recognized the earlier baud rate, loss of synchronization between TE and TA would be encountered and an “AT” or “at” string must be re-sent by TE to regain synchronization on baud rate. To avoid undefined characters during baud rate resynchronization and the possible malfunction of resynchronization, it is not recommended to switch TE’s baud rate when adaptive baud rate is enabled. Especially, this operation is forbidden in data mode.

3. Adaptive baud rate and baud rate after restarting.

- In the adaptive baud rate mode, the detected baud rate is not saved. Therefore, resynchronization is required after restarting the module.
- Unless the baud rate is determined, an incoming CSD call can’t be accepted. This must be taken into account when adaptive baud rate and auto-answer mode (**ATS0#0**) are enabled at the same time, especially if SIM PIN 1 authentication is done automatically and the setting **ATS0#0** is stored to the user profile with **AT&W**.
- Until the baud rate is synchronized, URCs after restarting will not be output when adaptive baud rate is enabled.

4. Adaptive baud rate and multiplex mode.

If adaptive baud rate is active, it is not recommended to switch to multiplex mode.

5. Adaptive baud rate and Windows modem.

- The baud rate used by Windows modem can be detected while setting up a dial-up GPRS/CSD connection. However, some Windows modem drivers switch TE’s baud rate to default value automatically after the GPRS call is terminated. In order to prevent no response to the Windows modem when it happens, it is not recommended to establish the dial-up GPRS/CSD connection in adaptive baud rate mode.
- Based on the same considerations, it is also not recommended to establish the FAX connection in adaptive baud rate mode for PC FAX application, such as WinFax.

NOTE

To assure reliable communication and avoid any problem caused by undetermined baud rate between DCE and DTE, it is strongly recommended to configure a fixed baud rate and save it instead of using adaptive baud rate after start-up.

3.7. AT+CMUX Multiplexer Control

AT+CMUX Multiplexer Control	
Test Command AT+CMUX=?	Response +CMUX: (list of supported <mode>s), (<subset>s), (<port_speed>s),(<N1>s),(<T1>s),(<N2>s),(<T2>s),(<T3>s), (<k>s) OK
Read Command AT+CMUX?	Response +CMUX: <mode>,0,5,127,10,3,30,10,2 OK ERROR
Write Command AT+CMUX=[<mode>[,<subset>[,<port_speed>[,<N1>[,<T1>[,<N2>[,<T2>[,<T3>[,<k>]]]]]]]]]	Response OK +CME ERROR: <err>
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<mode>	Multiplexer transparency mechanism <u>0</u> Basic option
<subset>	The way by which the multiplexer control channel is set up <u>0</u> UIH frames used only
<port_speed>	Transmission rate <u>5</u> 115200bit/s
<N1>	Maximum frame size <u>127</u>
<T1>	Acknowledgement timer in a unit of ten milliseconds <u>10</u>

<N2>	Maximum number of re-transmissions <u>3</u>
<T2>	Response timer for the multiplexer control channel in a unit of ten milliseconds <u>30</u>
<T3>	Wake up response timers in seconds <u>10</u>
<k>	Window size, for advanced operation with Error Recovery options <u>2</u>

NOTES

1. Advanced option with Error Recovery options is not supported.
2. The multiplexing transmission rate is fixed according to the current serial baud rate. It is recommended to enable multiplexing protocol under 115200bps baud rate.
3. Multiplexer control channels are listed as follows:

Channel Number	Type	DLCI
None	Multiplexer Control	0
1	07.07 and 07.05	1
2	07.07 and 07.05	2
3	07.07 and 07.05	3
4	07.07 and 07.05	4

3.8. AT+QEAUART Configure Dual UART Function

AT+QEAUART Configure Dual UART Function	
Test Command AT+QEAUART=?	Response +QEAUART: (list of supported <mode>s) ,<debug port> OK
Read Command AT+QEAUART?	Response +QEAUART: <mode>,<debug port> OK ERROR
Write Command AT+QEAUART=<mode>,<debug port>	Response OK If error is related to ME functionality +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	<u>0</u>	Disable dual UART function
	1	Enable dual UART function
<mode>	<u>2</u>	Uart 2 as debug port
	99	No uart port used as debug port

NOTES

1. When dual UART function is enabled, the Debug UART port can be used to execute AT commands. About Debug UART port, please refer to *MC60 Hardware Design* document.
2. The Aux UART port cannot be used to execute data transmission-related AT commands. It is used for modem communication with MC60's embedded GNSS engine.

3.9. AT+QSEDCB Configure Parameters of the Dual UART

AT+QSEDCB Configure Parameters of the Dual UART	
Test Command AT+QSEDCB=?	Response +QSEDCB: (list of supported <baudrate>s), (list of supported <databits>s), (list of supported <stopbits>s), (list of supported <parity>s) OK
Read Command AT+QSEDCB?	Response +QSEDCB: <baudrate> , <databits> , <stopbits> , <parity> OK ERROR
Write Command AT+QSEDCB=<baudrate> , <databits> , <stopbits> , <parity>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<baudrate>	Baud rate
-------------------------	-----------

	1200
	2400
	4800
	9600
	14400
	19200
	28800
	38400
	57600
	<u>115200</u>
< databits >	Data bits
	5
	6
	7
	<u>8</u>
< stopbits >	Stop bits
	<u>1</u>
	2
	3
< parity >	Parity
	<u>0</u> None
	1 Odd
	2 Even
	3 Mark

NOTES

1. This command can be saved by **AT&W**.
2. When dual UART port function is enabled, the **AT+QSEDCB** command will be executed successfully; otherwise it will return an error.

4 Status Control Commands

4.1. AT+CEER Extended Error Report

AT+CEER Extended Error Report

Test Command AT+CEER=?	Response OK
Execution Command AT+CEER	Response TA returns an extended report of the reason for the last call release. +CEER: <locationID>,<cause> OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<locationID>	Location ID as number code. Location IDs are listed in Chapter 8.3.1 . Each ID is related with another table that contains a list of <cause> s.
<cause>	Reason for last call release as number code. The number codes are listed in several tables, sorted by different categories. The tables can be found proceeding from the Location ID given in Chapter 8.3.1 .

Example

```

AT+CEER //Query error reporting in normal state, return "No error"
+CEER: 0,0

OK
ATD10086;
OK
AT+CLCC
+CLCC: 1,0,0,0,0,"10086",129,""
    
```

OK

NO CARRIER

AT+CEER

//Established a call and the remote party hangs up the call
//Query error reporting, the <locationID>=1 means "Cause for protocol stack (PS) layer", <cause>=16 means "Normal call clearing"

+CEER: 1,16

OK

4.2. AT+CPAS Mobile Equipment Activity Status

AT+CPAS Mobile Equipment Activity Status

Test Command

AT+CPAS=?

Response

+CPAS: (list of supported <pas>s)

OK

Execution Command

AT+CPAS

Response

TA returns the activity status of ME.

+CPAS: <pas>

OK

If error is related to ME functionality:

+CME ERROR: <err>

Maximum Response Time

300ms

Reference

GSM 07.07

Parameter

<pas>	0	Ready
	2	Unknown (ME is not guaranteed to respond to instructions)
	3	Ringing
	4	Call in progress or call hold

Example

AT+CPAS

+CPAS: 0

//Module is idle

```

OK
ATD10086;
OK
AT+CLCC
+CLCC: 1,0,3,0,0,"10086",129,""

OK
AT+CPAS
+CPAS: 3 //An incoming call is ringing

OK
AT+CLCC
+CLCC: 1,0,0,0,0,"10086",129,""

OK
AT+CPAS
+CPAS: 4 //Call in progress

OK
    
```

4.3. AT+QINDRI Indicate RI When Using URC

AT+QINDRI Indicate RI When Using URC

Test Command AT+QINDRI=?	Response +QINDRI: (list of supported <status> s) OK
Read Command AT+QINDRI?	Response +QINDRI: <status> OK
Write Command AT+QINDRI=<status>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<status>	0	Off
	1	On

4.4. AT+QMOSTAT Show State of Mobile Originated Call

AT+QMOSTAT Show State of Mobile Originated Call

Test Command AT+QMOSTAT=?	Response +QMOSTAT: (list of supported <mode>s) OK
Read Command AT+QMOSTAT?	Response +QMOSTAT: <mode> OK
Write Command AT+QMOSTAT=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	0	Do not show call state of mobile originated call
	1	Show call state of mobile originated call. After dialing call numbers, the URC string of MO RING will be sent if the called party is alerted; and the URC string of MO CONNECTED will be sent if the call is established

Example

```

AT+QMOSTAT=1 //Show call state of mobile originated call
OK
ATD10086;
OK

MO RING //The called party is alerted

MO CONNECTED //The call is established
    
```

4.5. AT+QREFUSECS Refuse to Receive SMS/Incoming Call or Not

AT+QREFUSECS Refuse to Receive SMS/Incoming Call or Not

Test Command AT+QREFUSECS=?	Response +QREFUSECS: (list of supported <refuse_sms>),(list of supported <refuse_call>) OK
Read Command AT+QREFUSECS?	Response +QREFUSECS: <refuse_sms>,<refuse_call> OK
Write Command AT+QREFUSECS=<refuse_sms>[,<refuse_call>]	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<refuse_sms>	0	Receive the new SMS
	1	Refuse to receive the new SMS
<refuse_call>	0	Receive the incoming call
	1	Refuse to receive the incoming call

4.6. AT+QIURC Enable or Disable Initial URC Presentation

AT+QIURC Enable or Disable Initial URC Presentation

Test Command AT+QIURC=?	Response +QIURC: (list of supported <mode>s) OK
Read Command AT+QIURC?	Response +QIURC: <mode> OK
Write Command AT+QIURC=<mode>	Response OK

	ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	0	Disable URC presentation
	1	Enable URC presentation

NOTE

When the module powers on and initialization procedure is over. URC "Call Ready" will be presented if **<mode>** is 1.

4.7. AT+QEXTUNSOL Enable/Disable Proprietary Unsolicited

Indications

AT+QEXTUNSOL Enable/Disable Proprietary Unsolicited Indications

Test Command AT+QEXTUNSOL=?	Response +QEXTUNSOL: (list of supported <extunsol> s) OK
Write Command AT+QEXTUNSOL=<exunsol>,<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<extunsol>	String type. Values currently reserved by the present document
"SQ"	Signal Quality Report. Displays signal strength and channel bit error rate (similar to AT+CSQ) in form +CSQN: <rssi>, <ber> when values change.
"FN"	Forbidden network available only. When returning to a non-registered state, this indicates whether all the available PLMNs are forbidden.

"MW"	<p>SMS Message waiting. On receiving an SMS (as indicated by the +CMTI indication) the SMS is decoded and checked to see if it contains one or more of the message waiting indications (i.e. voicemail, email, fax, etc.). If so, an unsolicited indication is shown in the form for each message type: +QMWT: <store>,<index>,<voice>,<fax>,<email>,<other>, where <store> is the message store containing the SM; index is the message index and <voice>; <email>, <fax>, <other> contain the number of waiting messages (with '0' defined as clear indication, non-zero for one or more waiting messages) or blank for not specified in this message.</p>
"UR"	<p>Unsolicited result code. Produces an unsolicited indication in the following call state transition. Multiple notifications may occur for the same transition +QGURC: <event>, where <event> describes the current call state: <event>:</p> <ul style="list-style-type: none"> 0 Terminated active call, at least one held call remaining 1 Attempt to make an Mobile Originated Call 2 Mobile Originated Call has failed for some reason 3 Mobile Originated Call is ringing 4 Mobile Terminated Call is queued (Call waiting) 5 Mobile Originated Call now has been connected 6 Mobile Originated or Mobile Terminated Call has been disconnected 7 Mobile Originated or Mobile Terminated Call is hung up. 8 Mobile Originated Call dialed a non-emergency number in emergency mode 9 No answer for Mobile Originated Call 10 Remote number busy for Mobile Originated Call
"BC"	<p>Battery Charge. Displays battery connection status and battery charge level (similar to AT+CBC) in form +CBCN: <bcs>,<bcl> when values change.</p>
"BM"	<p>Band mode. Displays band mode (similar to AT+QBAND) in form +QBAND: <band> when value changes.</p>
"SM"	<p>Additional SMS Information. Displays additional information about SMS events in the form of unsolicited messages of the following format +TSMSINFO: <CMS error info> where <CMS error info> is a standard CMS error in the format defined by the AT+CMEE command i.e. either a number or a string.</p>
"CC"	<p>Call information. Displays the disconnected call ID and the remaining call numbers after one of the calls is disconnected. +CCINFO: <Call id disconnected>,<Remain calls></p>
<mode>	<ul style="list-style-type: none"> <u>0</u> Disable 1 Enable 2 Query

4.8. AT+QINISTAT Query State of Initialization

AT+QINISTAT Query State of Initialization

Test Command AT+QINISTAT=?	Response OK
Execution Command AT+QINISTAT	Response +QINISTAT: <state> OK
Maximum Response Time	300ms
Reference Quectel	

Parameter

<state>	0	No initialization
	1	Ready to execute AT command
	2	Phonebook has finished initialization
	3	SMS has finished initialization

NOTE

When **<state>** is 3, it also means initialization of SIM card related functions has been finished.

4.9. AT+QNSTATUS Query GSM Network Status

AT+QNSTATUS Query GSM Network Status

Test Command AT+QNSTATUS=?	Response OK
Execution Command AT+QNSTATUS	Response +QNSTATUS: <status> OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms

Reference
Quectel

Parameter

<status>	255	Not ready to retrieve network status
	0	Work in normal state
	1	No available cell
	2	Only limited service is available

4.10. AT+QNITZ Network Time Synchronization

AT+QNITZ Network Time Synchronization

Test Command AT+QNITZ=?	Response +QNITZ: (list of supported <enable> s) OK
Read Command AT+QNITZ?	Response +QNITZ: <enable> OK
Write Command AT+QNITZ=<enable>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<enable>	<u>0</u>	Disable to synchronize time from GSM network
	1	Enable to synchronize time from GSM network
	If the function is enabled, on receiving network time message, an unsolicited indication is shown in the form: " +QNITZ: <time>,<ds> "	
<time>	String type value. Format is "yy/MM/dd, hh:mm:ss±zz,ds", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range: -47...+48). E.g. 6th of May 2004, 22:10:00 GMT+2 hours equals to "04/05/06,22:10:00+08"	

<ds> Daylight Saving Time. When it is zero, the format will be "04/05/06,22:10:00+08,0"

NOTE

This function needs support of local GSM network. And the unsolicited also can be read by **AT+QLTS** command later.

4.11. AT+QLTS Obtain Latest Network Time Synchronized

AT+QLTS Obtain Latest Network Time Synchronized

Test Command AT+QLTS=?	Response OK
Execution Command AT+QLTS	Response +QLTS: <time>,<ds> OK If error is related to ME functionality: +CME ERROR: <err> Execution Command returns the latest time for network synchronization.
Maximum Response Time	300ms
Reference Quectel	

Parameter

<time>	String type value. Format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range: -47...+48). E.g. 6th of May 2004, 22:10:00 GMT+2 hours equals to "04/05/06,22:10:00+08"
<ds>	Daylight Saving Time. When it is zero, the format will be "04/05/06,22:10:00+08,0"

4.12. AT+CTZU Network Time Synchronization and Update the RTC Time

AT+CTZU Network Time Synchronization and Update the RTC Time

Test Command AT+CTZU=?	Response +CTZU: (list of supported <mode> s) OK
Read Command AT+CTZU?	Response +CTZU: <mode> OK
Write Command AT+CTZU=<mode>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	

Parameter

<mode>	<u>0</u>	Disable automatic update RTC time via NITZ.
	1	Update network synchronized time to RTC and save time zone into NVRAM.
	2	Update GMT time with time zone to RTC, save time zone into NVRAM, and ignore daylight saving time.
	3	Update localized time and time zone to RTC, and save time zone into NVRAM.
	4	Same with <mode>=2

NOTE

This function needs support of local GSM network. After setting the **AT+CTZU**, the value will be automatically saved into flash. After the module is restarted, it can also take effect.

4.13. AT+CTZR Network Time Synchronization Report

AT+CTZR Network Time Synchronization Report

Test Command AT+CTZR=?	Response +CTZR: (list of supported <mode> s) OK
Read Command AT+CTZR?	Response +CTZR: <mode> OK
Write Command AT+CTZR=<mode>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	

Parameter

<mode>	<u>0</u>	Disable time zone change event reporting
	1	Enable time zone change event reporting by unsolicited result code +CTZV: <tz>
	2	Enable extended time zone reporting by unsolicited result code +CTZE: <tz> , <dst> , [<time>]

NOTE

This function needs support of local GSM network. After setting the **AT+CTZU**, the value will be automatically saved into flash. The function takes effect after the module is restarted.

4.14. AT+QSIMDET Enable/Disable SIM Card Detection

AT+QSIMDET Enable/Disable SIM Card Detection

Test Command AT+QSIMDET=?	Response +QSIMDET: (list of supported <enable> s), (list of supported <insert_level> s), (list of supported <pin_choice> s)
-------------------------------------	--

	OK
Read Command AT+QSIMDET?	Response +QSIMDET: <enable>,<insert_level>,<pin_choice>
	OK
Write Command AT+QSIMDET=<enable>,<insert_level>,<pin_choice>	Response OK +CME ERROR: <err>
Maximum Response Time	300ms
Reference	

Parameter

<enable>	Enable/Disable SIM card detection function 0 Disable 1 Enable
<insert_level>	Configure Pin level when SIM card is inserted 0 Low level 1 High level
<pin_choice>	Configure SIM card detection pin 0 Configure SIM_PRESENCE as SIM card detection pin 1 Configure DTR as SIM card detection pin

NOTES

1. This command can be saved by **AT&W**.
2. The pin of SIM_PRESENCE and DTR are multiplexed in MC60, and MC60 only supports DTR pin as SIMCARD detection pin. If turning on the SIM detection function, it is recommended to set **<pin_choice>** to 1.

4.15. AT+QSIMSTAT SIM Inserted Status Reporting

AT+QSIMSTAT SIM Inserted Status Reporting

Test Command AT+QSIMSTAT=?	Response +QSIMSTAT: (list of supported <enable>s) OK
--------------------------------------	--

Read Command AT+QSIMSTAT?	Response +QSIMSTAT: <enable>,<insert_status> OK
Write Command AT+QSIMSTAT=<enable>	Response OK +CME ERROR: <err>
Maximum Response Time	300ms
Reference	

Parameter

<enable>	Indicates whether to show an unsolicited event code that indicates whether the SIM has been inserted or removed
0	Disable SIM card detection function
1	Enable SIM card detection function
<insert_status>	Indicates whether SIM card has been inserted
0	Low level of pin indicates SIM card is present
1	High level of pin indicates SIM card is present

NOTE

This command can be saved by **AT&W**.

4.16. AT+QCGTIND Circuit Switched Call or GPRS PDP Context Termination Indication

AT+QCGTIND Circuit Switched Call or GPRS PDP Context Termination Indication

Test Command AT+QCGTIND=?	Response +QCGTIND: (list of supported <n>s) OK
Read Command AT+QCGTIND?	Response +QCGTIND: <n> OK
Write Command	Response

AT+QCGTIND=<n>	OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	Quectel

Parameter

<n>	A numeric parameter which indicates whether to enable an unsolicited event code indicating whether a circuit switched voice call, circuit switched data call or GPRS session has been terminated <u>0</u> Disable 1 Enable
<type>	Connection type 0 Circuit switched voice call 1 Circuit switched data call 2 PPP connection

NOTE

When enabled, an unsolicited result code is returned after the connection has been terminated **+QCGTIND: <type>**.

Example

```

ATD10086;
OK
+QCGTIND: 0      //A circuit switched voice call has been terminated
NO CARRIER
    
```

5 SIM Related Commands

5.1. AT+CIMI Request International Mobile Subscriber Identity (IMSI)

AT+CIMI Request International Mobile Subscriber Identity (IMSI)

Test Command AT+CIMI=?	Response OK
Execution Command AT+CIMI	Response TA returns <IMSI> for identifying the individual SIM which is attached to ME. <IMSI> OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<IMSI> International Mobile Subscriber Identity (string without double quotes)

Example

```
AT+CIMI
460023210226023 //Query IMSI number of SIM which is attached to ME
OK
```


5.2. AT+CLCK Facility Lock

AT+CLCK Facility Lock	
Test Command AT+CLCK=?	Response +CLCK: (list of supported <fac> s) OK
Write Command AT+CLCK=<fac>,<mode>,<passwd>[,<class>]	Response This command is used to lock, unlock or interrogate the ME or the network facility <fac> . Password is normally needed to perform such actions. When querying the status of a network service (<mode>=2) the response line for 'not active' case (<status>=0) should be returned only if service is not active for any <class> . If <mode><2 and command is successful: OK If <mode>=2 and command is successful: +CLCK: <status>[,<class1>[<CR><LF> +CLCK: <status>, class2....]] OK
Maximum Response Time	5s
Reference	GSM 07.07

Parameter

<fac>	"PS"	PH-SIM (lock Phone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)
	"SC"	SIM (lock SIM card) (SIM asks password in ME power-up and when this lock command is issued)
	"AO"	BAOC (Bar All Outgoing Calls) (refer to GSM02.88[6] clause 1)
	"OI"	BOIC (Bar Outgoing International Calls) (refer to GSM02.88[6] clause 1)
	"OX"	BOIC-exHC (Bar Outgoing International Calls except to Home Country) (refer to GSM02.88[6] clause 1)
	"AI"	BAIC (Bar All Incoming Calls) (refer to GSM02.88[6] clause 2)
	"IR"	BIC-Roam (Bar Incoming Calls when Roaming outside the home country) (refer to GSM02.88 [6] clause 2)
	"AB"	All Barring services (refer to GSM02.30[19]) (applicable only for <mode>=0)

"AG"	All out Going barring services (refer to GSM02.30[19])(applicable only for <mode>=0)
"AC"	All in Coming barring services (refer to GSM02.30[19])(applicable only for <mode>=0)
"FD"	SIM fixed dialing memory: If the mobile is locked to "FD", only the phone numbers stored to the "FD" memory can be dialed
"PF"	Lock Phone to the very first SIM card
"PN"	Network Personalization (refer to GSM 02.22)
"PU"	Network subset Personalization (refer to GSM 02.22)
"PP"	Service Provider Personalization (refer to GSM 02.22)
"PC"	Corporate Personalization (refer to GSM 02.22)
<mode>	0 Unlock
	1 Lock
	2 Query status
<passwd>	Password
<class>	1 Voice
	2 Data
	4 FAX
	7 All telephony except SMS (Default)
	8 Short message service
	16 Data circuit sync
	32 Data circuit async
<status>	0 Off
	1 On

Example

```

AT+CLCK="SC",2
+CLCK: 0 //Query the status of SIM card lock: unlock
OK
AT+CLCK="SC",1,"1234" //Lock the SIM card, and the password is 1234
OK
AT+CLCK="SC",2
+CLCK: 1 //Query the status of SIM card lock: lock
OK
AT+CLCK="SC",0,"1234" //Unlock the SIM card
OK

```

5.3. AT+CPIN Enter PIN

AT+CPIN Enter PIN	
Test Command AT+CPIN=?	Response OK
Read Command AT+CPIN?	Response TA returns an alphanumeric string indicating whether or not some password is required. +CPIN: <code> OK
Write Command AT+CPIN=<pin>[,<new pin>]	Response TA stores a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.). If the PIN is to be entered twice, the TA shall automatically repeat the PIN. If no PIN request is pending, no action is taken and an error message, +CME ERROR , is returned to TE. If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <new pin> , is used to replace the old pin in the SIM OK
Maximum Response Time	5s
Reference	GSM 07.07

Parameter

<code>	READY	No further entry needed
	SIM PIN	ME is waiting for SIM PIN
	SIM PUK	ME is waiting for SIM PUK
	PH_SIM PIN	ME is waiting for phone to SIM card (antitheft)
	PH_SIM PUK	ME is waiting for SIM PUK (antitheft)
	SIM PIN2	PIN 2, e.g. it is possible to edit the FDN book only if preceding command was acknowledged with +CME ERROR:17
	SIM PUK2	Possible only if preceding command was acknowledged with error +CME ERROR: 18
<pin>	String type; password	
<new pin>	String type; if the PIN required is SIM PUK or SIM PUK2: new password	

Example

```

AT+CPIN?
+CPIN: SIM PIN //Query PIN code is locked

OK
AT+CPIN=1234 //PIN
+CPIN: READY

OK
AT+CPIN? //PIN has already been entered
+CPIN: READY

OK
AT+CPIN? //Query PUK code is locked
+CPIN: SIM PUK

OK
AT+CPIN="26601934","1234" //Enter PUK and new PIN password
+CPIN: READY

OK
AT+CPIN? //PUK has already been entered
+CPIN: READY

OK

```

5.4. AT+CPWD Change Password

AT+CPWD Change Password

Test Command AT+CPWD=?	Response TA returns a list of pairs which present the available facilities and the maximum length of their password. +CPWD: (list of supported <fac>s), (<pwdlength>s) OK
Write Command AT+CPWD=<fac>,<oldpwd>,<newpwd> >	Response TA sets a new password for the facility lock function. OK
Maximum Response Time	5s

Reference
GSM 07.07

Parameter

<fac>	<p>"PS" Phone locked to SIM (device code). The "PS" password may either be individually specified by the client or, depending on the subscription, supplied from the provider (e.g. with a prepaid mobile)</p> <p>"SC" SIM (lock SIM card) (SIM asks password in ME power-up and when this lock Command issued)</p> <p>"AO" BAOC (Bar All Outgoing Calls) (refer to GSM02.88[6] clause 1)</p> <p>"OI" BOIC (Bar Outgoing International Calls) (refer to GSM02.88[6] clause 1)</p> <p>"OX" BOIC-exHC (Bar Outgoing International Calls except to Home Country) (refer to GSM02.88[6] clause 1)</p> <p>"AI" BAIC (Bar All Incoming Calls) (refer to GSM02.88[6] clause 2)</p> <p>"IR" BIC-Roam (Bar Incoming Calls when Roaming outside the home country) (refer to GSM02.88 [6] clause 2)</p> <p>"AB" All Baring services (refer to GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"AG" All outgoing barring services (refer to GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"AC" All incoming barring services (refer to GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"FD" SIM fixed dialing memory feature</p> <p>"P2" SIM PIN2</p>
<pwdlength>	Integer. Max length of password
<oldpwd>	Password specified for the facility from the user interface or with command
<newpwd>	New password

Example

```

AT+CPIN?
+CPIN: READY

OK
AT+CPWD="SC","1234","4321"           //Change SIM card password to "4321"
OK
AT+CPIN?                             //Restart module or re-activate the SIM card, query PIN
                                       code is locked
+CPIN: SIM PIN

OK
AT+CPIN="4321"                       //PIN must be entered to define a new password "4321"
+CPIN: READY

```

OK

5.5. AT+CRSM Restricted SIM Access

AT+CRSM Restricted SIM Access

Test Command AT+CRSM=?	Response OK
Write Command AT+CRSM=<Command>[,<fileId>[,<P1>,<P2>,<P3>[,<data>]]]	Response +CRSM: <sw1>, <sw2> [,<response>] OK ERROR +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<Command>	176 READ BINARY 178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS All other values are reserved; refer to GSM 11.11
<fileId>	Integer type; this is the identifier for an elementary data file on SIM. Mandatory for every command except STATUS
<P1>,<P2>,<P3>	Integer type; parameters passed on by the ME to the SIM. These parameters are mandatory for every command, except GET RESPONSE and STATUS. The values are described in GSM 11.11.
<data>	Information which shall be written to the SIM (hexadecimal character format)
<sw1>,<sw2>	Integer type; information from the SIM about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command.
<response>	Response of a successful completion of the command previously issued (hexadecimal character format). STATUS and GET RESPONSE return data, which gives information about the current elementary data field. This information includes the type of file and its size (refer to GSM 11.11). After READ BINARY or READ RECORD command the requested data will be returned. The parameter is not returned after a successful UPDATE BINARY or UPDATE RECORD command.

Example

AT+CRSM=242

+CRSM: 145, 211, "000000007F10020000000000A13000C0400838A808A"

OK

//<sw1>=145, <sw2>=211, "000000007F10020000000000A13000C0400838A808A" is the content which is returned from SIM card (refer to GSM 11.11)

5.6. AT+CSIM Generic SIM Access

AT+CSIM Generic SIM Access

Test Command AT+CSIM=?	Response OK
Write Command AT+CSIM=<length>,<command>	Response +CSIM: <length>,<response> OK ERROR +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<length>	Integer type; length of characters sent to the TE in <command> or <response> (i.e. two times of octets in the raw data)
<command>	String type (string should be included in quotation marks); hex format: GSM11.11 SIM Command sent from the ME to the SIM
<response>	String type (string should be included in quotation marks); hex format: GSM11.11 SIM Command sent from the SIM to <command>

5.7. AT+QCSPWD Change PS Super Password

AT+QCSPWD Change PS Super Password

Test Command AT+QCSPWD=?	Response OK
------------------------------------	-----------------------

Write Command AT+QCSPWD=<oldpwd>,<newpwd>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<oldpwd>	String type. Old password and length should be 8
<newpwd>	String type. New password and length should be 8

NOTES

1. Default value of **<oldpwd>** is "12345678".
2. If the module is locked to a specific SIM card through **+CLCK** and password lost or SIM state is PH-SIM PUK, you can use the super password to unlock it.

5.8. AT+CCID Show CCID

AT+CCID Show CCID	
Test Command AT+CCID=?	Response OK
Execution Command AT+CCID	Response +CCID: <ccid data> OK
Maximum Response Time	300ms
Reference Quectel	

Parameter

<ccid data> CCID number for the current SIM card.

Example

```
AT+CCID //Query CCID of the SIM card
+CCID: "898600220909A0206023"

OK
```

5.9. AT+QCCID Show CCID

AT+QCCID Show CCID

Test Command AT+QCCID=?	Response OK
Execution Command AT+QCCID	Response ccid data OK
Maximum Response Time	300ms
Reference Quectel	

Example

```
AT+QCCID //Query CCID of the SIM card
898600220909A0206023

OK
```

5.10. AT+QGID Get SIM Card Group Identifier

AT+QGID Get SIM Card Group Identifier

Execution Command AT+QGID	Response +QGID: <gid1> <gid2> OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<gid1>	Integer type of SIM card group identifier 1
<gid2>	Integer type of SIM card group identifier 2

NOTE

If the SIM supports GID files, the GID values are returned. Otherwise **0xff** is returned.

5.11. AT+QSIMVOL Select SIM Card Operating Voltage

AT+QSIMVOL Select SIM Card Operating Voltage	
Test Command AT+QSIMVOL=?	Response +QSIMVOL: (list of supported <mode> s) OK
Read Command AT+QSIMVOL?	Response +QSIMVOL: <mode> OK
Write Command AT+QSIMVOL=<mode>	Response OK ERROR +CME ERROR: <err>
Maximum Response Time	300ms
Reference	Quectel

Parameter

<mode>	<u>0</u>	Recognize 1.8V and 3.0V SIM card (Default)
	1	Recognize 1.8V SIM card only
	2	Recognize 3.0V SIM card only

NOTE

AT+QSIMVOL can take effect only when the command is set successfully and after the module is restarted.

5.12. AT+QSPN Get Service Provider Name from SIM

AT+QSPN Get Service Provider Name from SIM

Read Command AT+QSPN?	Response +QSPN: (<spn>s), (list of supported <display mode>s) OK +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<spn>	String type; service provider name on SIM
<display mode>	0 Do not display PLMN. Already registered on PLMN 1 Display PLMN

NOTE

CME errors are possible if SIM is not inserted.

5.13. AT+QTRPIN Times Remain to Input SIM PIN/PUK

AT+QTRPIN Times Remain to Input SIM PIN/PUK

Execution Command AT+QTRPIN	Response Times remain to input SIM PIN. +QTRPIN: <chv1>,<chv2>,<puk1>,<puk2> OK
Maximum Response Time	300ms
Reference Quectel	

Parameter

<chv1>	Times remain to input chv1
--------	----------------------------

<chv2>	Times remain to input chv2
<puk1>	Times remain to input puk1
<puk2>	Times remain to input puk2

5.14. AT+QDSIM Dual SIM Switching

AT+QDSIM Dual SIM Switching

Test Command AT+QDSIM=?	Response +QDSIM: (list of supported <simslot>), OK
Read Command AT+QDSIM?	Response +QDSIM: <simslot> OK
Write Command AT+QDSIM=<simslot>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<simslot>	0	Switch to SIM card 1
	1	Switch to SIM card 2

NOTE

MC60 supports Dual SIM Single Standby function, and this command is used for switching between the two SIM cards.

6 Network Service Commands

6.1. AT+COPS Operator Selection

AT+COPS Operator Selection

<p>Test Command AT+COPS=?</p>	<p>Response</p> <p>TA returns a list of quadruplets, each representing an operator present in the network. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in the order of: home network, networks referenced in SIM, and other networks.</p> <p>+COPS: (list of supported<stat>, long alphanumeric <oper>, short alphanumeric <oper>, numeric <oper>s)[, (list of supported <mode>s), (list of supported <format>s)]</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>
<p>Read Command AT+COPS?</p>	<p>Response</p> <p>TA returns the current mode and the currently selected operator. If no operator is selected, <format> and <oper> are omitted.</p> <p>+COPS: <mode>[, <format>[, <oper>]]</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>
<p>Write Command AT+COPS=<mode>[, <format>[, <oper>]]</p>	<p>Response</p> <p>TA forces an attempt to select and register on the GSM network operator. If the selected operator is not available, no other operator shall be selected (except <mode>=4). The format of selected operator name shall apply to further read commands (+COPS?).</p> <p>OK</p>

	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	75s, determined by network.
Reference GSM 07.07	

Parameter

<stat>	0	Unknown
	1	Operator available
	2	Operator current
	3	Operator forbidden
<oper>	Operator in format as per <mode>	
<mode>	0	Automatic mode; <oper> field is ignored
	1	Manual operator selection; <oper> field shall be present
	2	Manual deregister from network
	3	Set only <format> (for read command +COPS?) – not shown in read command response
	4	Manual/automatic selected; if manual selection fails, automatic mode (<mode>=0) is entered
<format>	0	Long format alphanumeric <oper> ; can be up to 16 characters long
	1	Short format alphanumeric <oper>
	2	Numeric <oper> ; GSM Location Area Identification number

NOTES

- This write command is used to choose and register the GSM network operator. The setting of **<mode>** allows ME to determine whether automatic or manual network selection shall be used.
 - When **<mode>=0**, the ME searches for the operator which shall be used automatically.
 - When **<mode>=1**, the ME forces to register the selected **<oper>**. If the **<oper>** is invalid, the ME remains unregistered; until **<mode>=0**, the ME can register again. If restart module, the ME is still under **<mode>=1** and there is no RPLMN. The ME will also be Not Registered to Network condition, until the mode is changed via the command to automatic registration mode.
 - When **<mode>=4**, if the ME fails to register to this operator, then it starts to select another operator automatically.
- This command setting is saved to NVRAM automatically.

Example

```
AT+COPS=? //List all current network operators
+COPS: (2,"CHINA MOBILE","CMCC","46000"),(3,"CHINA UNICOM GSM","UNICOM","46001")
,,(0-4),(0-2)
```

```
OK
AT+COPS? //Query the currently selected network operator
+COPS: 0,0,"CHINA MOBILE"
OK
```

6.2. AT+CREG Network Registration

AT+CREG Network Registration	
Test Command AT+CREG=?	Response +CREG: (list of supported <n> s) OK
Read Command AT+CREG?	Response TA returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the ME. Location information elements <lac> and <ci> are returned only when <n>=2 and ME is registered in the network. +CREG: <n> , <stat> [, <lac> , <ci>] OK If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CREG=<n>	Response TA controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the ME network registration status. OK
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<n>	<u>0</u>	Disable network registration unsolicited result code
	1	Enable network registration unsolicited result code +CREG: <stat>
	2	Enable network registration unsolicited result code with location information
<stat>	0	Not registered, ME is not currently searching a new network to register on

1	Registered, home network
2	Not registered, but ME is currently searching a new network to register on
3	Registration denied
4	Unknown
5	Registered, roaming
<lac>	String type; two byte location area code in hexadecimal format
<ci>	String type; two byte cell ID in hexadecimal format

NOTE

Unsolicited result code

If <n>=1 and there is a change in the ME network registration status: **+CREG: <stat>**

If <n>=2 and there is a change in the ME network registration status or a change of the network cell:
+CREG: <stat>[,<lac>,<ci>]

Example

```

AT+CREG=1
OK

+CREG: 1 //URC reports that operator has been found
AT+CREG=2 //Activates extended URC mode
OK

+CREG: 1,"1878","0873" //URC reports that operator has been found with location
                        area code and cell ID
    
```

6.3. AT+CSQ Signal Quality Report

AT+CSQ Signal Quality Report

Test Command AT+CSQ=?	Response +CSQ: (list of supported <rssis>),(list of supported <bers>) OK
Execution Command AT+CSQ	Response +CSQ: <rssis>,<bers> OK +CME ERROR: <err> Execution Command returns received signal strength indication <rssis> and channel bit error rate <bers> from the

	ME. Test Command returns values supported by the TA.
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<rssi>	0	-113 dBm or less
	1	-111 dBm
	2...30	-109... -53 dBm
	31	-51 dBm or greater
	99	Not known or not detectable
<ber>	(in percent):	
	0...7	As RXQUAL values in the table in GSM 05.08 subclause 8.2.4
	99	Not known or not detectable

Example

```

AT+CSQ=?
+CSQ: (0-31,99),(0-7,99)

OK
AT+CSQ
+CSQ: 28,0 //Query and reports that the current signal strength indication is
              28 and the bit error rate is 0

OK

```

6.4. AT+CPOL Preferred Operator List

AT+CPOL Preferred Operator List

Test Command AT+CPOL=?	Response +CPOL: (list of supported <index>s),(list of supported <format>s) OK
Read Command AT+CPOL?	Response +CPOL: <index1> , <format> , <oper1> [<CR><LF>+CPOL: <index2> , <format> , <oper2> [...]]

	OK +CME ERROR: <err>
Write Command AT+CPOL=<index>[,<format>[,<oper>]]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<index>	1	Integer type: order number of operator in SIM preferred operator list
<format>	0	Long format alphanumeric <oper>
	1	Short format alphanumeric <oper>
	2	Numeric <oper>
<oper>	String type: <format> indicates either alphanumeric or numeric format is used (see +COPS command)	

NOTE

SIM card does not allow editing of the list of the preferred operators.

6.5. AT+COPN Read Operator Names

AT+COPN Read Operator Names	
Test Command AT+COPN=?	Response OK
Execution Command AT+COPN	Response +COPN: <numeric1>,<alpha1 > [<CR><LF>+COPN: <numeric2>,<alpha2> [...]] OK +CME ERROR: <err>
Maximum Response Time	300ms

Reference
GSM 07.07

Parameter

<numeric> String type: operator in numeric format (see **+COPS**)
<alphan> String type: operator in long alphanumeric format (see **+COPS**)

6.6. AT+QBAND Get and Set Mobile Operation Band

AT+QBAND Get and Set Mobile Operation Band

Test Command AT+QBAND=?	Response +QBAND: (list of supported <op_band> s) OK
Read Command AT+QBAND?	Response +QBAND: <op_band> OK
Write Command AT+QBAND=<op_band>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	30s, determined by network.
Reference Quectel	

Parameter

<op_band> "EGSM_MODE"
 "DCS_MODE"
 "PCS_MODE"
 "GSM850_MODE"
 "EGSM_DCS_MODE"
 "GSM850_PCS_MODE"
 "GSM850_EGSM_DCS_PCS_MODE"

NOTE

The following radio setting to be updated is stored in non-volatile memory.

6.7. AT+QENG Switch on or off Engineering Mode

AT+QENG Switch on or off Engineering Mode

<p>Test Command AT+QENG=?</p>	<p>Response +QENG: (list of supported <mode>s),(list of supported <dump>s) OK</p>
<p>Read Command AT+QENG?</p>	<p>Response The corresponding information is reported selectively according to <dump>. +QENG: <mode>,<dump> URCs of the serving cell information: +QENG: 0,<mcc>,<mnc>,<lac>,<cellid>,<bcch>,<bsic>,<dbm>,<c1>,<c2>,<txp>,<rla>,<tch>,<ts>,<maio>,<hsn><ta>,<rxq_sub>,<rxq_full> URCs of 1-6 neighboring cell information: [+QENG: 1,list of (<ncell>,<bcch>,<dbm>,<bsic>,<c1>,<c2>,<mcc>,<mnc>,<lac>,<cellid>)...] URCs of cell frequency list (CA) of the serving cell: [+QENG: 2,list of (<arfcn>)...] BA measured result list: [+QENG: 4,record number of the list, list of (<bcch>,<dbm>,<bsic>)] OK</p>
<p>Write Command AT+QENG=<mode>[,<dump>]</p>	<p>Response OK ERROR +CME ERROR: <err></p>
<p>Maximum Response Time</p>	<p>300ms</p>

Reference

Quectel

Parameter

<mode>	<u>0</u>	Switch off engineering mode
	1	Switch on engineering mode
	2	Switch on engineering mode, and activate the URC report of network information
<dump>	<u>0</u>	Only display the serving cell information
	1	Display the serving cell information, 1-6 neighboring cells information
	2	Display the serving cell information and list of serving cell carrier list
	3	Display the serving cell information,1-6 neighboring cell information and list of serving cell carrier list
	4	Display the serving cell information,1-6 neighboring cell information, list of serving cell carrier list and BA measured result list.
<mcc>		Mobile country code
<mnc>		Mobile network code
<lac>		Location area code in hex format
<cellid>		Cell ID in hex format
<bcch>		Absolute Radio Frequency Channel Number of Broadcast Control Channel (BCCH)
<bsic>		Base station identity code
<dbm>		Receive signal level in dBm unit
<c1>		C1 value
<c2>		C2 value
<txp>		Maximum TX power level when accessing on a CCH
<rla>		Minimum receiving level permitted to access the system
<ts>		TimeSlots
<maio>		MAIO value
<hsn>		HSN value
<tch>		ARFCN of TCH, 'h' figure hopping
<ta>		Timing Advance,range 0~63
<rxq_sub>		RX quality(sub), range 0-7
<rxq_full>		RX quality(full), range 0-7
<ncell>		Number of neighboring six cell ID 1~6
<arfcn>		Absolute radio frequency channel number

NOTE

The following radio settings to be updated are stored in non-volatile memory.

1. When mode is 2, auto URCs are reported per 5 seconds.
2. The **<lac>** and **<cellid>** parameters are available in hex format, and these parameters are in decimal.
3. If the cell information is not detected, the parameter is replaced by 'x' char.
4. If the detecting is not expert mode, parameters **<tch>**, **<ts>**, **<maio>**, **<hsn>**, **<ta>**, **<rxq_sub>** and

<rxq_full> will not display the parameter value while are replaced by 'x' char.

5. During the network connecting, if the hopping frequency is supported by the network, the channel of TCH is instable. Using the 'h' figure <tch> under this mode.
6. Under expert mode, when the <c1> and <c2> of the serving cell cannot be updated, using the '-1' figure to display the illegal value. At the same time, <txp> and <rla> parameters cannot be updated in a certain condition, all the same holding the value of idle mode. This is because ME cannot be updated in this mode. ME cannot update the selection of cell and reselection of the parameter. When the connecting is over, mobile device will go back to idle mode and offer the correct value.
7. If TA can report the information of the neighboring cell, the URCs of six neighboring cell should be reported. If some cells cannot be measured, the 'x' char will be filled in the parameter of these cells.
8. Under the special mode, <c1> and <c2> parameters of the neighboring cell may be measured, and then an unmeaning value will be reported. When <mcc>, <mnc>, <lac> and <cellid> parameters of the neighboring cell cannot be measured, the 'x' char will be filled in these parameters of all the six cells.
9. The command does not report the RX level and the RX quality. The "AT+CSQ" command can be used to query the values of RX level and RX quality.
10. The "AT+QSPCH" command can be used to re-query the type of the voice channel during calling (FR, HR, EFR, AMR_FR, AMR_HR).
11. The maximum record number of BA measured result list is 32. If any of the BCCH cannot get the BSIC value, the BSIC will show 'x' instead. The measured list only includes the measured BCCH in the BA list, not the whole BA list.

Example

Idle mode:

AT+QENG=2

OK

+QENG: 0,460,00,1806,2602,64,46,-72,119,119,5,8,x,x,x,x,x,x

Dedicated mode:

AT+QENG=2,3

OK

+QENG: 0,460,00,1806,2031,17,41,-73,-1,-1,5,8,h,7,0,24,1,0,1

+QENG:

1,1,17,-74,41,111,95,460,00,1806,2031,2,2,-74,45,110,94,460,00,1878,151,3,22,-77,40,100,84,460,00,1806,2012,4,24,-77,45,97,81,460,00,1806,2013,5,25,-81,40,83,67,460,00,1806,2032,6,532,-92,48,-1,-1,x,x,x,x

6.8. AT+QSCANF Scan Power of GSM Frequency

AT+QSCANF Scan Power of GSM Frequency

Test Command AT+QSCANF=?	Response +QSCANF: (list of supported <band> s),(list of supported <freq> s) OK
Write Command AT+QSCANF=<band>,<freq>	Response If <freq>=9999 and command is successful: +QSCANF: 1, CH113, -63.5 2, CH80, -64.2 4, CH22, -64.5 20, CH116, -74.2 OK If <freq> is fixed frequency and command is successful: +QSCANF: CH<freq>, <dbm> If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	Quectel

Parameter

<band>	0	BAND 900
	1	BAND 1800
	2	BAND 1900
	3	BAND 850
<freq>	9999	Scan all frequencies in a specified band
	0-1023	Scan a fixed frequency in a specified band
<dbm>		The signal strength indication in dbm value for a specified frequency

NOTE

Before using this AT command, RF function of system MUST be disabled. Please make sure CFUN state is 0 or 4. About how to change CFUN state, please refer to AT command **AT+CFUN**.

6.9. AT+QLOCKF Lock GSM Frequency

AT+QLOCKF Lock GSM Frequency

Test Command AT+QLOCKF=?	Response +QLOCKF: (list of supported <mode> s),(list of supported <band1900> s), (list of supported <arfcn> s) OK
Read Command AT+QLOCKF?	Response +QLOCKF: <status> OK
Write Command AT+QLOCKF=<mode>,<band1900>,<arfcn1>[,<arfcn2>[,<arfcn3>]]	Response OK ERROR +CME ERROR: <err>
Maximum Response Time	300ms
Reference	Quectel

Parameter

<mode>	<u>0</u>	Disable lock frequency
	1	Enable lock frequency
	2	Enable lock frequency and auto switch to saved frequency after powered on
<band1900>	0	Not a cell ID of 1900 band
	1	Cell ID of 1900 band
	2	Auto distinguish whether is a cell ID of 1900 band
<arfcn>	0-1024	ARFCN information
<status>	0	ME did not lock a certain ARFCN
	1	ME has locked a certain ARFCN

7 Call Related Commands

7.1. ATA Answer an Incoming Call

ATA Answer an Incoming Call

Execution Command ATA	Response TA sends off-hook to the remote station. Response in case of voice call, if successfully connected: OK Response if no connection: NO CARRIER
Maximum Response Time	1s, determined by network.
Reference V.25ter	

NOTES

1. Any additional commands on the same command line are ignored.
2. This command may be aborted generally by receiving a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.
3. See also **ATX**.

Example

```

RING //A voice call is ringing
AT+CLCC
+CLCC: 1,1,4,0,0,"02154450290",129,""

OK
ATA //Accept the voice call with ATA
OK
    
```

7.2. ATD Mobile Originated Call to Dial a Number

ATD Mobile Originated Call to Dial a Number

Execution Command ATD<n>[<mgsm>][;:]	Response This command can be used to set up outgoing voice, data or fax calls. It also serves to control supplementary services. If no dial tone and (parameter setting ATX2 or ATX4): NO DIALTONE If busy and (parameter setting ATX3 or ATX4): BUSY If a connection cannot be established: NO CARRIER If connection is successful and voice call: OK
Maximum Response Time	1s, determined by network.
Reference V.25ter	

Parameter

<n> String of dialing digits and optionally V.25ter modifiers
Dialing digits: **0-9, *, #, +, A, B, C**
Following V.25ter modifiers are ignored:
,(comma), T, P, !, W, @

Emergency call:

<n> Standardized emergency number 112 (no SIM needed)

<mgsm> String of **GSM** modifiers:

- I** Activates **CLIR** (Disables presentation of own number to called party)
- i** Deactivates **CLIR** (Enable presentation of own number to called party)
- G** Activates closed user group invocation for this call only
- g** Deactivates closed user group invocation for this call only

<;> Only required to set up voice call, return to command state

NOTES

1. This command may be aborted generally by receiving an **ATH** command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.
2. Parameter "l" and "i" are applicable for cases where there are no *# codes within the dial string.
3. **<n>** is the default value for last number that can be dialed by **ATDL**.
4. *# codes sent with **ATD** are treated as voice calls. Therefore, the command must be terminated with a semicolon ";".
5. See **ATX** command for setting result code and call monitoring parameters.
6. Responses returned after dialing with **ATD**
 - For voice call, two different responses modes can be determined. TA returns "OK" immediately either after dialing was completed or after the call was established. The setting is controlled by **AT+COLP**. Factory default is **AT+COLP=0**, which causes the TA returns "OK" immediately after dialing was completed; otherwise TA will returns "OK", "BUSY", "NO DIAL TONE", "NO CARRIER".
7. Using **ATD** during an active voice call:
 - When a user originates a second voice call while there is already an active voice call, the first call will be automatically put on hold.
 - The current states of all calls can be easily checked at any time by using the **AT+CLCC** command.

Example

```
ATD10086; //Dialing out the called party's number
OK
```

7.3. ATH Disconnect Existing Connection

ATH Disconnect Existing Connection

Execution Command ATH[n]	Response Disconnect existing call by local TE from command line and terminate call. OK
Maximum Response Time	90s, determined by network.
Reference V.25ter	

Parameter

<n>	0	Disconnect from line and terminate the call
-----	---	---

NOTE

OK is issued after circuit 109 (DCD) is turned off, if it was previously on.

7.4. +++ Switch from Data Mode to Command Mode

+++ Switch from Data Mode to Command Mode

Execution Command

+++

Response

This command is only available during TA is in data mode, such as, a GPRS connection and a transparent TCPIP connection. The “+++” character sequence causes the TA to cancel the data flow over the AT interface and switch to command mode. This allows you to enter AT command while maintaining the data connection with the remote server or, accordingly, the GPRS connection.

OK

Maximum Response Time

300ms

Reference

V.25ter

NOTES

- To prevent the “+++” escape sequence from being misinterpreted as data, it should comply to following sequence:
 - No characters entered for T1 time (0.5 seconds).
 - “+++” characters entered with no characters in between. For PPP online mode, the interval between two “+” MUST be less than 1 second and for a transparent TCPIP connection, the interval MUST be less than 20ms.
 - No characters entered for T1 time (0.5 seconds).
 - Switch to command mode, otherwise go to step 1.
- To return from command mode back to data or PPP online mode: Enter **ATO**
 - Another way to change to command mode is through DTR, see **AT&D** command for the details.

7.5. ATO Switch from Command Mode to Data Mode

ATO Switch from Command Mode to Data Mode

Execution Command ATO[n]	Response TA resumes the connection and switches back from command mode to data mode. If connection is not successfully resumed: NO CARRIER else TA returns to data mode from command mode CONNECT <text>
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n> 0 Switch from command mode to data mode

NOTE

TA returns to data mode from command mode **CONNECT <text>,<text>** only if parameter setting is X>0.

7.6. ATP Select Pulse Dialing

ATP Select Pulse Dialing

Execution Command ATP	Response OK
Maximum Response Time	300ms
Reference V.25ter	

NOTE

No effect in GSM.

7.7. ATSO Set Number of Rings before Automatically Answering Call

ATSO Set Number of Rings before Automatically Answering Call

Read Command ATSO?	Response <n> OK
Write Command ATSO=<n>	Response This parameter setting determines the number of rings before auto-answer. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	0	Automatic answering is disabled
	1-255	Enable automatic answering on the ring number specified

NOTE

If <n> is set too high, the calling party may hang up before the call can be answered automatically.

Example

```

ATSO=3 //Set three rings before automatically answering a call
OK

RING //Call coming
RING
RING //Automatically answering the call after three rings
    
```

7.8. ATS6 Set Pause before Blind Dialing

ATS6 Set Pause before Blind Dialing

Read Command ATS6?	Response <n>
------------------------------	-----------------

	OK
Write Command ATS6=<n>	Response OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n> 0-2-10 Number of seconds to wait before blind dialing

NOTE

No effect in GSM.

7.9. ATS7 Set Number of Seconds to Wait for Connection Completion

ATS7 Set Number of Seconds to Wait for Connection Completion

Read Command ATS7?	Response <n> OK
Write Command ATS7=<n>	Response This parameter setting determines the duration of time to wait for the connection completion in case of answering or originating a call. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n> 1-60-255 Number of seconds to wait for connection completion

NOTES

1. If the called party has specified a high value for **ATS0=<n>**, call setup may fail.
2. The correlation between **ATS7** and **ATS0** is important. For example: call may fail if **ATS7=30** and **ATS0=20**.
3. **ATS7** is only applicable to data call.

7.10. ATS8 Set the Number of Seconds to Wait for Comma Dial Modifier

ATS8 Set the Number of Seconds to Wait for Comma Dial Modifier

Read Command ATS8?	Response <n> OK
Write Command ATS8=<n>	Response OK
Maximum Response Time	300ms
Reference	V.25ter

Parameter

<n>	0	No pause when comma encountered in dial string
	1-2-255	Number of seconds to wait

NOTE

No effect in GSM.

7.11. ATS10 Set Disconnect Delay after Indicating the Absence of Data Carrier

ATS10 Set Disconnect Delay after Indicating the Absence of Data Carrier

Read Command ATS10?	Response <n>
-------------------------------	-----------------

	OK
Write Command ATS10=<n>	Response This parameter setting determines the amount of time that the TA will remain connected in absence of data carrier. If the data carrier is once more detected before disconnection, the TA remains connected. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n> 1-15-254 Number of delay in 100ms

7.12. ATT Select Tone Dialing

ATT Select Tone Dialing

Execution Command ATT	Response OK
Maximum Response Time	300ms
Reference V.25ter	

NOTE

No effect in GSM.

7.13. AT+CSTA Select Type of Address

AT+CSTA Select Type of Address

Test Command AT+CSTA=?	Response +CSTA: (list of supported <type>s) OK
----------------------------------	--

Read Command AT+CSTA?	Response +CSTA: <type> OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<type>	Current address type setting.
<u>129</u>	Unknown type (ISDN format number)
145	International number type (ISDN format)
161	National number type (ISDN format)

7.14. AT+CLCC List Current Calls of ME

AT+CLCC List Current Calls of ME

Test Command AT+CLCC=?	Response OK
Execution Command AT+CLCC	Response TA returns a list of current calls of ME. If command succeeds but no calls are available, no information response is sent to TE. [+CLCC: <id1>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>[, ""]] [<CR><LF>+CLCC: <id2>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>[, ""]] [...]]] OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<idx>	Integer type; call identification number as described in GSM 02.30 sub clause 4.5.5.1; this number can be used in +CHLD Command operations
<dir>	0 Mobile originated (MO) call 1 Mobile terminated (MT) call
<stat>	State of the call 0 Active 1 Held 2 Dialing (MO call) 3 Alerting (MO call) 4 Incoming (MT call) 5 Waiting (MT call)
<mode>	Bearer/tele service 0 Voice 1 Data 2 FAX 9 Unknown
<mpty>	0 Call is not one of multiparty (conference) call parties 1 Call is one of multiparty (conference) call parties
<number>	Phone number in string type in format specified by <type>
<type>	Type of address of octet in integer format 129 Unknown type (ISDN format number) 145 International number type (ISDN format)

Example

```
AT+CLCC
+CLCC: 1,0,0,0,0,"10086",129,"" //List the current call of ME
OK
```

7.15. AT+CR Service Reporting Control

AT+CR Service Reporting Control

Test Command AT+CR=?	Response +CR: (list of supported <mode> s) OK
Read Command AT+CR?	Response +CR: <mode>

	OK
Write Command AT+CR=[<mode>]	Response TA controls whether or not intermediate result code +CR: <serv> is returned from the TA to the TE when a call set up. OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<mode>	<u>0</u>	Disable
	1	Enable
<serv>	ASYNC	Asynchronous transparent
	SYNC	Synchronous transparent
	REL ASYNC	Asynchronous non-transparent
	REL SYNC	Synchronous non-transparent

NOTE

Intermediate result code:

If it is enabled, an intermediate result code is transmitted at a point during link negotiation. At the same time, the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. **CONNECT**) is transmitted.

7.16. AT+CRC Set Cellular Result Code for Incoming Call Indication

AT+CRC Set Cellular Result Code for Incoming Call Indication

Test Command AT+CRC=?	Response +CRC: (list of supported <mode> s) OK
Read Command AT+CRC?	Response +CRC: <mode> OK
Write Command AT+CRC=[<mode>]	Response TA controls whether or not the extended format of incoming

	call indication is used. OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<mode>	<u>0</u>	Disable extended format
	1	Enable extended format

NOTE

Unsolicited result code:

When it is enabled, an incoming call is indicated to the TE with unsolicited result code **+CRING: <type>** instead of the normal RING.

Parameter

<type>	ASYNC	Asynchronous transparent
	SYNC	Synchronous transparent
	REL ASYNC	Asynchronous non-transparent
	REL SYNC	Synchronous non-transparent
	FAX	Facsimile
	VOICE	Voice

Example

```

AT+CRIC=1 //Enable extended format
OK

+CRING: VOICE //Indicate an incoming call to the TE
ATH
OK
AT+CRIC=0 //Disable extended format
OK

RING //Indicate incoming call to the TE
ATH
OK
    
```

7.17. AT+CRLP Select Radio Link Protocol Parameter

AT+CRLP Select Radio Link Protocol Parameter

Test Command AT+CRLP=?	Response TA returns values supported. RLP (Radio Link Protocol) versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present). +CRLP: (list of supported <iws> s),(list of supported <mws> s),(list of supported <T1> s),(list of supported <N2> s),(list of supported <ver1> s),(list of supported <T4> s) OK
Read Command AT+CRLP?	Response TA returns current settings for RLP version. RLP versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present). +CRLP: <iws>,<mws>,<T1>,<N2>,<ver1>,<T4> OK
Write Command AT+CRLP=[<iws>[,<mws>[,<T1>[,<N2>[,<ver>[,<T4>]]]]]]	Response TA sets radio link protocol (RLP) parameters used when non-transparent data calls are set up. OK
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<iws>	0-61	Interworking window size (IWF to MS)
<mws>	0-61	Mobile window size (MS to IWF)
<T1>	39-255	Acknowledgment timer T1 in a unit of 10ms
<N2>	1-255	Retransmission attempts N2
<verx>	RLP	RLP version number in integer format. When version indication is not present, it shall equal to 0.
<T4>	3-255	Re-sequencing period in integer format, in a unit of 10ms

7.18. AT+CSNS Single Numbering Scheme

AT+CSNS Single Numbering Scheme	
Test Command AT+CSNS=?	Response +CSNS: (list of supported <mode>s) OK
Read Command AT+CSNS?	Response +CSNS: <mode> OK
Write Command AT+CSNS=[<mode>]	Response OK ERROR
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<mode>	0	Voice
	1	Alternating voice/fax, voice first
	2	FAX
	3	Alternating voice/data, voice first
	4	Data
	5	Alternating voice/fax, fax first
	6	Alternating voice/data, data first
	7	Voice followed by data

7.19. AT+CMOD Configure Alternating Mode Calls

AT+CMOD Configure Alternating Mode Calls	
Test Command AT+CMOD=?	Response +CMOD: (list of supported <mode>s) OK
Write Command AT+CMOD=[<mode>]	Response OK ERROR

Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<mode>	<u>0</u>	Single mode
	1	Alternating voice/fax
	2	Alternating voice/data
	3	Voice followed by data

7.20. AT+QSFR Preference Speech Coding

AT+QSFR Preference Speech Coding	
Test Command AT+QSFR=?	Response +QSFR: (list of supported <mode> s) OK
Read Command AT+QSFR?	Response +QSFR: <mode> OK
Write Command AT+QSFR=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	<u>0</u>	Automatic mode
	1	FR
	2	HR
	3	EFR
	4	AMR_FR
	5	AMR_HR
	6	FR and EFR, FR priority
	7	EFR and FR, EFR priority

8	EFR and HR, EFR priority
9	EFR and AMR_FR, EFR priority
10	AMR_FR and FR, AMR_FR priority
11	AMR_FR and HR, AMR_FR priority
12	AMR_FR and EFR, AMR_FR priority
13	AMR_HR and FR, AMR_HR priority
14	AMR_HR and HR, AMR_HR priority
15	AMR_HR and EFR, AMR_HR priority

MOTE

This setting is stored in the non-volatile memory and will be used whenever the module is powered up again.

7.21. AT+QSPCH Speech Channel Type Report

AT+QSPCH Speech Channel Type Report

Test Command AT+QSPCH=?	Response +QSPCH: (list of supported <mode>s) OK
Read Command AT+QSPCH?	Response +QSPCH: <mode>,<speech channel> OK
Write Command AT+QSPCH=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	0	Disable report speech channel type
	1	Enable report speech channel type
<speech channel>	0	NO SPEECH TCH
	1	FR
	2	HR

3	EFR
4	AMR_FR
5	AMR_HR

NOTE

URC **+QSPCH: <mode>,<speech channel>** will be indicated when speech channel type changes.

7.22. AT+QDISH Disable ATH

AT+QDISH Disable ATH

Test Command AT+QDISH=?	Response +QDISH: (list of supported <disableath>s) OK
Read Command AT+QDISH?	Response +QDISH: <disableath> OK
Write Command AT+QDISH=<disableath>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<disableath>	Disable ATH
<u>0</u>	Enable ATH command
1	Disable ATH command

8 SMS Commands

8.1. AT+CSMS Select Message Service

AT+CSMS Select Message Service

Test Command AT+CSMS=?	Response +CSMS: (list of supported <service> s) OK
Read Command AT+CSMS?	Response +CSMS: <service> , <mt> , <mo> , <bm> OK
Write Command AT+CSMS=<service>	Response +CSMS: <mt> , <mo> , <bm> OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<service>	<u>0</u>	GSM 03.40 and 03.41 [the syntax of SMS AT commands is compatible with GSM 07.05 Phase 2 version 4.7.0; Phase 2+ features which do not require new command syntax may be supported (e.g. correct routing of messages with new Phase 2+ data coding schemes)]
	128	SMS PDU mode - TPDU only used for ending/receiving SMSs
<mt>		Mobile Terminated Messages
	0	Type not supported
	1	Type supported
<mo>		Mobile Originated Messages

	0	Type not supported
	1	Type supported
<bm>		Broadcast Type Messages
	0	Type not supported
	1	Type supported

8.2. AT+CMGF Select SMS Message Format

AT+CMGF Select SMS Message Format

Test Command AT+CMGF=?	Response +CMGF: (list of supported <mode> s) OK
Read Command AT+CMGF?	Response +CMGF: <mode> OK
Write Command AT+CMGF=[<mode>]	Response TA sets parameter to denote which kind of I/O format of messages is used. OK
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<mode>	<u>0</u>	PDU mode
	1	Text mode

8.3. AT+CSCA SMS Service Center Address

AT+CSCA SMS Service Center Address

Test Command AT+CSCA=?	Response OK
Read Command AT+CSCA?	Response +CSCA: <sca> , <tosca>

	OK
Write Command AT+CSCA=<sca>[,<tosca>]	Response TA updates the SMSC address, through which mobile originated SMS are transmitted. In text mode, setting is used by sending and writing commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into <pdu> parameter equals zero. OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<sca>	GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <tosca>
<tosca>	Service center address format GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer to <todo>)

NOTE

The command writes the parameters in non-volatile memory.

Example

```
AT+CSCA="+8613800210500",145 //SMS service center address
OK
AT+CSCA? //Query SMS service center address
+CSCA: "+8613800210500",145
OK
```

8.4. AT+CPMS Preferred SMS Message Storage

AT+CPMS Preferred SMS Message Storage

Test Command AT+CPMS=?	Response +CPMS: (list of supported <mem1>s),(list of supported <mem2>s),(list of supported <mem3>s) OK
Read Command AT+CPMS?	Response +CPMS: <mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK
Write Command AT+CPMS=<mem1>[,<mem2>[,<mem3>]]	Response TA selects memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc. +CPMS: <used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<mem1>	Messages to be read and deleted from this memory storage "SM" SIM message storage "ME" Mobile Equipment message storage "MT" Sum of "SM" and "ME" storages
<mem2>	Messages will be written and sent to this memory storage "SM" SIM message storage "ME" Mobile Equipment message storage "MT" Sum of "SM" and "ME" storages
<mem3>	Received messages will be placed in this memory storage, if routing to PC is not set (" +CNMI ") "SM" SIM message storage "ME" Mobile Equipment message storage

	"MT" Sum of "SM" and "ME" storages
<usedx>	Integer type; Number of messages currently in <memx>
<totalx>	Integer type; Number of messages storable in <memx>

NOTE

The SIM and ME message storages offer maximum space for 50 and 10 messages, respectively. The SIM message storage is selected in priority.

Example

```
AT+CPMS="SM","SM","SM" //Set SMS message storage as "SM" (SIM)
+CPMS: 0,50,0,50,0,50

OK
AT+CPMS? //Query the current SMS message storage
+CPMS: "SM",0,50,"SM",0,50,"SM",0,50

OK
```

8.5. AT+CMGD Delete SMS Message

AT+CMGD Delete SMS Message

Test Command AT+CMGD=?	Response +CMGD: (list of supported <index>s),(list of supported <delflag>s) OK
Write Command AT+CMGD=<index>[,<delflag>]	Response TA deletes message from preferred message storage <mem1> location <index>. OK ERROR If error is related to ME functionality: +CMS ERROR:<err>
Maximum Response Time	300ms. Note: Operation of <delflag> depends on the storage of deleted messages.
Reference GSM 07.05	

Parameter

<index>	Integer type; value in the range of location numbers supported by the associated memory
<delflag>	0 Delete message specified in <index>
	1 Delete all read messages from <mem1> storage, leaving unread messages and stored mobile originated messages (whether sent or not) untouched
	2 Delete all read messages from <mem1> storage and sent mobile originated messages, leaving unread messages and unsent mobile originated messages untouched
	3 Delete all read messages from <mem1> storage, sent and unsent mobile originated messages, leaving unread messages untouched
	4 Delete all messages from <mem1> storage

Example

```
AT+CMGD=1 //Delete the message specified in <index>=1
OK
AT+CMGD=1,4 //Delete all messages from <mem1> storage
OK
```

8.6. AT+CMGL List SMS Messages from Preferred Storage

AT+CMGL List SMS Messages from Preferred Storage

Test Command AT+CMGL=?	Response +CMGL: (list of supported <stat> s) OK
Write Command AT+CMGL=<stat>[,<mode>]	Response TA returns messages with status value <stat> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'. 1) In text mode (+CMGF=1) and when the command is successful: for SMS-SUBMITs and/or SMS-DELIVERs: +CMGL: <index>,<stat>,<oa/da>,[<alpha>],[<scts>][,<tooa/toda>,<length>]<CR><LF><data>[<CR><LF> +CMGL: <index>,<stat>,<da/oa>,[<alpha>],[<scts>][,<tooa/toda>,<length>]<CR><LF><data>[...]

	<p>for SMS-STATUS-REPORTs:</p> <p>+CMGL: <index>,<stat>,<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> >[<CR><LF> +CMGL: <index>,<stat>,<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> >[...]]</p> <p>for SMS-COMMANDs:</p> <p>+CMGL: <index>,<stat>,<fo>,<ct>[<CR><LF> +CMGL: <index>,<stat>,<fo>,<ct>[...]]</p> <p>for CBM storage:</p> <p>+CMGL:<index>,<stat>,<sn>,<mid>,<page>,<pages><CR> ><LF><data>[<CR><LF> +CMGL: <index>,<stat>,<sn>,<mid>,<page>,<pages><CR><LF><d ata>[...]] OK</p> <p>2) In PDU mode (+CMGF=0) and when the command is successful:</p> <p>+CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu> ><CR><LF> +CMGL: <index>,<stat>,[alpha],<length><CR><LF><pdu>[...]] OK</p> <p>3) If error is related to ME functionality:</p> <p>+CMS ERROR: <err></p>
Maximum Response Time	300ms. Note: Operation of <stat> depends on the storage of listed messages.
Reference	GSM 07.05

Parameter

<stat>	<p>1) In text mode</p> <p>"REC UNREAD" Received unread messages</p> <p>"REC READ" Received read messages</p> <p>"STO UNSENT" Stored unsent messages</p>
---------------------	---

	"STO SENT"	Stored sent messages
	"ALL"	All messages
	2) In PDU mode	
	0	Received unread messages
	1	Received read messages
	2	Stored unsent messages
	3	Stored sent messages
	4	All messages
<mode>	<u>0</u>	Normal (default)
	1	Not change status of the specified SMS record
<alpha>	String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with command select TE character set +CSCS (see definition of this command in TS 07.07)	
<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in TS 07.07); type of address given by < toda >	
<data>	In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format: <ul style="list-style-type: none"> - if <dcs> indicates that GSM 03.38 default alphabet is used and <fo> indicates that GSM 03.40 is used: TP-User-Data-Header-Indication is not set - if TE character set other than "HEX" (refer to Command Select TE character set +CSCS in TS 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number [e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55)] - if <dcs> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number [e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)] In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format: <ul style="list-style-type: none"> - if <dcs> indicates that GSM 03.38 default alphabet is used: ME/TA converts GSM into the current character supported by TE - if TE character set other than "HEX" (refer to Command +CSCS in GSM 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number - if <dcs> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number 	
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)	
<index>	Integer type value in the range of location numbers supported by the associated memory	
<oa>	GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or	

	GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS in TS 07.07); type of address given by <tooa>
<pdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number [e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)]. In the case of CBS: GSM 03.41 TPDU in hexadecimal format
<scts>	GSM 03.40 TP-Service-Center-Time-Stamp in time-string format (refer to <dt>)
<toda>	GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default value is 145, otherwise default value is 129)
<tooa>	GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (refer to <toda>)

NOTE

If parameter is omitted, the command returns the list of SMS with "REC UNREAD" status.

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CMGL="ALL" //List all messages from message storage
+CMGL: 1,"STO UNSENT","", "",
This is a test from Quectel

+CMGL: 2,"STO UNSENT","", "",
This is a test from Quectel,once again.

OK

```

8.7. AT+CMGR Read SMS Message

AT+CMGR Read SMS Message

Test Command AT+CMGR=?	Response OK
Write Command AT+CMGR=<index>[,<mode>]	Response TA returns SMS message with location value <index> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'. 1) In text mode (+CMGF=1) and when the command is

	<p>executed successfully: for SMS-DELIVER: +CMGR: <stat>,<oa>,[<alpha>],[<scts>],[<tooa>,<fo>,<pid>,<dcsc>,<sca>,<tosca>,<length>]<CR><LF><data></p> <p>for SMS-SUBMIT: +CMGR: <stat>,<da>,[<alpha>],[<toda>,<fo>,<pid>,<dcsc>,<vp>],[<sca>,<tosca>,<length>]<CR><LF><data></p> <p>for SMS-STATUS-REPORTS: +CMGR: <stat>,<fo>,<mr>,[<ra>],[<tora>],[<scts>,<dt>,<st></p> <p>for SMS-COMMANDS: +CMGR: <stat>,<fo>,<ct>,[<pid>,[<mn>],[<da>],[<toda>],[<length>]<CR><LF><cdata>]</p> <p>for CBM storage: +CMGR: <stat>,<sn>,<mid>,<dcsc>,<page>,<pages><CR><LF><data></p> <p>2) In PDU mode (+CMGF=0) and when command is successful: +CMGR: <stat>,[<alpha>],[<length><CR><LF><pdu></p> <p>OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p>
Maximum Response Time	Depends on the length of message content.
Reference GSM 07.05	

Parameter

<index>	Integer type value in the range of location numbers supported by the associated memory
<mode>	0 Normal 1 Not change the status of the specified SMS record
<alpha>	String type alphanumeric representation of <da> or <oa> corresponding to the entry found

	in MT phonebook; implementation of this feature is manufacturer specific
<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda>
<data>	In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format <ul style="list-style-type: none"> - if <dcs> indicates that GSM 03.38 default alphabet is used and <fo> indicates that GSM 03.40 is used: TPUser-Data-Header-Indication is not set - if TE character set other than "HEX" (refer to command select TE character set +CSCS in TS 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number [e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55)] - if <dcs> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number [e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)] <p>In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format</p> <ul style="list-style-type: none"> - if <dcs> indicates that GSM 03.38 default alphabet is used: ME/TA converts GSM into the current character supported by TE - if TE character set other than "HEX" (refer to command +CSCS in GSM 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number - if <dcs> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number
<dcs>	Depending on the command or result code: GSM 03.38 SMS Data Coding Scheme (default value is 0), or Cell Broadcast Data Coding Scheme in integer format
<fo>	Depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default value is 17), SMS-STATUS-REPORT, or SMS-COMMAND (default value is 2) in integer format
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mid>	GSM 03.41 CBM Message Identifier in integer format
<oa>	GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <tooa>
<pdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number [e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)] In the case of CBS: GSM 03.41 TPDU in hexadecimal format

<pid>	GSM 03.40 TP-Protocol-Identifier in integer format (default value is 0)																		
<sca>	GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <tosca>																		
<scts>	GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer to <dt>)																		
<stat>	<table border="1"> <thead> <tr> <th>PDU mode</th> <th>Text mode</th> <th>Explanation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>"REC UNREAD"</td> <td>Received unread messages</td> </tr> <tr> <td>1</td> <td>"REC READ"</td> <td>Received read messages</td> </tr> <tr> <td>2</td> <td>"STO UNSENT"</td> <td>Stored unsent messages</td> </tr> <tr> <td>3</td> <td>"STO SENT"</td> <td>Stored sent messages</td> </tr> <tr> <td>4</td> <td>"ALL"</td> <td>All messages</td> </tr> </tbody> </table>	PDU mode	Text mode	Explanation	0	"REC UNREAD"	Received unread messages	1	"REC READ"	Received read messages	2	"STO UNSENT"	Stored unsent messages	3	"STO SENT"	Stored sent messages	4	"ALL"	All messages
PDU mode	Text mode	Explanation																	
0	"REC UNREAD"	Received unread messages																	
1	"REC READ"	Received read messages																	
2	"STO UNSENT"	Stored unsent messages																	
3	"STO SENT"	Stored sent messages																	
4	"ALL"	All messages																	
<toda>	GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default value is 145, otherwise default is 129)																		
<toa>	GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer to <toda>)																		
<tosca>	GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer to <toda>)																		
<vp>	Depending on SMS-SUBMIT <fo> setting: GSM 03.40 TP-Validity-Period either in integer format (default value is 167) or in time-string format (refer to <dt>)																		

Example

```

+CMTI: "SM",3 //Indicates that new message has been received and saved
                to <index>=3 of "SM"
AT+CMGR=3 //Read message
+CMGR: "REC UNREAD","+8615021012496","", "2010/09/25 15:06:37+32",145,4,0,241,"+8
613800210500",145,27
This is a test from Quectel

OK

```

8.8. AT+CMGS Send SMS Message

AT+CMGS Send SMS Message

Test Command AT+CMGS=?	Response OK
Write Command 1) In text mode (+CMGF=1): AT+CMGS=<da>[,<toda>]<CR> text is entered <ctrl-Z/ESC> ESC quits without sending	Response TA sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports) <scts> is returned. Values can be used to identify message upon

<p>2) In PDU mode (+CMGF=0): AT+CMGS=<length><CR> PDU is given <ctrl-Z/ESC></p>	<p>unsolicited delivery status report result code.</p> <p>1) In text mode (+CMGF=1) and when the command is sent successfully: +CMGS: <mr></p> <p>OK</p> <p>2) In PDU mode (+CMGF=0) and when the command is sent successfully: +CMGS: <mr></p> <p>OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p>
Maximum Response Time	120s, determined by network.
Reference GSM 07.05	

Parameter

<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda>
<toda>	GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format [when first character of <da> is + (IRA 43) default value is 145, otherwise default value is 129]
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mr>	GSM 03.40 TP-Message-Reference in integer format

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CMGS="15021012496"
> This is a test from Quectel //Enter in text, <CTRL+Z> send message, <ESC> quits
without sending
+CMGS: 247
OK

```


8.9. AT+CMGW Write SMS Message to Memory

AT+CMGW Write SMS Message to Memory

Test Command AT+CMGW=?	Response OK
Write Command 1) In text mode (+CMGF=1): AT+CMGW[=<oa/da>[,<tooa/toda>[,<stat>]]] <CR> text is entered <ctrl-Z/ESC> <ESC> quits without sending 2) In PDU mode (+CMGF=0): AT+CMGW=<length>[,<stat>]<CR> PDU is given <ctrl-Z/ESC>	Response TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> also allows other status values to be given. If writing is successful: +CMGW: <index> OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<oa>	GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <tooa>		
<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda>		
<tooa>	GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer to <toda>)		
<toda>	GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format [when first character of <da> is + (IRA 43) default value is 145, otherwise default value is 129] 129 Unknown type (ISDN format number) 145 International number type (ISDN format)		
<stat>	PDU mode	Text mode	Explanation
	0	"REC UNREAD"	Received unread messages
	1	"REC READ"	Received read messages
	2	"STO UNSENT"	Stored unsent messages
	3	"STO SENT"	Stored sent messages

	4	"ALL"	All messages
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)		
<pdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number [e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)]		
	In the case of CBS: GSM 03.41 TPDU in hexadecimal format		
<index>	Index of message in selected storage <mem2>		

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CMGW="15021012496"
> This is a test from Quectel //Enter in text, <CTRL+Z> write message, <ESC> quits
                                without sending
+CMGW: 4
OK

```

8.10. AT+CMSS Send SMS Message from Storage

AT+CMSS Send SMS Message from Storage

Test Command	Response
AT+CMSS=?	OK
Write Command	Response
AT+CMSS=<index>[,<da>[,<toda>]]	<p>TA sends message with location value <index> from message storage <mem2> to the network (SMS-SUBMIT). If new recipient address <da> is given, it shall be used instead of the one stored with the message. Reference value <mr> is returned to the TE on successful message delivery. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) In text mode (+CMGF=1) and when the command is sent successfully:</p> <p>+CMSS: <mr> [,<scts>]</p>
	OK

	<p>2) In PDU mode (+CMGF=0) and the command is sent successfully; +CMSS: <mr> [,<ackpdu>]</p> <p>OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p>
Maximum Response Time	120s, determined by network.
Reference	
GSM 07.05	

Parameter

<index>	Integer type value in the range of location numbers supported by the associated memory
<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda>
<toda>	GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format [when first character of <da> is + (IRA 43) default value is 145, otherwise default value is 129]
<mr>	GSM 03.40 TP-Message-Reference in integer format
<scts>	GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer to <dt>)
<ackpdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number [e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)]. In the case of CBS: GSM 03.41 TPDU in hexadecimal format

8.11. AT+CMGC Send SMS Command

AT+CMGC Send SMS Command

Test Command AT+CMGC=?	Response OK
Write Command 1) In text mode (+CMGF=1): AT+CMGC=<fo>[,<ct>,<pid>,<mn>,<da>,<toda>]<CR> text is entered <ctrl-Z/ESC>	Response TA transmits SMS command message from a TE to the network (SMS-COMMAND). Message reference value <mr> is returned to the TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code.

ESC quits without sending	1) In text mode(+CMGF=1) and when the command is sent successfully: +CMGC: <mr> [,<scts>]
2) In PDU mode (+CMGF=0): AT+CMGC=<length><CR> PDU is given <ctrl-Z/ESC>	OK
	2) In PDU mode(+CMGF=0) and when the command is sent successfully: +CMGC: <mr> [,<ackpdu>]
	OK
	3) If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference	GSM 07.05

Parameter

<fo>	First octet of GSM 03.40 SMS-COMMAND (default value is 2) in integer format
<ct>	GSM 03.40 TP-Command-Type in integer format (default value is 0)
<pid>	GSM 03.40 TP-Protocol-Identifier in integer format (default value is 0)
<mn>	GSM 03.40 TP-Message-Number in integer format
<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda>
<toda>	GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format [when first character of <da> is + (IRA 43) default value is 145, otherwise default value is 129] 129 Unknown type (ISDN format number) 145 International number type (ISDN format)
<length>	Integer type value indicating in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mr>	GSM 03.40 TP-Message-Reference in integer format
<scts>	GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer to <dt>)
<ackpdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number [e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)]. In the case of CBS: GSM 03.41 TPDU in hexadecimal format

8.12. AT+CNMI New SMS Message Indications

AT+CNMI New SMS Message Indications

Test Command AT+CNMI=?	Response +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s) OK
Read Command AT+CNMI?	Response +CNMI: <mode>,<mt>,<bm>,<ds>,<bfr> OK
Write Command AT+CNMI=[<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]]	Response TA selects the procedure on how the received new messages from the network are indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), receiving message should be done as specified in GSM 03.38. OK If error is related to ME functionality: ERROR
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<mode>	0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications
	1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE
	2	Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE
	3	Forward unsolicited result codes directly to the TE. Use specified TA-TE link technique to transmit both result codes and data to TE when TA is in on-line data mode

<mt>	<p>(The rules for storing received SMS depend on its data coding scheme [refer to GSM 03.38 [2]], preferred memory storage (+CPMS) setting and this value]:</p> <p>0 No SMS-DELIVER indications are routed to the TE</p> <p>1 If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE by using unsolicited result code: +CMTI: <mem>,<index></p> <p>2 SMS-DELIVERs (except class 2) are routed directly to the TE using unsolicited result code: +CMT: [<i><alpha></i>],<length><CR><LF><pdu> (PDU mode enabled) or +CMT: <oa> , [<i><alpha></i>],<scts> [<i><tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length></i>]<CR><LF><data> (Text mode enabled; about parameters in italics, refer to Command Show Text Mode Parameters +CSDH). Class 2 messages result in indication as defined in <mt>=1</p> <p>3 Class 3 SMS-DELIVERs are routed directly to TE by using unsolicited result codes defined in <mt>=2. Messages of other classes result in indication as defined in <mt>=1</p>
<bm>	<p>(The rules for storing received CBMs depend on its data coding scheme [refer to GSM 03.38 [2]], the setting of Select CBM Types (+CSCB) and this value]:</p> <p>0 No CBM indications are routed to the TE</p> <p>2 New CBMs are routed directly to the TE by using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled) or +CBM: <sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data> (Text mode enabled)</p> <p>3 Class 3 CBMs are routed directly to TE by using unsolicited result codes defined in <bm>=2. If CBM storage is supported, messages of other classes result in indication as defined in <bm>=1</p>
<ds>	<p>0 No SMS-STATUS-REPORTs are routed to the TE</p> <p>1 SMS-STATUS-REPORTs are routed to the TE by using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled) or +CDS: <fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st> (Text mode enabled)</p>
<bfr>	<p>0 TA buffer of unsolicited result codes defined in this command is flushed to the TE when <mode> 1...3 is entered (OK response shall be given before flushing the codes)</p> <p>1 TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1...3 is entered</p>

NOTE

Unsolicited result code

+CMTI: <mem>,<index>	Indicates that new message has been received
+CMT: [<i><alpha></i>],<length><CR><LF><pdu>	Short message is output directly
+CBM: <length><CR><LF><pdu>	Cell broadcast message is output directly

Example

```

AT+CMGF=1 //Set SMS message format as text mode
OK
AT+CSCS="GSM" //Set character set as GSM which is used by the TE
OK
AT+CNMI=2,1 //SMS-DELIVER is stored into ME/TA, indication of the
memory location is routed to the TE
OK
+CMTI: "SM",5 //Indicate that new message has been received
AT+CNMI=2,2 //Set SMS-DELIVERs are routed directly to the TE
OK
+CMT: "+8615021012496"," ", "2010/09/25 17:25:01+32",145,4,0,241,"+8613800210500",145,27
This is a test from Quectel //Short message is output directly
    
```

8.13. AT+CRES Restore SMS Settings

AT+CRES Restore SMS Settings

Test Command AT+CRES=?	Response +CRES: (list of supported <profile>s) OK
Write Command AT+CRES[=<profile>]	Response TA restores SMS settings from non-volatile memory to active memory. A TA can contain several profiles of settings. Settings specified in commands service center address +CSCA , set message parameters +CSMP and select cell broadcast message types +CSCB (if implemented) are restored. Certain settings may not be supported by the storage (e.g. SIM SMS parameters) and therefore cannot be restored. OK If error is related to ME functionality: ERROR
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<profile> 0-3 Manufacturer specific profile number where settings are to be stored

8.14. AT+CSAS Save SMS Settings

AT+CSAS Save SMS Settings	
Test Command AT+CSAS=?	Response +CSAS: (list of supported <profile> s) OK
Write Command AT+CSAS[=<profile>]	Response TA saves active message service settings to non-volatile memory. A TA can contain several profiles of settings. Settings specified in commands service center address +CSCA , Set Message Parameters +CSMP and Select cell broadcast message Types +CSCB (if implemented) are saved. Certain settings may not be supported by the storage (e.g. SIM SMS parameters) and therefore cannot be saved. OK If error is related to ME functionality: ERROR
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<profile> 0-3 Manufacturer specific profile number where settings are to be stored

8.15. AT+CSCB Select Cell Broadcast SMS Messages

AT+CSCB Select Cell Broadcast SMS Messages	
Test Command AT+CSCB=?	Response +CSCB: (list of supported <mode> s)

	OK
Read Command AT+CSCB?	Response +CSCB: <mode>,<mids>,<dcss>
	OK
Write Command AT+CSCB=<mode>[,<mids>[,<dcss>]]	Response TA selects which types of CBMs are to be received by the ME. OK If error is related to ME functionality: +CMS ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<mode>	0	Message types specified in <mids> and <dcss> are accepted
	1	Message types specified in <mids> and <dcss> are not accepted
<mids>	String type; all different possible combinations of CBM message identifiers (refer to <mid>) (default is empty string) e.g. "0,1,5,320-478,922"	
<dcss>	String type; all different possible combinations of CBM data coding schemes (refer to <dcs>) (default is empty string) e.g. "0-3,5"	

NOTE

The command writes the parameters in non-volatile memory.

8.16. AT+CSDH Show SMS Text Mode Parameters

AT+CSDH Show SMS Text Mode Parameters

Test Command AT+CSDH=?	Response +CSDH: (list of supported <show>s)
	OK
Read Command	Response

AT+CSDH?	+CSDH: <show>
	OK
Write Command AT+CSDH=<show>]	Response TA determines whether detailed header information is shown in text mode result codes. OK
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<show>	<u>0</u>	Do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dcs>) nor <length>, <toda> or <tooa> in +CMT , +CMGL , +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode
	1	Show the values in result codes

Example

```

AT+CSDH=0
OK
AT+CMGR=3
+CMGR: "REC READ","+8615021012496",,"2010/09/25 15:06:37+32"
This is a test from Quectel

OK
AT+CSDH=1
OK
AT+CMGR=3
+CMGR: "REC READ","+8615021012496",,"2010/09/25 15:06:37+32",145,4,0,241,"+861
3800210500",145,27
This is a test from Quectel

OK

```

8.17. AT+CSMP Set SMS Text Mode Parameters

AT+CSMP Set SMS Text Mode Parameters

Test Command AT+CSMP=?	Response +CSMP: (list of supported <fo> s), (list of supported <vp> s), (list of supported <pid> s), (list of supported <dc> s) OK
Read Command AT+CSMP?	Response +CSMP: <fo> , <vp> , <pid> , <dc> OK
Write Command AT+CSMP=[<fo>[,<vp>[,<pid>[,<dc>]]]	Response TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text mode is selected (+CMGF=1). It is possible to set the validity period starting from when the SM is received by the SMSC (<vp> is in range 0... 255) or define the absolute time of the validity period termination (<vp> is a string). OK
Maximum Response Time	300ms
Reference GSM 07.05	

Parameter

<fo>	Depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default value is 17), SMS-STATUS-REPORT, or SMS-COMMAND (default value is 2) in integer format. SMS status report is supported under text mode if <fo> is set to 49
<vp>	Depending on SMS-SUBMIT <fo> setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer to <dt>)
<pid>	GSM 03.40 TP-Protocol-Identifier in integer format (default value is 0)
<dc>	GSM 03.38 SMS Data Coding Scheme in Integer format

NOTE

The command writes the parameters in NON-VOLATILE memory.

8.18. AT+QCLASS0 Store Class 0 SMS to SIM when Receiving Class 0 SMS

AT+QCLASS0 Store Class 0 SMS to SIM when Receiving Class 0 SMS

Test Command AT+QCLASS0=?	Response +QCLASS0: (list of supported <mode>s) OK
Read Command AT+QCLASS0?	Response +QCLASS0: <mode> OK
Write Command AT+QCLASS0=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	<u>0</u>	Disable storing Class 0 SMS when receiving Class 0 SMS
	1	Enable storing Class 0 SMS when receiving Class 0 SMS

Example

```
// When in text mode:
AT+CPMS?
+CPMS: "SM",6,50,"SM",6,50,"SM",6,50

OK
AT+QCLASS0=0 //Disable storing SMS when receiving Class 0 SMS
OK

+CMT: "+8615021012496",,"2010/09/26 09:55:37+32"
TEST1 from Quectel //Short message is output directly
AT+QCLASS0=1 //Enable storing SMS when receiving Class 0 SMS
OK

+CMTI: "SM",7 //Indicate that new message has been received
AT+CMGR=7
```

```
+CMGR: "REC UNREAD","+8615021012496","", "2010/09/26 09:56:17+32"
TEST2 from Quectel

OK
```

8.19. AT+QMGDA Delete All SMS

AT+QMGDA Delete All SMS

Test Command AT+QMGDA=?	Response +QMGDA: (listed of supported <type>s) OK
Write Command AT+QMGDA=<type>	Response OK ERROR +CME ERROR: <err>
Maximum Response Time	Depends on the storage of deleted messages.
Reference Quectel	

Parameter

<type>	1) In text mode: "DEL READ" Delete all read messages "DEL UNREAD" Delete all unread messages "DEL SENT" Delete all sent SMS "DEL UNSENT" Delete all unsent SMS "DEL INBOX" Delete all received SMS "DEL ALL" Delete all SMS 2) In PDU mode: 1 Delete all read messages 2 Delete all unread messages 3 Delete all sent SMS 4 Delete all unsent SMS 5 Delete all received SMS 6 Delete all SMS
---------------------	---

8.20. AT+QSMSCODE Configure SMS Code Mode

AT+QSMSCODE Configure SMS Code Mode

Test Command AT+QSMSCODE=?	Response +QSMSCODE: (list of supported <mode>s) OK
Read Command AT+QSMSCODE?	Response +QSMSCODE: <mode> OK
Write Command AT+QSMSCODE=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	0	Code mode according with NOKIA
	<u>1</u>	Code mode according with SIEMENS
	2	Code mode according with NOKIA, and hexadecimal 0x11 treated as " _ " hexadecimal 0x02 treated as "\$"

9 Phonebook Commands

9.1. AT+CPBS Select Phonebook Memory Storage

AT+CPBS Select Phonebook Memory Storage

Test Command AT+CPBS=?	Response +CPBS: (list of supported <storage>s) OK
Read Command AT+CPBS?	Response +CPBS: <storage>[,<used>,<total>] OK
Write Command AT+CPBS=<storage>	Response TA selects current phone book memory storage, which is used by other phone book commands. OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<storage>	"MC"	ME missed (unanswered) calls list
	"RC"	ME received calls list
	"DC"	ME dialed calls list (+CPBW may not be applicable or this storage)(same as LD)
	"LA"	Last Number All list (LND/LNM/LNR)
	"ME"	ME phonebook
	"BN"	SIM barred dialed number
	"SD"	SIM service dial number
	"VM"	SIM voice mailbox
	"FD"	SIM fix dialing-phone book
	"LD"	SIM last-dialing-phone book
	"ON"	SIM (or ME) own numbers (MSISDNs) list
	"SM"	SIM phonebook

<used>	Integer type value indicating the total number of used locations in selected memory
<total>	Integer type value indicating the total number of locations in selected memory

NOTE

SIM phonebook record can store up to 250pcs and ME phonebook record can store up to 100pcs.

9.2. AT+CPBW Write Phonebook Entry

AT+CPBW Write Phonebook Entry

Test Command AT+CPBW=?	Response TA returns location range supported by the current storage, the maximum length of <number> field, supported number formats of the storage, and the maximum length of <text> field. +CPBW: (The range of supported <index>s), <nlength>, (list of supported <type>s), <tlength> OK
Write Command AT+CPBW=<index>[,<number>[,<type>e][,<text>]]]	Response TA writes phone book entry in location number <index> in the current phone book memory storage selected with +CPBS . Entry fields written are phone number <number> (in the format <type>) and text <text> associated with the number. If those fields are omitted, phone book entry is deleted. If <index> is left out, but <number> is given, entry is written to the first free location in the phone book. OK
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<nlength>	Maximum length of phone number
<tlength>	Maximum length of text for number
<index>	Location number
<number>	Phone number
<type>	Type of number

129	Unknown type (ISDN format number)
145	International number type (ISDN format)
<text>	Text for phone number in current TE character set specified by +CSCS

NOTES

1. If the current memory storage is "MC", "RC", "DC", "LA" or "LD", <number>, <type> and <text> parameters must be default. **AT+CPBW** command only supports settings <index> delete the number of current phone book.
2. <number> can't be empty.
3. The following characters in <text> must be entered via the escape sequence:

GSM char	Seq.Seq.(hex)	Note
\	\5C 5C 35 43	(backslash)
"	\22 5C 32 32	(string delimiter)
BSP	\08 5C 30 38	(backspace)
NULL	\00 5C 30 30	(GSM null)

'0' (GSM null) may cause problems for application layer software when reading string lengths.

Example

```
AT+CSCS="GSM"
```

```
OK
```

```
AT+CPBW=10,"15021012496",129,"QUECTEL"
```

```
OK
```

```
//Make a new phonebook entry at location 10
```

```
AT+CPBW=10
```

```
//Delete entry at location 10
```

```
OK
```

9.3. AT+CPBR Read Current Phonebook Entries

AT+CPBR Read Current Phonebook Entries

Test Command

```
AT+CPBR=?
```

Response

TA returns location range supported by the current storage as a compound value and the maximum lengths of <number> and <text> fields.

+CPBR: (list of supported <index>s),<nlength>,<tlength>

OK

Write Command

```
AT+CPBR=<index1>[,<index2>]
```

Response

TA returns phone book entries in location number range <index1>... <index2> from the current phone book memory storage selected with **+CPBS**. If <index2> is left out, only

	location <index1> is returned. +CPBR: <index1>, <number>, <type>, <text> [<CR><LF>+CPBR:+CPBR: <index2>, <number>, <type>, <text>]
	OK
Maximum Response Time	300ms. Note: Operation of <index2> depends on the storage of read phonebook entries.
Reference	
GSM 07.07	

Parameter

<index>	Location number
<nlength>	Maximum length of phone number
<tlength>	Maximum length of name for number
<index1>	The first phone book record to read
<index2>	The last phonebook record to read
<number>	Phone number
<type>	Type of number
<text>	Text name for phone number in current TE character set specified by +CSCS

Example

```
AT+CSCS="GSM"
OK
AT+CPBR=10 //Query phone book entries in location 10
+CPBR: 10,"15021012496",129,"QUECTEL"
OK
```

9.4. AT+CPBF Find Phonebook Entries

AT+CPBF Find Phonebook Entries

Test Command AT+CPBF=?	Response +CPBF: <nlength>, <tlength> OK
Write Command AT+CPBF=[<findtext>]	Response TA returns phone book entries (from the current phone book memory storage selected with +CPBS) which contain

	<p>alphanumeric string <findtext>. [+CPBF: <index1>, <number>, <type>, <text>[[...]] <CR><LF>+CBPF: <index2>, <number>, <type>, <text>]</p> <p>OK</p>
Maximum Response Time	Depends on the storage of phonebook entries.
Reference GSM 07.07	

Parameter

<findtext>	String type field of maximum length <tlength> in current TE character set specified by +CSCS .
<index1>	Integer type values in the range of location numbers of phone book memory
<index2>	Integer type values in the range of location numbers of phone book memory
<number>	Phone number in string type of format <type>
<type>	Type of address octet in integer format: 129 Unknown type (ISDN format number) 145 International number type (ISDN format)
<text>	String type field of maximum length <tlength> in current TE character set specified by +CSCS
<nlength>	Integer type value indicating the maximum length of field <number>
<tlength>	Integer type value indicating the maximum length of field <text>

9.5. AT+CNUM Subscriber Number

AT+CNUM Subscriber Number	
Test Command AT+CNUM=?	Response OK
Execution Command AT+CNUM	Response +CNUM: [<alpha1>],<number1>,<type1> [<CR><LF>+CNUM: [<alpha2>],<number2>,<type2> [...]] OK +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<alphax>	Optional alphanumeric string associated with <numberx> ; used character set should be the one selected with command. Select TE character set +CSCS
<numberx>	Phone number in string type of format specified by <typex>
<typex>	Type of address octet in integer format (refer to GSM 04.08 subclause 10.5.4.7)

Quectel
Confidential

10 GPRS Commands

10.1. AT+CGATT Attach to/Detach from GPRS Service

AT+CGATT Attach to/Detach from GPRS Service

Test Command AT+CGATT=?	Response +CGATT: (list of supported <state>s) OK
Read Command AT+CGATT?	Response +CGATT: <state> OK
Write Command AT+CGATT=<state>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	75s, determined by network.
Reference GSM 07.07	

Parameter

<state>	Indicates the state of GPRS attachment
0	Detached
1	Attached
Other values are reserved and will result in an ERROR response to the Write Command	

Example

```

AT+CGATT=1 //Attach to GPRS service
OK
AT+CGATT=0 //Detach from GPRS service
OK
    
```

```
AT+CGATT? //Query the current GPRS service state
+CGATT: 0
OK
```

10.2. AT+CGDCONT Define PDP Context

AT+CGDCONT Define PDP Context

Test Command AT+CGDCONT=?	Response +CGDCONT: (range of supported <cid>s), <PDP_type>, <APN>, <PDP_addr>, (list of supported <data_comp>s), (list of supported <head_comp>s) OK
Read Command AT+CGDCONT?	Response +CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp> <CR><LF>+CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp> ... OK
Write Command AT+CGDCONT=<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp>[,<h_comp>]]]]]	Response OK ERROR
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

- <cid>** (PDP Context Identifier) a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of permitted values (minimum value=1) is returned by the test form of the command
- <PDP_type>** (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol X25 ITU-T/CCITT X.25 layer 3 IP Internet Protocol (IETF STD 5) OSPFH Internet Hosted Octet Stream Protocol PPP Point to Point Protocol (IETF STD 51)

- <APN>** (Access Point Name) a string parameter that is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested
- <PDP_addr>** A string parameter identifies the MT in the address space applicable to the PDP. If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. The allocated address may be read using the **+CGPADDR** command
- <d_comp>** A numeric parameter that controls PDP data compression
0 Off (default if value is omitted)
Other values are reserved
- <h_comp>** A numeric parameter that controls PDP header compression
0 Off (default if value is omitted)
Other values are reserved

Example

```
AT+CGDCONT=1,"IP","CMNET" //Define PDP context, <cid>=1,
                           <PDP_type>=IP,<APN>=CMNET
OK
```

10.3. AT+CGQREQ Quality of Service Profile (Requested)

AT+CGQREQ Quality of Service Profile (Requested)

Test Command AT+CGQREQ=?	Response +CGQREQ: <PDP_type> ,(list of supported <precedence> s), (list of supported <delay> s),(list of supported <reliability> s), (list of supported <peak> s),(list of supported <mean> s) OK
Read Command AT+CGQREQ?	Response +CGQREQ: <cid> , <precedence> , <delay> , <reliability> , <peak> , <mean > <CR><LF>+CGQREQ: <cid> , <precedence> , <delay> , <reliability> , <peak> , <mean > ...
Write Command AT+CGQREQ=<cid> , <precedence> , <delay> , <reliability> , <peak> , <mean	Response OK

>]]]]]	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	
GSM 07.07	

Parameter

<cid> A numeric parameter which specifies a particular PDP context definition (see **+CGDCONT** command)

The following parameter are defined in GSM 03.60

<precedence> A numeric parameter which specifies the precedence class

<delay> A numeric parameter which specifies the delay class

<reliability> A numeric parameter which specifies the reliability class

<peak> A numeric parameter which specifies the peak throughput class

<mean> A numeric parameter which specifies the mean throughput class

10.4. AT+CGQMIN Quality of Service Profile (Minimum Acceptable)

AT+CGQMIN Quality of Service Profile (Minimum Acceptable)	
Test Command AT+CGQMIN=?	Response +CGQMIN: <PDP_type> , (list of supported <precedence> s), (list of supported <delay> s), (list of supported <reliability> s), (list of supported <peak> s), (list of supported <mean> s) OK
Read Command AT+CGQMIN?	Response +CGQMIN: <cid> , <precedence> , <delay> , <reliability> , <peak> , <mean> > <CR><LF>+CGQMIN: <cid> , <precedence> , <delay> , <reliability> , <peak> , <mean> > ... OK
Write Command AT+CGQMIN=<cid> [, <precedence>][, <delay>][, <reliability>][, <peak>][, <mean>]]]]]	Response OK If error is related to ME functionality:

	+CME ERROR: <err>
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<cid> A numeric parameter which specifies a particular PDP context definition (see **+CGDCONT** command)

The following parameters are defined in GSM 03.60.

<precedence> A numeric parameter which specifies the precedence class
<delay> A numeric parameter which specifies the delay class
<reliability> A numeric parameter which specifies the reliability class
<peak> A numeric parameter which specifies the peak throughput class
<mean> A numeric parameter which specifies the mean throughput class

10.5. AT+CGACT PDP Context Activate or Deactivate

AT+CGACT PDP Context Activate or Deactivate

Test Command AT+CGACT=?	Response +CGACT: (list of supported <state> s) OK
Read Command AT+CGACT?	Response +CGACT: <cid>,<state>[<CR><LF>+CGACT:<cid><state>...] OK
Write Command AT+CGACT=<state>[,<cid>]	Response OK NO CARRIER If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	150s, determined by network.
Reference	GSM 07.07

Parameter

<state>	Indicates the state of PDP context activation 0 Deactivated 1 Activated Other values are reserved and will result in an ERROR response to the Write Command
<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command). The default value is 1.

NOTE

If context is deactivated successfully, NO CARRIER is returned.

Example

```
AT+CGDCONT=1,"IP","CMNET" //Define PDP context
OK
AT+CGACT=1,1 //Activated PDP
OK
AT+CGACT=0,1 //Deactivated PDP
NO CARRIER
```

10.6. AT+CGDATA Enter Data State

AT+CGDATA Enter Data State

Test Command AT+CGDATA=?	Response +CGDATA: (list of supported <L2P>s) OK
Write Command AT+CGDATA=<L2P>[,<cid>[,<cid>[,...]]]	Response OK NO CARRIER If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<L2P>	A string parameter that indicates the layer 2 protocol to be used between the TE and MT: PPP - Point to Point protocol for a PDP such as IP Other values are not supported and will result in an ERROR response to the execution command
<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)

10.7. AT+CGPADDR Show PDP Address

AT+CGPADDR Show PDP Address

Test Command AT+CGPADDR=?	Response +CGPADDR: (list of defined <cid> s) OK
Write Command AT+CGPADDR=<cid>	Response +CGPADDR: <cid> [, <PDP_addr>] OK ERROR
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)
<PDP_addr>	A string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined. For a dynamic address it will be the one assigned during the last PDP context activation that used the context definition referred to <cid> . <PDP_address> is omitted if none is available

NOTE

This command dictates the behaviour of PPP in the ME but not that of any other GPRS-enabled foreground layer, e.g. browser.

Example

```

AT+CGDCONT=1,"IP","CMNET" //Define PDP context
OK
AT+CGACT=1,1 //Activated PDP
OK
AT+CGPADDR=1 //Show PDP address
+CGPADDR: 1,"10.76.51.180"
OK
    
```

10.8. AT+CGCLASS GPRS Mobile Station Class

AT+CGCLASS GPRS Mobile Station Class	
Test Command AT+CGCLASS=?	Response +CGCLASS: (list of supported <class>s) OK
Read Command AT+CGCLASS?	Response +CGCLASS: <class> OK
Write Command AT+CGCLASS=<class>	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	30s, determined by network.
Reference GSM 07.07	

Parameter

<class>	A string parameter which indicates the GPRS mobile class (Functionality in descending order)
"B"	Class B
"CG"	Class C in GPRS only mode
"CC"	Class C in circuit switched only mode

10.9. AT+CGEREP Control Unsolicited GPRS Event Reporting

AT+CGEREP Control Unsolicited GPRS Event Reporting

Test Command AT+CGEREP=?	Response +CGEREP: (list of supported <mode> s) OK
Read Command AT+CGEREP?	Response +CGEREP: <mode> OK
Maximum Response Time	300ms
Write Command AT+CGEREP=<mode>	Response OK ERROR
Reference GSM 07.07	

Parameter

<mode>	<u>0</u>	Buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest one can be discarded. No codes are forwarded to the TE
	1	Discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE

NOTE

Unsolicited Result Codes supported:

+CGEV: NW DEACT **<PDP_type>**, **<PDP_addr>**[**<cid>**]

+CGEV: ME DEACT **<PDP_type>**, **<PDP_addr>**[**<cid>**]

+CGEV: NW DETACH

+CGEV: ME CLASS **<class>**

Parameters

<PDP_type> Packet Data Protocol type (see **+CGDCONT** command)

<PDP_addr> Packet Data Protocol address (see **+CGDCONT** command)

<cid> Context ID (see **+CGDCONT** command)

<class> GPRS mobile class (see **+CGCLASS** command)

10.10. AT+CGREG Network Registration Status

AT+CGREG Network Registration Status

Test Command AT+CGREG=?	Response +CGREG: (list of supported <n>s) OK
Read Command AT+CGREG?	Response +CGREG: <n>,<stat>[,<lac>,<ci>] OK
Write Command AT+CGREG=[<n>]	Response OK ERROR
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<n>	0	Disable network registration unsolicited result code
	1	Enable network registration unsolicited result code +CGREG:<stat>
	2	Enable network registration and location information unsolicited result code +CGREG: <stat>[,<lac>,<ci>]
<stat>	0	Not registered, ME is not currently searching a new operator to register to
	1	Registered, home network
	2	Not registered, but ME is currently searching a new operator to register to
	3	Registration denied
	4	Unknown
<lac>	5	Registered, roaming
	String type; two byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)	
<ci>	String type; two bytes cell ID in hexadecimal format	

NOTE

For parameter state, options of 0 and 1 are supported only.

Example

```

AT+CGATT=0
NO CARRIER

+CGREG: 0,"1878","0873"
AT+CGATT=1
OK

+CGREG: 2,"1878","0873"

+CGREG: 1,"1878","0873"
    
```

10.11. AT+CGSMS Select Service for MO SMS Messages

AT+CGSMS Select Service for MO SMS Messages

Test Command AT+CGSMS=?	Response +CGSMS: (list of currently available <service>s) OK
Read Command AT+CGSMS?	Response +CGSMS: <service> OK
Write Command AT+CGSMS=[<service>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<service>	A numeric parameter which indicates the service or service preference to be used
0	GPRS
1	Circuit switch
2	GPRS preferred (use circuit switched if GPRS is not available)
3	Circuit switch preferred (use GPRS if circuit switched is not available)

NOTE

The circuit switched service route is the default method.

10.12. AT+QGPCLASS Change GPRS Multi-slot Class

AT+QGPCLASS Change GPRS Multi-slot Class

Test Command AT+QGPCLASS=?	Response MULTISLOT CLASS: (list of currently available <class>s) OK
Read Command AT+QGPCLASS?	Response MULTISLOT CLASS: <class> OK
Write Command AT+QGPCLASS=<class>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<class> GPRS multi-slot class
1-12 Default value is 12

NOTE

The command takes effect after the module is restarted.

11 TCPIP Commands

11.1. AT+QIOPEN Start up TCP or UDP Connection

AT+QIOPEN Start up TCP or UDP Connection

Test Command AT+QIOPEN=?	Response +QIOPEN: (list of supported <mode> s),(IP address range),(port) <CR><LF> +QIOPEN: (list of supported <mode> s),(domain name),(port) OK
Write Command AT+QIOPEN=[<index>,<mode>,<IP address>/<domain name>,<port>	Response If format is right, respond: OK Otherwise respond: ERROR If the connection has already existed, respond: ALREADY CONNECT And then if connection is successful, respond: [<index>,<mode>] CONNECT OK Otherwise respond: [<index>,<mode>] CONNECT FAIL
Maximum Response Time	75s, determined by network.
Reference Quectel	

Parameter

<index>	A numeric indicates which socket opens the connection. MC60 supports at most 6 sockets at the same time. This parameter is necessary only if AT+QIMUX was set as 1 (refer to AT+QIMUX). When AT+QIMUX was set as 0, the parameter MUST be
----------------------	---

	omitted
<mode>	A string parameter which indicates the connection type
	"TCP" Establish a TCP connection
	"UDP" Establish a UDP connection
<IP address>	A string parameter that gives the address of the remote server in dotted decimal style.
<port>	The port of the remote server
	0-65535
<domain name>	A string parameter which represents the domain name address of the remote server

NOTES

1. This command is allowed to establish a TCP/UDP connection only when the state is IP INITIAL, IP STATUS or IP CLOSE. So it is necessary to process "AT+QIDEACT" or "AT+QICLOSE" before establishing a TCP/UDP connection with this command when the state is not IP INITIAL, IP STATUS or IP CLOSE.
2. If AT+QIMUX was set as 0 and the current state is CONNECT OK, which means the connection channel is used, it will reply "ALREADY CONNECT" after issuing the Write Command.

11.2. AT+QISEND Send Data through TCP or UDP Connection

AT+QISEND Send Data through TCP or UDP Connection	
Test Command AT+QISEND=?	Response +QISEND: <length> OK
Execution Command AT+QISEND response"> ", then type data to send, tap CTRL+Z to send, tap ESC to cancel the operation	Response This command is used to send changeable length data. If connection is not established or disconnected: ERROR If sending succeeds: SEND OK If sending fails: SEND FAIL
Write Command 1) When AT+QIMUX=0 AT+QISEND=<length> 2) When AT+QIMUX=1 AT+QISEND=<index>[,<length>]	Response This command is used to send fixed-length data or send data on the given socket (defined by <index>). If connection is not established or disconnected: ERROR If sending succeeds: SEND OK If sending fails:

	SEND FAIL
Maximum Response Time	300ms
Reference Quectel	

Parameter

<index>	The index of the socket for sending data. This parameter is necessary only if AT+QIMUX was set as 1 (refer to AT+QIMUX). When AT+QIMUX was set as 0, the parameter MUST be omitted
<length>	A numeric parameter which indicates the length of data to be sent, it MUST be less than 1460

NOTES

1. This command is used to send data on the TCP or UDP connection that has been established already. 'Ctrl+Z' is used as a termination symbol. ESC is used to cancel sending data.
2. The maximum length of the data to input at a time is 1460.
3. There are at most 1460 bytes that can be sent each time.
4. Only send data at the status of connection, otherwise respond with ERROR.
5. SEND OK means the data have been put into the send window to send rather than it has received the ACK message for the data from the remote node. To check whether the data has been sent to the remote node, it is necessary to execute the command **AT+QISACK** to query it.

11.3. AT+QICLOSE Close TCP or UDP Connection

AT+QICLOSE Close TCP or UDP Connection

Test Command AT+QICLOSE=?	Response OK
Execution Command AT+QICLOSE	Response If close succeeds: CLOSE OK If close fails: ERROR
Write Command AT+QICLOSE=<index>	Response If close succeeds: <index>, CLOSE OK If close fails: ERROR
Maximum Response Time	300ms

Reference

Quectel

Parameter

<index> The index of the socket for sending data. This parameter is necessary only if **AT+QIMUX** was set as 1 (refer to **AT+QIMUX**). When **AT+QIMUX** was set as 0, the parameter **MUST** be omitted

NOTES

1. Execution Command **AT+QICLOSE**:
 - If **QISRVC** is 1 (please refer to **AT+QISRVC**) and **QIMUX** is 0 (please refer to **AT+QIMUX**), this command will close the connection in which the module is used as a client.
 - If **QISRVC** is 1 and **QIMUX** is 1, it will return ERROR.
 - If **QISRVC** is 2, **QIMUX** equals 0, the module is used as a server and some clients have been connected to it, this command will close the connection between the module and the remote client.
 - If **QISRVC** is 2, **QIMUX** is 0 and the module is in listening state without any client, this command will cause the module to quit the listening state.
 - If **QISRVC** is 2, **QIMUX** is 1 and the module is used as a server, this command will close all the income connection and cause the module to quit the listening state.
2. Write Command **AT+QICLOSE=<index>**:
 - This command is valid only if **QIMUX** is 1.
 - If **QISRVC** is 1 and **QIMUX** is 1, this command will close the corresponding connection according to **<index>** and the module is used as a client in the connection.
 - If **QISRVC** is 2 and **QIMUX** is 1, this command will close the incoming connection according to **<index>**.
3. If **QISRVC** is 1 and **QIMUX** is 0, **AT+QICLOSE** only closes the connection when the status is CONNECTING or CONNECT OK, otherwise respond with ERROR. After closing the connection, the status is IP CLOSE.

11.4. AT+QIDEACT Deactivate GPRS/CSD PDP Context

AT+QIDEACT Deactivate GPRS/CSD PDP Context

Test Command AT+QIDEACT=?	Response OK
Execution Command AT+QIDEACT	Response If close succeeds: DEACT OK

	If close fails: ERROR
Maximum Response Time	40s, determined by network.
Reference Quectel	

NOTES

1. Except at the status of IP INITIAL, you can deactivate GPRS/CSD PDP context by **AT+QIDEACT**. After closing the connection, the status becomes IP INITIAL again.
2. CSD context is not supported at present.

11.5. AT+QILPORT Set Local Port

AT+QILPORT Set Local Port	
Test Command AT+QILPORT=?	Response +QILPORT: (list of supported <port>s) OK
Read Command AT+QILPORT?	Response <mode>: <port> <CR><LF><mode>: <port> OK
Write Command AT+QILPORT=<mode>,<port>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	A string parameter which indicates the connection type "TCP" TCP local port "UDP" UDP local port
<port>	0-65535 A numeric parameter which indicates the local port

NOTE

This command is used to set the port for listening.

11.6. AT+QIREGAPP Start TCPIP Task and Set APN, User Name and Password

AT+QIREGAPP Start TCPIP Task and Set APN, User Name and Password

Test Command AT+QIREGAPP=?	Response +QIREGAPP: "APN","USER","PWD" OK
Read Command AT+QIREGAPP?	Response +QIREGAPP: <apn>,<user name>,<password> OK
Write Command AT+QIREGAPP=<apn>,<user name>,< password>[,<rate>]	Response OK ERROR
Execution Command AT+QIREGAPP	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

- <apn>** A string parameter which indicates the GPRS access point name or the call number of CSD
<user name> A string parameter which indicates the GPRS/CSD user name
<password> A string parameter which indicates the GPRS/CSD password
<rate> The speed of data transmit for CSD

NOTES

1. The write command and execution commands are valid only at the status of IP INITIAL. After operating this command, the status will become IP START.
2. The value of **QICSGP** (please refer to **AT+QICSGP**) defines what kind of bearer (GPRS or CSD) the

parameters are used for.

3. CSD function and related configuration are not supported at present.

11.7. AT+QIACT Activate GPRS/CSD Context

AT+QIACT Activate GPRS/CSD Context

Test Command AT+QIACT=?	Response OK
Execution Command AT+QIACT	Response OK ERROR
Maximum Response Time	150s, determined by network.
Reference Quectel	

NOTES

1. **AT+QIACT** only activates GPRS/CSD context at the status of IP START. After operating this command, the status will become IP CONFIG. If TA accepts the activated operation, the status will become IP IND. After GPRS/CSD context is activated successfully, the status will become IP GPRSACT, and respond with OK; otherwise respond with ERROR.
2. CSD context is not supported at present.

11.8. AT+QILOCIP Get Local IP Address

AT+QILOCIP Get Local IP Address

Test Command AT+QILOCIP=?	Response OK
Execution Command AT+QILOCIP	Response If execution successful, respond: <IP address> Otherwise respond: ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<IP address> A string parameter which indicates the IP address assigned from GPRS or CSD network

NOTES

1. Only at the following status: IP GPRSACT, IP STATUS, TCP/UDP CONNECTING, CONNECT OK, IP CLOSE can get local IP address by **AT+QILOCIP**; otherwise respond ERROR. And if the status before executing the command is IP GPRSACT, the status will become IP STATUS after the command.
2. CSD function is not supported at present.

11.9. AT+QISTAT Query Current Connection Status

AT+QISTAT Query Current Connection Status

Test Command AT+QISTAT=?	Response OK
Execution Command AT+QISTAT	Response When AT+QIMUX=0 , respond: OK STATE: <state> When AT+QIMUX=1 , respond: List of (+QISTAT: <index>,<mode>,<addr>,<port><CR><LF>) OK
Maximum Response Time	300ms
Reference Quectel	

Parameter

<state> A string parameter to indicate the status of the connection

"IP INITIAL"	The TCPIP stack is in idle state
"IP START"	The TCPIP stack has been registered
"IP CONFIG"	It has been start-up to activate GPRS/CSD context
"IP IND"	It is activating GPRS/CSD context
"IP GPRSACT"	GPRS/CSD context has been activated successfully

"IP STATUS"	The local IP address has been gotten by the command AT+QILOCIP
"TCP CONNECTING"	It is trying to establish a TCP connection
"UDP CONNECTING"	It is trying to establish a UDP connection
"IP CLOSE"	The TCP/UDP connection has been closed
"CONNECT OK"	The TCP/UDP connection has been established successfully
"PDP DEACT"	GPRS/CSD context was deactivated because of unknown reason

If **ATV** was set to 0 by the command **ATV0**, the TCPIP stack gives the following numeric to indicate the former status

0	"IP INITIAL"
1	"IP START"
2	"IP CONFIG"
3	"IP IND"
4	"IP GPRSACT"
5	"IP STATUS"
6	"TCP CONNECTING" or "UDP CONNECTING"
7	"IP CLOSE"
8	"CONNECT OK"
9	"PDP DEACT"

<index>	The index of the connection, the range is (0-5)
<mode>	The type of the connection
	"TCP" TCP connection
	"UDP" UDP connection
<addr>	The IP address of the remote
<port>	The port of the remote

NOTES

1. Display former style of response when **QIMUX=0** and the later style of response when **QIMUX=1**.
2. CSD context is not supported at present.

11.10. AT+QISTATE Query Connection Status of the Current Access

AT+QISTATE Query Connection Status of the Current Access

Test Command AT+QISTATE=?	Response OK
Execution Command AT+QISTATE	Response When AT+QIMUX=0 , respond:

	<p>OK</p> <p>STATE: <state> When AT+QIMUX=1, respond: OK</p> <p>STATE: <state></p> <p>+QISTATE: <index>,<mode>,<addr>,<port>,<socketstate></p> <p>OK Otherwise respond: ERROR</p>
Maximum Response Time	300ms
Reference	Quectel

Parameter

<state>	<p>A string parameter to indicate the status of the connection</p> <p>When AT+QIMUX=0:</p> <p>"IP INITIAL" The TCPIP stack is in idle state.</p> <p>"IP START" The TCPIP stack has been registered.</p> <p>"IP CONFIG" It has been start-up to activate GPRS/CSD context.</p> <p>"IP IND" It is activating GPRS/CSD context.</p> <p>"IP GPRSACT" GPRS/CSD context has been activated successfully.</p> <p>"IP STATUS" The local IP address has been gotten by the command AT+QILOCIP.</p> <p>"TCP CONNECTING" It is trying to establish a TCP connection.</p> <p>"UDP CONNECTING" It is trying to establish a UDP connection.</p> <p>"IP CLOSE" The TCP/UDP connection has been closed.</p> <p>"CONNECT OK" The TCP/UDP connection has been established successfully.</p> <p>"PDP DEACT" GPRS/CSD context was deactivated because of unknown reason.</p> <p>When AT+QIMUX=1:</p> <p>"IP INITIAL" The TCPIP stack is in idle state.</p> <p>"IP START" The TCPIP stack has been registered.</p> <p>"IP CONFIG" It has been start-up to activate GPRS/CSD context.</p> <p>"IP IND" It is activating GPRS/CSD context.</p> <p>"IP GPRSACT" GPRS/CSD context has been activated successfully.</p> <p>"IP STATUS" The local IP address has been gotten by the command</p>
----------------------	--

	AT+QILOCIP.
"IP PROCESSING"	Data phase. Processing the existing connection now.
"PDP DEACT"	GPRS/CSD context was deactivated because of unknown reason.
<index>	The index of the connection, the range is (0-5)
<mode>	The type of the connection
"TCP"	TCP connection
"UDP"	UDP connection
<addr>	The IP address of the remote
<port>	The port of the remote
<socketstate>	A string parameter to indicate the status of the access connection, including INITIAL,CONNECTED.

11.11. AT+QISSTAT Query the Current Server Status

AT+QISSTAT Query the Current Server Status	
Test Command AT+QISSTAT=?	Response OK
Execution Command AT+QISSTAT	Response When AT+QIMUX=0 , respond: OK S: <ServerState> When AT+QIMUX=1 , respond: OK S: <ServerState> C: <index>,<mode>,<addr>,<port> Otherwise respond: ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<ServerState>	A string parameter to indicate the status of the connection
"INITIAL"	The TCPIP stack is in idle state
"OPENNING"	The TCPIP stack has been registered

	"LISTENING"	Listening to server port
	"CLOSING"	Closing connection now
<index>	The index of the connection, the range is (0-4)	
<mode>	The type of the connection	
	"TCP"	TCP connection
	"UDP"	UDP connection
<addr>	The IP address of the remote	
<port>	The port of the remote	

11.12. AT+QIDNSCFG Configure Domain Name Server

AT+QIDNSCFG Configure Domain Name Server

Test Command AT+QIDNSCFG=?	Response OK
Read Command AT+QIDNSCFG?	Response PrimaryDns: <pri_dns> SecondaryDns: <sec_dns> OK
Write Command AT+QIDNSCFG=<pri_dns>[,<sec_dns>]	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<pri_dns>	A string parameter which indicates the IP address of the primary domain name server
<sec_dns>	A string parameter which indicates the IP address of the secondary domain name server

NOTES

1. Because TA will negotiate to get the DNS server from GPRS/CSD network automatically when activating GPRS/CSD context, it is STRONGLY suggested to configure the DNS server at the status of IP GPRSACT, IP STATUS, CONNECT OK and IP CLOSE if it is necessary.
2. CSD function and configuration are not supported currently.

11.13. AT+QIDNSGIP Query the IP Address of Given Domain Name

AT+QIDNSGIP Query the IP Address of Given Domain Name

Test Command AT+QIDNSGIP=?	Response OK
Write Command AT+QIDNSGIP=<domain name>	Response OK ERROR If succeeds, return: <IP address> If fails, return: ERROR: <err> STATE: <state>
Maximum Response Time	14s, determined by network.
Reference Quectel	

Parameter

<domain name>	A string parameter which indicates the domain name
<IP address>	A string parameter which indicates the IP address corresponding to the domain name
<err>	A numeric parameter which indicates the error code
	1 DNS not Authorized
	2 Invalid parameter
	3 Network error
	4 No server
	5 Time out
	6 No configuration
	7 No memory
	8 Unknown error
<state>	Refer to AT+QISTAT

11.14. AT+QIDNSIP Connect with IP Address or Domain Name Server

AT+QIDNSIP Connect with IP Address or Domain Name Server

Test Command AT+QIDNSIP=?	Response +QIDNSIP: (list of supported <mode> s) OK
-------------------------------------	---

Read Command AT+QIDNSIP?	Response +QIDNSIP: <mode> OK
Write Command AT+QIDNSIP=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	A numeric parameter indicates which kind of server format is used when establishing the connection: IP address server or domain name server
<u>0</u>	The address of the remote server is a dotted decimal IP address
1	The address of the remote server is a domain name

11.15. AT+QIHEAD Add an IP Header When Receiving Data

AT+QIHEAD Add an IP Header When Receiving Data	
Test Command AT+QIHEAD=?	Response +QIHEAD: (list of supported <mode>s) OK
Read Command AT+QIHEAD?	Response +QIHEAD: <mode> OK
Write Command AT+QIHEAD=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	A numeric parameter which indicates whether or not to add an IP header before the received data
<u>0</u>	DO Not add IP header
1	Add a header before the received data, and the format is "IPD(data length):"

11.16. AT+QIAUTOS Set Auto Sending Timer

AT+QIAUTOS Set Auto Sending Timer

Test Command AT+QIAUTOS=?	Response +QIAUTOS: (list of supported <mode> s), (list of supported <time> s) OK
Read Command AT+QIAUTOS?	Response +QIAUTOS: <mode> , <time> OK
Write Command AT+QIAUTOS=<mode>[,<time>]	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	A numeric parameter which indicates whether or not to set timer when sending data
<u>0</u>	DO Not set timer for data sending
1	Set timer for data sending
<time>	A numeric parameter which indicates a time in seconds After the time expires since AT+QISEND , the input data will be sent automatically

11.17. AT+QIPROMPT Set Prompt of '>' When Sending Data

AT+QIPROMPT Set Prompt of '>' When Sending Data

Test Command AT+QIPROMPT=?	Response +QIPROMPT: (list of supported <send prompt>s) OK
Read Command AT+QIPROMPT?	Response +QIPROMPT: <send prompt> OK
Write Command AT+QIPROMPT=<send prompt>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<send prompt>	A numeric parameter which indicates whether or not to echo prompt ">" after issuing AT+QISEND Command
0	No prompt ">" and show "SEND OK" when sending succeeds
1	Echo prompt ">" and show "SEND OK" when sending succeeds
2	No prompt and not show "SEND OK" when sending succeeds
3	Echo prompt ">" and show "socket ID" "SEND OK" when sending succeeds

11.18. AT+QISERVER Configured as Server

AT+QISERVER Configured as Server

Test Command AT+QISERVER=?	Response OK
Read Command AT+QISERVER?	Response +QISERVER: <mode>, <num> OK
Execution Command AT+QISERVER	Response OK

	<p>ERROR</p> <p>If configured as server successfully, return: SERVER OK</p> <p>If configured as server unsuccessfully, return: CONNECT FAIL</p>
<p>Write Command AT+QISERVER=<type>[,<max>]</p>	<p>Response OK ERROR</p> <p>If configured as server successfully, return: SERVER OK</p> <p>If configured as server unsuccessfully, return: CONNECT FAIL</p>
<p>Maximum Response Time</p>	<p>150s, determined by network.</p>
<p>Reference Quectel</p>	

Parameter

<mode>	0	NOT configured as server
	1	Configured as server
<num>	The number of clients that have been connected in. The range is 0~5	
<type>	A numeric indicates the type of the server	
	0	TCP server
	1	UDP server
<max>	The maximum number of clients allowed to connect in. The default value is 1. The range is 1-5	

NOTES

1. Execution command configures the module as a TCP server and the maximum allowed client is 1.
2. The parameter **<max>** is excluded when **QIMUX** is 0.

11.19. AT+QICSGP Select CSD or GPRS as the Bearer

AT+QICSGP Select CSD or GPRS as the Bearer

Test Command AT+QICSGP=?	Response +QICSGP: 0-CSD,DIAL NUMBER,USER NAME,PASSWORD,RATE(0-3) +QICSGP: 1-GPRS,APN,USER NAME,PASSWORD OK
Read Command AT+QICSGP?	Response +QICSGP: <mode> OK
Write Command AT+QICSGP=<mode>[(,<apn>,<user name>,<password>)](<dial number>,<user name>,<password>,<rate>)]	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	A numeric parameter which indicates the bearer type
0	Set CSD as the bearer for TCPIP connection
<u>1</u>	Set GPRS as the bearer for TCPIP connection

GPRS parameters:

<apn>	A string parameter which indicates the access point name
<user name>	A string parameter which indicates the user name
<password>	A string parameter which indicates the password

CSD parameters:

<dial number>	A string parameter which indicates the CSD dial numbers
<user name>	A string parameter which indicates the CSD user name
<password>	A string parameter which indicates the CSD password
<rate>	A numeric parameter which indicates the CSD connection rate
0	2400
1	4800
<u>2</u>	9600
3	14400

NOTE

CSD configuration is not supported at present.

11.20. AT+QISRVC Choose Connection

AT+QISRVC Choose Connection

Test Command AT+QISRVC=?	Response +QISRVC: (list of supported <connection>s) OK
Read Command AT+QISRVC?	Response +QISRVC: <connection> OK
Write Command AT+QISRVC=<connection>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<connection>	A numeric parameter which indicates the chosen connection
<u>1</u>	Choose the connection in which MS used as a client
2	Choose the connection in which MS used as a server

NOTE

There could be two connections at one time: one connection is that MS connects with a remote server as a client; the other connection is that MS accepts a remote client as a server. Using this command to specify which connection data will be sent through.

11.21. AT+QISHOWRA Set Whether or Not to Display the Address of Sender

AT+QISHOWRA Set Whether or Not to Display the Address of Sender

Test Command AT+QISHOWRA=?	Response +QISHOWRA: (list of supported <mode>s) OK
Read Command AT+QISHOWRA?	Response +QISHOWRA: <mode> OK
Write Command AT+QISHOWRA=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference	Quectel

Parameter

<mode>	A numeric parameter which indicates whether or not to show the address (including IP address in dotted decimal style of the remote end) when receiving data.
0	DO NOT show the address. Default
1	Show the address; the format to show the address is like: RCV FROM: <IP ADDRESS>:<PORT>

11.22. AT+QISCON Save TCPIP Application Context

AT+QISCON Save TCPIP Application Context

Test Command AT+QISCON=?	Response OK
Read Command AT+QISCON?	Response TA returns TCPIP application context, which consists of the following AT command parameters. SHOW APPTCPIP CONTEXT +QIDNSIP:<mode> +QIPROMPT:<sendprompt>

	<p>+QIHEAD:<iphead> +QISHOWRA:<srip> +QICSGP:<csgp> Gprs Config APN:<apn> Gprs Config UserId:<gusr> Gprs Config Password:<gpwd> Gprs Config inactivityTimeout:<timeout> CSD Dial Number:<num> CSD Config UserId:<usr> CSD Config Password:<cpwd> CSD Config rate:<crate> App Tcip Mode:<mode> In Transparent Transfer Mode Number of Retry:<nmRetry> Wait Time:<waitTm> Send Size:<sendSz> esc:<esc></p> <p>OK</p>
Execution Command	Response
AT+QISCON	OK
Maximum Response Time	300ms
Reference	
Quectel	

Parameter

<mode>	See AT+QIDNSIP
<sendprompt>	See AT+QIPROMPT
<iphead>	See AT+QIHEAD
<srip>	See AT+QISHOWRA
<csgp>	See AT+QICSGP
<apn>	See AT+QICSGP
<gusr>	See AT+QICSGP
<gpwd>	See AT+QICSGP
<timeout>	See AT+QICSGP
<num>	See AT+QICSGP
<usr>	See AT+QICSGP
<cpwd>	See AT+QICSGP
<crate>	See AT+QICSGP

The following configurations are only for transparent transfer mode.

<nmRetry>	See AT+QITCFG
-----------	---------------

<waitTm>	See AT+QITCFG
<sendSz>	See AT+QITCFG
<esc>	See AT+QITCFG

NOTES

1. The execution command makes TA save TCPIP Application Context which consists of the following AT Command parameters; and when the system is rebooted, these parameters will be loaded automatically:
AT+QIDNSIP, AT+QIPROMPT, AT+QIHEAD, AT+QISHOWRA, AT+QICSGP, AT+QITCFG.
2. The execution command only save the corresponding parameters of the foreground context (refer to **AT+QIFGCNT**).
3. CSD configuration is not supported at present.

11.23. AT+QIMODE Select TCPIP Transfer Mode

AT+QIMODE Select TCPIP Transfer Mode

Test Command AT+QIMODE=?	Response +QIMODE: (list of supported <mode>s), OK
Read Command AT+QIMODE?	Response +QIMODE: <mode> OK
Write Command AT+QIMODE=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	0	Normal mode. In this mode, the data should be sent by the command AT+QISEND
	1	Transparent mode. In this mode, UART will enter data mode after TCP/UDP connection has been established. In data mode, all input data from UART will be sent to the remote end. +++ can help to switch data mode to command mode. And then ATO can help to switch command mode to data mode.

11.24. AT+QITCFG Configure Transparent Transfer Mode

AT+QITCFG Configure Transparent Transfer Mode

Test Command AT+QITCFG=?	Response +QITCFG: (list of supported <NmRetry> s),(list of supported <WaitTm> s),(list of supported <SendSz> s),(list of supported <esc> s) OK
Read Command AT+QITCFG?	Response +QITCFG: <NmRetry> , <WaitTm> , <SendSz> , <esc> OK
Write Command AT+QITCFG=<NmRetry> , <WaitTm> , <SendSz> , <esc>	Response OK ERROR
Maximum Response Time	300ms
Reference	Quectel

Parameter

<NmRetry>	Number of times to retry to send an IP packet
<WaitTm>	Number of 100ms intervals to wait for serial input before sending the packet
<SendSz>	Size in bytes of data block to be received from serial port before sending
<esc>	Whether to turn on the escape sequence or not; default is TRUE

NOTES

- <WaitTm>** and **<SendSz>** are two conditions to send data packet.
- Firstly, if the length of the input data from UART is greater than or equal to **<SendSz>**, the TCPIP stack will send the data by length **<SendSz>** to the remote.
- Secondly, if the length of the input data from UART is less than **<SendSz>**, and the idle time keeps beyond the time defined by **<WaitTm>**, the TCPIP stack will send all the data in the buffer to the remote.
- This command is invalid when **QIMUX** is 1.

11.25. AT+QISHOWPT Control Whether or Not to Show the Protocol

Type

AT+QISHOWPT Control Whether or Not to Show the Protocol Type

Test Command AT+QISHOWPT=?	Response +QISHOWPT: (list of supported <mode>s) OK
Read Command AT+QISHOWPT?	Response +QISHOWPT: <mode> OK
Write Command AT+QISHOWPT=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference	Quectel

Parameter

<mode>	0	DO NOT show the transport protocol type at the end of header of the received TCP/UDP data
	1	Show the transport protocol type at the end of header of the received TCP/UDP data as the following format. IPD (data length)(TCP/UDP):

NOTE

This command is invalid if **QIHEAD** was set as 0 by the command **AT+QIHEAD=0**.

11.26. AT+QIMUX Control Whether or Not to Enable Multiple TCPIP

Sessions

AT+QIMUX Control Whether or Not to Enable Multiple TCPIP Sessions

Test Command AT+QIMUX=?	Response +QIMUX: (list of supported <mode>s)
-----------------------------------	--

	OK
Read Command AT+QIMUX?	Response +QIMUX: <mode>
	OK
Write Command AT+QIMUX=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	<u>0</u>	DO NOT enable multiple TCPIP sessions at the same time
	1	Enable multiple TCPIP sessions at the same time

11.27. AT+QISHOWLA Control Whether or Not to Display Local IP Address

AT+QISHOWLA Control Whether or Not to Display Local IP Address

Test Command AT+QISHOWLA=?	Response +QISHOWLA: (list of supported <mode>s) OK
Read Command AT+QISHOWLA?	Response +QISHOWLA: <mode> OK
Write Command AT+QISHOWLA=<mode>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	A numeric parameter indicates whether or not to show the destination address before receiving data.
0	DO NOT show the destination address
1	Show the destination address: TO:<IP ADDRESS>

NOTE

Because MC60 can activate two GPRS contexts at the same time, i.e. MC60 can get two local IP addresses. It is necessary to point out the destination of the received data when two GPRS contexts have been activated at the same time.

11.28. AT+QIFGCNT Select a Context as Foreground Context

AT+QIFGCNT Select a Context as Foreground Context

Test Command AT+QIFGCNT=?	Response +QIFGCNT: (list of supported <id> s) OK
Read Command AT+QIFGCNT?	Response +QIFGCNT: <id> , <channel> OK
Write Command AT+QIFGCNT=<id>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<id>	A numeric indicates which context will be set as foreground context. The range is 0-1
<channel>	A numeric indicates which channel is controlling the context <id>
0	VIRTUAL_UART_1
1	VIRTUAL_UART_2
2	VIRTUAL_UART_3
3	VIRTUAL_UART_4
255	The context is not controlled by any channel

NOTE

When **CMUX** is opened, if the status of the context defined by **<id>** is not IP_INITIAL and the context is controlled by the other channel, it will return ERROR.

11.29. AT+QISACK Query the Data Information for Sending

AT+QISACK Query the Data Information for Sending

Test Command AT+QISACK=?	Response OK
Execution Command AT+QISACK	Response +QISACK: <sent>, <acked>, <nAked> OK
Write Command AT+QISACK=<n>	Response +QISACK: <sent>, <acked>, <nAked> OK
Maximum Response Time	300ms
Reference Quectel	

Parameter

<n>	The index for querying the connection
<sent>	A numeric indicates the total length of the data that has been sent through the session
<acked>	A numeric indicates the total length of the data that has been acknowledged by the remote
<nAked>	A numeric indicates the total length of the data that has been sent but not acknowledged by the remote

NOTES

1. Write command is invalid when **QIMUX** was set as 0 by the command **AT+QIMUX=0**.
2. This command could be affected by the command **AT+QISRVC**. If the **QISRVC** was set as 1, this command is used to query the information of sending data during the session in which MC60 serves as a client. If the **QISRVC** was set as 2, this command is used to query the data information for sending during the session in which MC60 serves as a server.

11.30. AT+QINDI Set the Method to Handle Received TCP/IP Data

AT+QINDI Set the Method to Handle Received TCP/IP Data

Test Command AT+QINDI=?	Response +QINDI: (list of supported <m>s) OK
Read Command AT+QINDI?	Response +QINDI: <m> OK
Write Command AT+QINDI=<m>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<m>	A numeric indicates how the mode handles the received data
0	Output the received data through UART directly. In the case, it probably includes header at the beginning of a received data packet. Please refer to the commands. AT+QIHEAD,AT+QISHOWRA, AT+QISHOWPT,AT+QISHOWLA
1	Output a notification statement “ +QIRDI: <id>,<sc>,<sid> ” through UART. This statement will be displayed only one time until all the received data from the connection (defined by <id>,<sc>,<sid>) have been retrieved by the command AT+QIRD .
2	Output a notification statement “ +QIRDI: <id>,<sc>,<sid>,<num>,<len>,<tlen> ” through UART. This statement will establish a buffer for each socket, the data received will be saved in the buffer until it has been retrieved by the command AT+QIRD , sum lengths of all the buffer is no more than 400K.
<id>	A numeric points out which context the connection for the received data is based on. Please refer to the parameter <id> in the command AT+QIFGCNT . The range is 0-1.
<sc>	A numeric points out the role of MC60 in the connection for the received data.
1	The module serves as the client of the connection
2	The module serves as the server of the connection
<sid>	A numeric indicates the index of the connection for the received data. The range is 0-5 When QIMUX was set as 0 by the command AT+QIMUX=0 , this parameter will be always 0.
<num>	The number of packets received in the buffer.
<len>	The length of the current package in the buffer.

<tlen> The sum of the length of all packages received in the buffer.

NOTES

1. The length of a package can't exceed 1460 bytes. If it exceeds 1460 bytes, it may be split to two or more packages.
2. The sum of length of the lengths of all packages received can't exceed 400K bytes.

11.31. AT+QIRD Retrieve the Received TCP/IP Data

AT+QIRD Retrieve the Received TCP/IP Data

Test Command AT+QIRD=?	Response +QIRD: (list of supported <id>s),(list of supported <sc>s),(list of supported <sid>s),(list of supported <len>s) OK
Write Command AT+QIRD=<id>,<sc>,<sid>,<len>	Response [+QIRD: <ipAddr>:<port>,<type>,<length><CR><LF><data> OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<id>	A numeric points out which context the connection for the received data is based on. Please refer to the parameter <id> in the command AT+QIFGCNT . The range is 0-1
<sc>	A numeric points out the role of MC60 in the connection for the received data 1 The module serves as the client of the connection 2 The module serves as the server of the connection
<sid>	A numeric indicates the index of the connection for the received data. The range is 0-5. When QIMUX was set as 0 by the command AT+QIMUX=0 , this parameter will be always 0
<len>	The maximum length of data to be retrieved. The range is 1-1500
<ipAddr>	The address of the remote end. It is a dotted-decimal IP
<port>	The port of the remote end

<type>	An alpha string without quotation marks indicates the transport protocol type TCP the transport protocol is TCP UDP the transport protocol is UDP
<length>	The real length of the retrieved data
<data>	The retrieved data

NOTES

1. **<id>**, **<sc>** and **<sid>** are the same as the parameters in the statement “**+QIRDI: <id>,<sc>,<sid>**”.
2. If it replies only OK for the write command, it means there is no received data in the buffer of the connection.

11.32. AT+QISDE Control Whether or Not to Echo the Data for QISEND

AT+QISDE Control Whether or Not to Echo the Data for QISEND	
Test Command AT+QISDE=?	Response +QISDE: (list of supported <m> s) OK
Read Command AT+QISDE?	Response +QISDE: <m> OK
Write Command AT+QISDE=<m>	Response OK ERROR
Maximum Response Time	300ms
Reference Quectel	

Parameter

<m>	A numeric indicates whether or not to echo the data for AT+QISEND 0 Do not echo the data 1 Echo the data
------------------	---

11.33. AT+QPING Ping a Remote Server

AT+QPING Ping a Remote Server

Test Command AT+QPING=?	Response +QPING: "HOST", (list of supported <timeout>s),(list of supported <pingnum>s) OK
Write Command AT+QPING="<host>"[,<timeout>][,<pingnum>]	Response OK [+QPING: <result>[,<ipAddr>,<bytes>,<time>,<tll>]<CR><LF> ...]<CR><LF> +QPING:<finresult>[,<sent>,<rcvd>,<lost>,<min>,<max>,<avg>] ERROR
Maximum Response Time	Depends on <timeout> .
Reference Quectel	

Parameter

<host>	The host address in string style. It could be a domain name or a dotted decimal IP address
<timeout>	A numeric gives the maximum time to wait for the response of each ping request. Unit: second. Range: 1-255. Default: 1
<pingnum>	A numeric indicates the maximum time of ping request. Range: 1-10. Default: 4
<result>	The result of each ping request
	0 Received the ping response from the server. In the case, it is followed by " <ipAddr>,<bytes>,<time>,<tll> "
	1 Timeout for the ping request. In the case, no other information follows it
<ipAddr>	The IP address of the remote server. It is a dotted decimal IP
<bytes>	The length of sending each ping request
<time>	The time expended to wait for the response for the ping request. Unit: ms
<tll>	The value of time to live of the response packet for the ping request
<finresult>	The final result of the command
	2 It is finished normally. It is successful to activate GPRS and find the host. In the case, it is followed by " <sent>,<rcvd>,<lost>,<min>,<max>,<avg> "
	3 The TCP/IP stack is busy now. In the case, no other information follows it
	4 Do NOT find the host. In the case, no other information follows it
	5 Failed to activate PDP context. In the case, no other information follows it

<sent>	Total number of sending the ping requests
<rcvd>	Total number of the ping requests that received the response
<lost>	Total number of the ping requests that were timeout
<min>	The minimum response time. Unit: ms
<max>	The maximum response time. Unit: ms
<avg>	The average response time. Unit: ms

11.34. AT+QNTTP Synchronize the Local Time via NTP

AT+QNTTP Synchronize the Local Time Via NTP	
Test Command AT+QNTTP=?	Response +QNTTP: "SERVER", (list of supported <port>s) OK
Read Command AT+QNTTP?	Response +QNTTP: "<server>", <port> OK
Execution Command AT+QNTTP	Response OK +QNTTP: <result>
Write Command AT+QNTTP="<server>"[,<port>]	Response OK +QNTTP: <result> ERROR
Maximum Response Time	120s, determined by network.
Reference Quectel	

Parameter

<server>	The address of the Time Server in string style. It could be a domain name or a dotted decimal IP address
<port>	The port of the Time Server
<result>	The result of time synchronization
0	Successfully synchronize the local time
1	Failed to synchronize the local time because of unknown reason

-
- | | |
|---|---|
| 2 | Failed to receive the response from the Time Server |
| 3 | The TCP/IP stack is busy now |
| 4 | Do Not find the Time Server |
| 5 | Failed to activate PDP context |
-

NOTE

The factory Time Server is the National Time Service Centre of China whose address is "210.72.145.44" and the port is 123.

Quectel
Confidential

12 Supplementary Service Commands

12.1. AT+CCFC Call Forwarding Number and Conditions Control

AT+CCFC Call Forwarding Number and Conditions Control

<p>Test Command AT+CCFC=?</p>	<p>Response +CCFC: (list of supported <reads>s)</p> <p>OK</p>
<p>Write Command AT+CCFC=<reads>,<mode>[,<number>[,<type>[,<class>[,<subaddr>[,<sat type>[,<time>]]]]]]]</p>	<p>Response TA controls the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported. Only ,<reads> and <mode> should be entered with mode (0-2,4)</p> <p>If <mode><>2 and command successful: OK If <mode>=2 and command successful (only in connection with <reads> 0 –3)</p> <p>For registered call forwarding numbers: +CCFC: <status>, <class1>[, <number>, <type>[, <subaddr>,<sat type>[,<time>]]] [<cr><lf>+ccfc:]<="" b=""></cr><lf>+ccfc:></p> <p>OK</p> <p>If no call forwarding numbers are registered (and therefore all classes are inactive): +CCFC: <status>, <class></p> <p>OK where <status>=0 and <class>=15</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>

Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<reads>	0	Unconditional
	1	Mobile busy
	2	No reply
	3	Not reachable
	4	All call forwarding (0-3)
	5	All conditional call forwarding (1-3)
<mode>	0	Disable
	1	Enable
	2	Query status
	3	Registration
	4	Erasure
<number>	Phone number in string type of forwarding address in format specified by <type>	
<type>	Type of address in integer format; default value is 145 when dialing string includes international access code character "+", otherwise 129	
<subaddr>	String type sub-address of format specified by <satype>	
<satype>	Type of sub-address in integer	
<class>	1	Voice
	2	Data
	4	Fax
	7	All telephony except SMS
	8	Short message service
	16	Data circuit sync
	32	Data circuit async
<time>	1...30	When "no reply" (<reads> =no reply) is enabled or queried, this gives the time in seconds to wait before call is forwarded, default value is 20
<status>	0	Not active
	1	Active

Example

```

AT+CCFC=0,3,"15021012496" //Register the destination number for unconditional call
                           forwarding (CFU)
OK
AT+CCFC=0,2 //Query the status of CFU without specifying <class>
+CCFC: 1,1,"+8615021012496",145
+CCFC: 1,4,"+8615021012496",145

```

```
+CCFC: 1,32,"+8615021012496",145

+CCFC: 1,16,"+8615021012496",145

OK
AT+CCFC=0,4 //Erase the registered CFU destination number
OK
AT+CCFC=0,2 //Query the status, no destination number
+CCFC: 0,7

OK
```

12.2. AT+CCUG Closed User Group Control

AT+CCUG Closed User Group Control	
Test Command AT+CCUG=?	Response OK
Read Command AT+CCUG?	Response +CCUG: <n>,<index>,<info> OK
Write Command AT+CCUG=[<n>][,<index>][,<info>]	Response TA sets the closed user group supplementary service parameters as a default adjustment for all following calls. OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<n>	0	Disable CUG
	1	Enable CUG
<index>	0...9	CUG index
	10	No index (preferred CUG taken from subscriber data)
<info>	0	Bo information
	1	Suppress OA (Outgoing Access)

2	Suppress preferential CUG
3	Suppress OA and preferential CUG

12.3. AT+CCWA Call Waiting Control

AT+CCWA Call Waiting Control

Test Command AT+CCWA=?	Response +CCWA: (list of supported <n>s) OK
Read Command AT+CCWA?	Response +CCWA: <n> OK
Write Command AT+CCWA=[<n>][,<mode>[,<class>]]	Response TA controls the call waiting supplementary service. Activation, deactivation and status query are supported. If <mode><2 and command successful: OK If <mode>=2 and command successful: +CCWA:<status>,<class1>[<CR><LF>+CCWA:<status>,<class2>[...]] OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<n>	0	Disable presentation of an unsolicited result code
	1	Enable presentation of an unsolicited result code
<mode>	When <mode> parameter is not given, network is not interrogated	
	0	Disable
	1	Enable
	2	Query status

<class>	A sum of integers, each integer represents a class of information	
	1	Voice (telephony)
	2	Data (bearer service)
	4	Fax (facsimile)
	16	Data circuit sync
	32	Data circuit async
<status>	0	Disable
	1	Enable

NOTES

- <status>**=0 should be returned only if service is not active for any **<class>** i.e. **+CCWA: 0, 7** will be returned in this case.
- When **<mode>**=2, all active call waiting classes will be reported. In this mode the command is available by pressing any key.
- Unsolicited result code

When the presentation call waiting at the TA is enabled (and call waiting is enabled) and a terminating call set up during an established call, an unsolicited result code is returned:

+CCWA: <number>,<type>,<class>[,<alpha>]

Parameters

<number> Phone number in string type of calling address in format specified by **<type>**

<type> Type of address octet in integer format

129 Unknown type (ISDN format number)

145 International number type (ISDN format)

<alpha> Optional string type alphanumeric representation of **<number>** corresponding to the entry found in phone book

Example

```

AT+CCWA=1,1 //Enable presentation of an unsolicited result code
OK
ATD10086; //Establish a call
OK
+CCWA: "02154450293",129,1 //Indication of a call that has been waiting
    
```

12.4. AT+CHLD Call Hold and Multiparty

AT+CHLD Call Hold and Multiparty

Test Command	Response
AT+CHLD=?	+CHLD: (list of supported <n>s)

	OK
Write Command AT+CHLD=[<n>]	Response TA controls the supplementary services call hold, multiparty and explicit call transfer. Calls can be put on hold, recovered, released, added to conversation and transferred. OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<n>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any)
	1	Terminate all active calls (if any) and accept the other call (waiting call or held call). It cannot terminate active call if there is only one call
	1X	Terminate the specific call number X (X=1-7)(active, waiting or held)
	2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call
	2X	Place all active calls except call X (X=1-7) on hold
	3	Add the held call to the active calls

NOTE

These supplementary services are only available to the teleservice 11 (Speech: Telephony).

Example

```

ATD10086; //Establish a call
OK

+CCWA: "02154450293",129,1 //Indication of a call that has been waiting
AT+CHLD=2 //Place the active call on hold and accept the waiting call as
the active call

OK
AT+CLCC
+CLCC: 1,0,1,0,0,"10086",129,"" //The first call on hold
    
```

```

+CLCC: 2,1,0,0,0,"02154450293",129,"" //The second call becomes active

OK
AT+CHLD=21 //Place the active call except call X=1 on hold
OK
AT+CLCC
+CLCC: 1,0,0,0,0,"10086",129,"" //The first call becomes active

+CLCC: 2,1,1,0,1,"02154450293",129,"" //The second call on hold

OK
AT+CHLD=3 //Add a held call to the active calls in order to set up a
           //conference (multiparty) call

OK
AT+CLCC
+CLCC: 1,0,0,0,1,"10086",129,""

+CLCC: 2,1,0,0,1,"02154450293",129,""

OK
    
```

12.5. AT+CLIP Calling Line Identification Presentation

AT+CLIP Calling Line Identification Presentation	
Test Command AT+CLIP=?	Response +CLIP: (list of supported <n>s) OK
Read Command AT+CLIP?	Response +CLIP: <n>,<m> OK
Write Command AT+CLIP=[<n>]	Response TA enables or disables the presentation of the calling line identity (CLI) at the TE. It has no effect on the execution of the supplementary service CLIP in the network. OK If error is related to ME functionality: +CME ERROR: <err>

Maximum Response Time	15s, determined by network.
Reference GSM 07.07	

Parameter

<n>	0	Suppress unsolicited result codes
	1	Display unsolicited result codes
<m>	0	CLIP not provisioned
	1	CLIP provisioned
	2	Unknown

NOTE

Unsolicited result code

When the presentation of the CLI at the TE is enabled (and calling subscriber allows), an unsolicited result code is returned after every RING (or **+CRING: <type>**) at a mobile terminating call.

+CLIP: <number>, <type>,"",,<alphald>,<CLI validity>

Parameters

<number>	Phone number in string type of calling address in format specified by <type>
<type>	Type of address octet in integer format; 129 Unknown type (ISDN format number) 145 International number type (ISDN format)
<alphald>	String type alphanumeric representation of <number> corresponding to the entry found in phone book
<CLI validity>	0 CLI valid 1 CLI has been withheld by the originator 2 CLI is not available due to interworking problems or limitations of originating network

Example

```
AT+CPBW=1,"02151082965",129,"QUECTEL"
OK
AT+CLIP=1
OK

RING

+CLIP: "02151082965",129,"",,"",0
```


12.6. AT+QCLIP Control Whether or Not to Show the Name of Incoming Call Number

AT+QCLIP Control Whether or Not to Show the Name of Incoming Call Number

Test Command AT+QCLIP=?	Response +QCLIP: (list of supported <n>s) OK
Read Command AT+QCLIP?	Response +QCLIP: <n> OK
Write Command AT+QCLIP=<n>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<n>	Enable or disable the function of show the name of incoming call number
0	Enable
1	Disable

NOTE

This AT command should be used in conjunction with **CLIP** command.

Example

```
AT+CPBW=1,"02151082965",129,"QUECTEL"
OK
AT+QCLIP=1
OK
AT+CLIP=1
OK
```

RING

+CLIP: "02151082965",129,"","QUECTEL",0

12.7. AT+CLIR Calling Line Identification Restriction

AT+CLIR Calling Line Identification Restriction

Test Command AT+CLIR=?	Response +CLIR: (list of supported <n>s) OK
Read Command AT+CLIR?	Response +CLIR: <n>,<m> OK
Write Command AT+CLIR=[<n>]	Response TA restricts or enables the presentation of the calling line identity (CLI) to the called party when originating a call. The command overrides the CLIR subscription (default is restricted or allowed) when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite Command. OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	15s, determined by network
Reference GSM 07.07	

Parameter

<n>	(Parameter sets the adjustment for outgoing calls)
0	Presentation indicator is used according to the subscription of the CLIR service
1	CLIR invocation
2	CLIR suppression
<m>	(Parameter shows the subscriber CLIR service status in the network)
0	CLIR not provisioned
1	CLIR provisioned in permanent mode
2	Unknown (e.g. no network, etc.)
3	CLIR temporary mode presentation restricted

4 CLIR temporary mode presentation allowed

12.8. AT+COLP Connected Line Identification Presentation

AT+COLP Connected Line Identification Presentation

Test Command AT+COLP=?	Response +COLP: (list of supported <n>s) OK
Read Command AT+COLP?	Response +COLP: <n>,<m> OK
Write Command AT+COLP=[<n>]	Response TA enables or disables the presentation of the COL (Connected Line) at the TE for a mobile originating a call. It has no effect on the execution of the supplementary service COLR in the network. Intermediate result code is returned from TA to TE before any +CR or V.25ter responses. OK
Maximum Response Time	15s, determined by network.
Reference GSM 07.07	

Parameter

<n>	(Parameter sets/shows the result code presentation status in the TA) 0 Disable 1 Enable
<m>	(Parameter shows the subscriber COLP service status in the network) 0 COLP not provisioned 1 COLP provisioned 2 Unknown (e.g. no network, etc.)

NOTE

Intermediate result code

When enabled (and called subscriber allows), an intermediate result code is returned before any +CR or V.25ter responses:

+COLP: <number>,<type>[,<subaddr>,<satype> [,<alpha>]]

Parameters

<number> Phone number in string type, format specified by **<type>**

<type> Type of address octet in integer format

129 Unknown type (ISDN format number)

145 International number type (ISDN format)

<subaddr> String type sub-address of format specified by **<satype>**

<satype> Type of sub-address octet in integer format (refer to GSM 04.08 sub clause 10.5.4.8)

<alpha> Optional string type alphanumeric representation of **<number>** corresponding to the entry found in phone book

Example

```
AT+CPBW=1,"02151082965",129,"QUECTEL"
```

```
OK
```

```
AT+COLP=1
```

```
OK
```

```
ATD02151082965;
```

```
+COLP: "02151082965",129,"",0,""
```

```
OK
```

12.9. AT+QCOLP Show Alpha Field in +COLP String

AT+QCOLP Show Alpha Field in +COLP String

Test Command

AT+QCOLP=?

Response

+QCOLP: (list of supported **<mode>**s)

OK

Read Command

AT+QCOLP?

Response

+QCOLP: **<mode>**

OK

Write Command

AT+QCOLP=<mode>

Response

OK

	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	
Quectel	

Parameter

<mode>	Whether or not to show alpha field in +COLP string
<u>0</u>	NOT show alpha field in +COLP string
1	Show alpha field in +COLP string

NOTE

This command setting only works under **AT+COLP=1**.

Example

```
AT+CPBW=1,"02151082965",129,"QUECTEL"
OK
AT+QCOLP=1
OK
AT+COLP=1
OK
ATD02151082965;
+COLP: "02151082965",129,"",0,"QUECTEL"
OK
```

12.10. AT+CUSD Unstructured Supplementary Service Data

AT+CUSD Unstructured Supplementary Service Data

Test Command AT+CUSD=?	Response +CUSD: (list of supported <n>s) OK
Read Command AT+CUSD?	Response +CUSD: <n>

	OK
Write Command AT+CUSD=[<n>[,<str>[,<dcs>]]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	120s, determined by network.
Reference GSM 07.07	

Parameter

<n>	A numeric parameter which indicates control of the unstructured supplementary service data
0	Disable the result code presentation in the TA
1	Enable the result code presentation in the TA
2	Cancel session (not applicable to read command response)
<str>	String type USSD-string
<dcs>	Cell Broadcast Data Coding Scheme in integer format (default 0)

Example

```
AT+CSCS="UCS2"
OK
AT+CUSD=1,"002A0031003000300023"
+CUSD:
1,"0031002E59296C14000A0032002E65B095FB000A0033002E8BC15238000A0034002E5F6979680
00A0035002E751F6D3B000A0036002E5A314E50000A0037002E5E385DDE98CE91C7000A002A002
E900051FA000A", 72
OK
```

12.11. AT+CSSN Supplementary Services Notification

AT+CSSN Supplementary Services Notification

Test Command AT+CSSN=?	Response +CSSN: (list of supported <n>s), (list of supported <m>s) OK
Read Command AT+CSSN?	Response +CSSN: <n>,<m>

	OK
Write Command AT+CSSN=[<n>[,<m>]]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<n>	A numeric parameter which indicates whether to show the +CSSI:<code1>[,<index>] result code presentation status after a mobile originated call setup <ul style="list-style-type: none"> 0 Disable 1 Enable
<m>	A numeric parameter which indicates whether to show the +CSSU:<code2> result code presentation status during a mobile terminated call setup or during a call, or when a forward check supplementary service notification is received <ul style="list-style-type: none"> 0 Disable 1 Enable
<code1>	<ul style="list-style-type: none"> 0 Unconditional call forwarding is active 1 Some of the conditional call forwarding are active 2 Call has been forwarded 3 Call is waiting 4 This is a CUG call (also <index> present) 5 Outgoing calls are barred 6 Incoming calls are barred 7 CLIR suppression rejected
<index>	Closed user group index
<code2>	<ul style="list-style-type: none"> 0 This is a forwarded call

13 Audio Commands

13.1. ATL Set Monitor Speaker Loudness

ATL Set Monitor Speaker Loudness

Execution Command ATL<value>	Response OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	Low speaker volume
	1	Low speaker volume
	2	Medium speaker volume
	3	High speaker volume

NOTE

The two commands **ATL** and **ATM** are implemented only for V.25 compatibility reasons and have no effect.

13.2. ATM Set Monitor Speaker Mode

ATM Set Monitor Speaker Mode

Execution Command ATM<value>	Response OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<value>	0	Speaker is always off
	1	Speaker is on until TA informs TE that the carrier has been detected
	2	Speaker is always on when TA is off-hook

NOTE

The two commands **ATL** and **ATM** are implemented only for V.25 compatibility reasons and have no effect.

13.3. AT+VTD Tone Duration

AT+VTD Tone Duration	
Test Command AT+VTD=?	Response +VTD: (list of supported <internalduration>s),(list of supported <duration>s) OK
Read Command AT+VTD?	Response +VTD: <internalduration> , <duration> OK
Write Command AT+VTD=<internalduration>[,<duration>]	Response This command refers to an integer <internalduration> that defines the length of tones emitted as a result of the +VTS command. This does not affect the D command. OK
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<internalduration>	<u>1</u> -255	Duration between two tones, unit is 100ms
<duration>	<u>0</u>	Do not set duration of every single tone.
	1-100000	Duration of every single tone, unit is 1ms

13.4. AT+VTS DTMF and Tone Generation

AT+VTS DTMF and Tone Generation

Test Command AT+VTS=?	Response +VTS: (list of supported <dtmf>s), ,(list of supported <duration>s) OK
Write Command AT+VTS=<dtmf-string>	Response This command allows the transmission of DTMF tones and arbitrary tones in voice mode. These tones may be used (for example) when announcing the start of a recording period. OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	Depends on the length of <dtmf-string> .
Reference GSM 07.07	

Parameter

<dtmf-string>	It has a max length of 20 characters, must be entered between double quotes (" ") and consists of combinations of the following separated by commas. But a single character does not require quotes
1) <dtmf>	A single ASCII characters in the set 0-9, #, *, A-D. This is interpreted as a sequence of DTMF tones whose duration is set by the +VTD command
2) {<dtmf>, <duration>}	This is interpreted as a DTMF tone whose duration is determined by <duration>
<duration>	Duration of the tone, unit: 100ms, range: 1-255

Example

```

ATD10086; //Establish a call
OK
AT+VTS=1 //Send a single DTMF tone according to the prompts of voice
OK

```

13.5. AT+CALM Alert Sound Mode

AT+CALM Alert Sound Mode

Test Command AT+CALM=?	Response +CALM: (list of supported <mode>s) OK
Read Command AT+CALM?	Response +CALM: <mode> OK
Write Command AT+CALM=<mode>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<mode>	0	Normal mode
	1	Silent mode (all sounds from ME are prevented)

13.6. AT+CRSL Ringer Sound Level

AT+CRSL Ringer Sound Level

Test Command AT+CRSL=?	Response +CRSL: (list of supported <level>s) OK
Read Command AT+CRSL?	Response +CRSL: <level> OK
Write Command AT+CRSL=<level>	Response OK

	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<level> Integer type value (0-100) with manufacturer specific range (smallest value represents the lowest sound level).

13.7. AT+CLVL Loud Speaker Volume Level

AT+CLVL Loud Speaker Volume Level

Test Command AT+CLVL=?	Response +CLVL: (list of supported <level> s) OK
Read Command AT+CLVL?	Response +CLVL: <level> OK
Write Command AT+CLVL=<level>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<level> Integer type value (0-100) with manufacturer specific range (smallest value represents the lowest sound level). Default value is 60.

13.8. AT+CMUT Mute Control

AT+CMUT Mute Control

Test Command AT+CMUT=?	Response +CMUT: (list of supported <n>s) OK
Read Command AT+CMUT?	Response +CMUT: <n> OK
Write Command AT+CMUT=<n>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	GSM 07.07

Parameter

<n>	<u>0</u>	Mute off
	1	Mute on

NOTE

This command is to mute the uplink.

13.9. AT+QSIDET Change the Side Tone Gain Level

AT+QSIDET Change the Side Tone Gain Level

Test Command AT+QSIDET=?	Response +QSIDET: (list of supported <gainlevel>s) OK
Read Command AT+QSIDET?	Response (1) If AT+QAUDCH=0:

	<p>+QSIDET(NORMAL_AUDIO): <gainlevel></p> <p>OK</p> <p>(2) If AT+QAUDCH=1: +QSIDET(HEADSET_AUDIO): <gainlevel></p> <p>OK</p>
Write Command AT+QSIDET=<gainlevel>	<p>Response</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<gainlevel> Range is 0-255. Default value is 80.

NOTE

<gainlevel> value is related to specific channel.

13.10. AT+QMIC Change the Microphone Gain Level

AT+QMIC Change the Microphone Gain Level

Test Command AT+QMIC=?	<p>Response</p> <p>+QMIC: (list of supported <channel>s) , (list of supported <gainlevel>s)</p> <p>OK</p>
Read Command AT+QMIC?	<p>Response</p> <p>+QMIC: <gainlevel(Normal_Mic)>,<gainlevel(Headset_Mic)>,<gainlevel(Loudspeaker_Mic)></p> <p>OK</p>

Write Command AT+QMIC=<channel>,<gainlevel>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<channel>	0	Normal microphone
	1	Headset microphone
	2	Loudspeaker microphone
<gainlevel>	Range is 0-15. The default values are 4, 9, and 8 for each channel.	

13.11. AT+QLDTMF Generate Local DTMF Tones

AT+QLDTMF Generate Local DTMF Tones	
Test Command AT+QLDTMF=?	Response +QLDTMF: (list of supported < durations >s) ,(list of supported <DTMF string>s) OK
Write Command AT+QLDTMF=<durations>[,<DTMF string>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Execution Command AT+QLDTMF	Response OK
Maximum Response Time	Depends on the length of <DTMF string> .
Reference Quectel	

Parameter

<durations>	A numeric parameter (1-1000) which indicates the duration of all DTMF tones in <DTMF string> in 1/10 seconds
--------------------------	---

<DTMF string> A string parameter which has a max length of 20 DTMF characters (single ASCII chars in the set 0-9,#,*,A-D), separated by commas

NOTE

Aborts any DTMF tones that are generated currently and any DTMF tones sequence.

13.12. AT+QAUDCH Swap the Audio Channels

AT+QAUDCH Swap the Audio Channels

Test Command AT+QAUDCH=?	Response +QAUDCH: (list of supported <n>s) OK
Read Command AT+QAUDCH?	Response +QAUDCH: <n> OK
Write Command AT+QAUDCH=[<n>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	Quectel

Parameter

<n>	<u>0</u>	Normal audio channel (default)
	1	Headset audio channel
	2	Loudspeaker audio

13.13. AT+QAUDLOOP Audio Channel Loop Back Test

AT+QAUDLOOP Audio Channel Loop Back Test

Test Command AT+QAUDLOOP=?	Response +QAUDLOOP: (list of supported <state>s),(list of supported <type>s) OK
Write Command AT+QAUDLOOP=<state>[,<type>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<state>	0	Test is off
	1	Test is on
<type>	0	Normal audio channel
	1	Headset audio channel
	2	Loudspeaker audio channel

13.14. AT+QLTONE Generate Local Specific Tone

AT+QLTONE Generate Local Specific Tone

Test Command AT+QLTONE=?	Response +QLTONE: (list of supported <mode>s), (list of supported <frequency>s), (list of supported <periodOn>s), (list of supported <periodOff>s), (list of supported <duration>s) OK
Write Command AT+QLTONE=<mode>,<frequency>,<periodOn>,<periodOff>,<duration>	Response OK If error is related to ME functionality: +CME ERROR: <err>

Maximum Response Time	Depends on the content of the play.
Reference Quectel	

Parameter

<mode>	0 Stop playing tone 1 Start playing tone
<frequency>	The frequency of tone to be generated
<periodOn>	The period of generating tone
<periodOff>	The period of stopping tone
<duration>	Duration of tones in milliseconds

NOTE

When playing the tone of a specified frequency, the module will continuously play for **<periodOn>**, and then stop playing for **<periodOff>** in a cycle. The total time of cycles is **<duration>**.

13.15. AT+QTONEP Set DTMF Output Path

AT+QTONEP Set DTMF Output Path	
Test Command AT+QTONEP=?	Response +QTONEP: (list of supported <outputpath> s) OK
Read Command AT+QTONEP?	Response +QTONEP: <outputpath> OK
Write Command AT+QTONEP=<outputpath>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<outputpath>	Output path
0	Output DTMF or tone from Normal speaker
1	Output DTMF or tone from Headset speaker
2	Output DTMF or tone from Loud speaker
<u>3</u>	Auto

NOTE

Set **AT+QTONEP=3**, output DTMF or tone from default speak path. For more details, consult **AT+QAUDCH**.

13.16. AT+QTDMOD Set Tone Detection Mode

AT+QTDMOD Set Tone Detection Mode	
Test Command AT+QTDMOD=?	Response +QTDMOD: (list of supported <operatefunction>s),(list of supported <functionstatus>s) OK
Read Command AT+QTDMOD?	Response +QTDMOD: <operatefunction> , <functionstatus> OK
Write Command AT+QTDMOD=<operatefunction> , <functionstatus>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<operatefunction>	Operate function
1	Set detection range
2	Set detection mode
<functionstatus>	Function status

- | | |
|---|--|
| 0 | When set <operatefunct> =1, detect all DTMF, including 1400Hz and 2300Hz handshake signal. When set <operatefunct> =2, detect DTMF tone by normal arithmetic |
| 1 | When set <operatefunct> =1, only detect 1400Hz and 2300Hz handshake signal by using optimal arithmetic. When set <operatefunct> =2, detect long continuous DTMF tone by using optimal arithmetic |
| 2 | When set <operatefunct> =1, not detected 1400Hz and 2300Hz handshake signal. |

NOTES

1. Set **AT+QTDMOD=1,0**, detect all DTMF, including 1400Hz and 2300Hz handshake signal.
2. Set **AT+QTDMOD=1,1**, only detect 1400Hz and 2300Hz handshake signal by using optimal arithmetic.
3. Set **AT+QTDMOD=1,2**, detect all DTMF, not including 1400Hz and 2300Hz handshake signal.
4. Set **AT+QTDMOD=2,0**, detect DTMF tone by using normal arithmetic.
5. Set **AT+QTDMOD=2,1**, detect long continuous DTMF tone by using optimal arithmetic.
6. Consult **AT+QONEDET**.

13.17. AT+QONEDET Detect DTMF

AT+QONEDET Detect DTMF

Test Command AT+QONEDET=?	Response +QONEDET: (list of supported <mode> s) OK
Read Command AT+QONEDET?	Response +QONEDET: <mode> OK
Write Command AT+QONEDET=<mode>[,<operate >] [,<prefixpause>][,<lowthreshold>][,<highthreshold>]	Response OK If error is related to ME functionality: +CME ERROR: <err> Open after successful DTMF tone is detected, report: +QONEDET: <dtmfcode>[,<persistencetime>]
Maximum Response Time	300ms
Reference Quectel	

Parameter

<mode>	Mode function
0	Close tone detection
1	Open tone detection
2	Configure 1400Hz or 2300Hz detection threshold, duration of which is 100ms
3	Configure 1400Hz and 2300Hz 400ms detection threshold
4	Configure DTMF detection threshold
5	Open debug
<operate>	Operate value
	When <mode> =2, <operate> set as follows
0	Query threshold values; these values are 1400Hz and 2300Hz detection threshold, each duration of which is 100ms
1	Set threshold values; these values are 1400Hz and 2300Hz 100ms detection threshold
	When <mode> =3, <operate> set as follows
0	Query threshold values; these values are 1400Hz and 2300Hz 400ms detect threshold
1	Set threshold values; these values are 1400Hz and 2300Hz 400ms detect threshold.
	When <mode> =4, <operate> set as follows
0	Query threshold values; these values are detection threshold
1	Set threshold values; these values are DTMF detection threshold
	When <mode> =5, <param1> set as follows
0	Working status, default value, report +QTONEDET: x,x , please refer to Note3
1	Debug status, only report +QTONEDTD:x,x,... debug information (refer to Note 2)
2	Debug status and working status, report +QTONEDTD: x,x,... debug information (refer to Note 2) and +QTONEDET:x,x , please refer to Note 4
<prefixpause>	Prefix pause number
<lowthreshold>	Low threshold value
<highthreshold>	High threshold value
<dtmfcode>	DTMF tone code corresponding ASCII
48	DTMF 0
49	DTMF 1
50	DTMF 2
51	DTMF 3
52	DTMF 4
53	DTMF 5
54	DTMF 6
55	DTMF 7
56	DTMF 8
57	DTMF 9
65	DTMF A

66	DTMF B
67	DTMF C
68	DTMF D
42	DTMF *
35	DTMF #
69	1400Hz frequency
70	2300Hz frequency
<persistencetime>	
100	100ms of the tone is detected, only 1400Hz and 2300 Hz
400	400ms of the tone is detected, only 1400Hz and 2300 Hz

NOTES

1. Available during voice call.
2. If the duration of DTMF tone is within the value range of low and high threshold value, it is effective. Unit is 20ms.
3. When in debug mode, report **+QTONEDTD: <dtmfcode>,<weak>,,<pause_f7>,<pause_dtmf>,<pause_unkown>,<framecnt>**.
4. When report as follows:
 - +QTONEDT: 50** Detected DTMF 2
 - +QTONEDT: 69,100** Detected 100ms of 1400Hz
 - +QTONEDT: 70,100** Detected 100ms of 2300Hz
 - +QTONEDT: 69,400** Detected 400ms of 1400Hz
 - +QTONEDT: 70,400** Detected 400ms of 2300Hz
5. Consult **AT+QTDMOD**.

13.18. AT+QWDTMF Play DTMF Tone During the Call

AT+QWDTMF Play DTMF Tone During the Call

Test Command AT+QWDTMF=?	Response +QWDTMF: (list of supported <ul_volume>s),(list of supported<dl_volume>s),("<dtmfcode>,<continuancetime>,<mutetime>"),(list of supported <channel>s),(list of supported <mode>s) OK
Write Command AT+QWDTMF=<ul_volume>,<dl_volume>,<dtmfcode>,<continuancetime>,<mutetime>)[,<channel>][,<mode>]	Response If success is related to ME functionality: +QWDTMF: 5 OK

	<p>If fail is related to ME functionality: +QWDTMF: <playcode></p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>
Maximum Response Time	Depends on the content of the play.
Reference	
Quectel	

Parameter

<ul_volume>	0-7, uplink channel of the volume
<dl_volume>	0-7, downlink channel of the volume, recommended to be set as 0
<dtmfcode>	The DTMF tone strings
'0'	DTMF 0
'1'	DTMF 1
'2'	DTMF 2
'3'	DTMF 3
'4'	DTMF 4
'5'	DTMF 5
'6'	DTMF 6
'7'	DTMF 7
'8'	DTMF 8
'9'	DTMF 9
'A'	DTMF A
'B'	DTMF B
'C'	DTMF C
'D'	DTMF D
'*'	DTMF *
'#'	DTMF #
'E'	Frequency of 1400Hz
'F'	Frequency of 2300Hz
'G'	Frequency of 1KHz
<continuancetime>	Duration of each DTMF tone, unit is ms
<mutetime>	Mute time, unit is ms
<channel>	0 Normal audio channel
	1 Headset audio channel
	2 Loudspeaker audio
<mode>	<u>0</u> Algorithm 1 (Default)
	1 Algorithm 2

<playcode> Indicate status of sending DTMF
If **<playcode>** is 5, it means sending DTMF successfully
If **<playcode>** is not 5, it means sending DTMF unsuccessfully

NOTES

1. **AT+QWDTMF=7,0,"0A5,50,50,1,55,50,23,100,50"**
Send DTMF '0' for 50ms, mute 50ms; send DTMF 'A' for 50ms, mute 50ms; send DTMF '5' for 50ms, mute 50ms; send DTMF '1' for 55ms, mute 50ms; send DTMF '2' for 100ms, mute 50ms; send DTMF '3' for 100ms, mute 50ms.
2. **<channel>** is available for non-call.

Quectel
Confidential

14 Hardware Related Commands

14.1. AT+CCLK Clock

AT+CCLK Clock

Test Command AT+CCLK=?	Response OK
Read Command AT+CCLK?	Response +CCLK: <time> OK
Write Command AT+CCLK=<time>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<time>	String type value; format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits),month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -47...+48). E.g. May 6 th , 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"
---------------------	--

Example

```

AT+CCLK? //Query the local time
+CCLK: "08/01/04, 00:19:43+00"

OK
    
```

14.2. AT+QALARM Set Alarm

AT+QALARM Set Alarm

Test Command AT+QALARM=?	Response +QALARM: (list of supported <state>s), <time> ,(list of supported <repeat>s),(list of supported <power>s) OK
Write Command AT+QALARM=<state>,<time>,<repeat>,<power>	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<state>	An integer parameter which indicates whether or not to enable alarm 0 Clear alarm 1 Set alarm
<time>	A string parameter which indicates the time when an alarm arises. The format is “yy/MM/dd,hh:mm:ss±zz” where characters indicate the last two digits of year, month, day, hour, minute, second and time zone. The time zone is expressed in quarters of an hour between the local time and GMT, ranging from -47 to +48
<repeat>	An integer parameter which indicates the repeat mode 0 None 1 Daily 2 Weekly 3 Monthly
<power>	An integer parameter which indicates the method of controlling power when alarm arises 0 None. Only send “ALARM RING” to serial port 1 Alarm power off. Send “ALARM RING” to serial port and power off in 5 seconds 2 Alarm power on. Send “ALARM MODE” to serial port and enter into alarm mode

NOTE

In alarm mode, protocol stack and SIM protocol are closed, only a few AT commands can be executed, and system will be powered down after 90 seconds, if neither power key is pressed nor functionality is changed to full functionality. If power key is pressed, system will be powered down immediately.

14.3. AT+CBC Battery Charge

AT+CBC Battery Charge

Test Command AT+CBC=?	Response +CBC: (list of supported <bcs> s),(list of supported <bcl> s),(voltage) OK
Execution Command AT+CBC	Response +CBC: <bcs> , <bcl> , <voltage> OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference GSM 07.07	

Parameter

<bcs>	Battery charge status 0 ME is not charging 1 ME is charging 2 Charging has finished
<bcl>	Battery charge level 0...100 Battery has 0-100 percent of capacity remaining vent
<voltage>	Battery voltage (mV)

NOTE

As MC60 doesn't support battery charge, **<bcs>** and **<bcl>** are invalid while the **<voltage>** still represents the correct voltage of VBATT.

14.4. AT+QADC Read ADC

AT+QADC Read ADC

Test Command AT+QADC=?	Response +QADC: (list of supported <status> s),(list of supported <value> s)
----------------------------------	--

	OK
Execution Command AT+QADC?	Response +QADC: <status>,<value>
	OK
Maximum Response Time	300ms
Reference Quectel	

Parameter

<status>	Status
	0 Fail
	2 Success
<value>	0-2800 Voltage

14.5. AT+QSCLK Configure Slow Clock

AT+QSCLK Configure Slow Clock	
Test Command AT+QSCLK=?	Response +QSCLK: (list of supported <n>s)
	OK
Read Command AT+QSCLK?	Response +QSCLK: <n>
	OK
Write Command AT+QSCLK=<n>	Response OK
Maximum Response Time	300ms
Reference Quectel	

Parameter

<n>	<u>0</u> Disable slow clock
	1 Enable slow clock, and it is controlled by DTR
	2 When there is no data on serial port in 5 seconds, module will enter into sleep

mode. Otherwise, it will exit from sleep mode.

NOTE

In mode 2, the first UART data that the module received in sleep mode will be discarded as it is used to wake up the module. It's suggested to send an extra AT command to wake up the module first, and then continue to send other commands.

14.6. AT+QLEDMODE Configure the Network Indication LED Patterns

AT+QLEDMODE Configure the Network Indication LED Patterns

Test Command AT+QLEDMODE=?	Response +QLEDMODE: (list of supported <ledmode>s) OK
Read Command AT+QLEDMODE?	Response +QLEDMODE: <ledmode> OK
Write Command AT+QLEDMODE=<ledmode>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference	Quectel

Parameter

<ledmode>	0	Network Indication LED flashes rapidly when a call is ringing
	1	No effect on the Network Indication LED when a call is ringing
	2	No effect on the Network Indication LED when a call is ringing, and RI will not change when URC reported until the ringing ends

NOTE

Please restart the module after the command is set.

14.7. AT+QVBATT Configure the Threshold of Voltage

AT+QVBATT Configure the Threshold of Voltage

Test Command AT+QVBATT=?	Response +QVBATT: 0,(3451-3600),(0,1) +QVBATT: 1,(3100-3450),(0,1) +QVBATT: 2,(4300-4550),(0,1) +QVBATT: 3,(4551-4730),(0,1) OK
Read Command AT+QVBATT?	Response +QVBATT: 0,<threshold>,<state> +QVBATT: 1,<threshold>,<state> +QVBATT: 2,<threshold>,<state> +QVBATT: 3,<threshold>,<state> OK
Write Command AT+QVBATT=<threshold_type>[,<threshold>[,<state>]]	Response If format is right, response OK Else if <threshold> is omitted and <threshold_type> is legal, this command is used to query the value of the corresponding parameter, and response +QVBATT: <threshold_type>,<threshold>,<state> OK If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel Quectel	

Parameter

<threshold_type>	Type of configuring voltage threshold. 0 The threshold of low voltage warning 1 The threshold of low voltage power down 2 The threshold of high voltage warning 3 The threshold of high voltage power down
<threshold>	Voltage threshold. Unit: mV
<state>	The corresponding function of <threshold_type> parameter is enabled/disabled.

The default low voltage warning and low voltage power down function is enabled.
The default high voltage warning and high voltage power down function is disabled

0	The function is disabled
1	The function is enabled

NOTES

- When the battery voltage reaches the setting threshold, reported the URC as follows:
UNDER_VOLTAGE WARNING
UNDER_VOLTAGE POWER DOWN
OVER_VOLTAGE WARNING
OVER_VOLTAGE POWER DOWN
- This command can be saved by **AT&W**.

Example

```

AT+QVBATT=? //Test command, query threshold setting range
+QVBATT: 0,(3451-3600),(0,1)
+QVBATT: 1,(3100-3450),(0,1)
+QVBATT: 2,(4300-4550),(0,1)
+QVBATT: 3,(4551-4730),(0,1)

OK
AT+QVBATT? //Read command
+QVBATT: 0,3500,1
+QVBATT: 1,3100,1
+QVBATT: 2,4500,0
+QVBATT: 3,4600,0

OK
AT+QVBATT=0,3490 //Set the low voltage warning voltage as 3490mV
OK
AT+QVBATT=0 //Query the low voltage warning threshold and state
+QVBATT: 0,3490,1 //0 is the function type of the low voltage warning; 3490 is
the threshold of the low voltage warning; 1 means that the
function of the low voltage power warning is enabled.

OK
AT+QVBATT=1,3300,0 //The function of the low voltage power off is disabled.
OK
AT+QVBATT=1 //Query the threshold of the low voltage power off and the
state
+QVBATT: 1,3300,0 //1 means the function type of the low voltage power off;
3300 is the threshold of the low voltage power off; 0 means

```

that the function of low voltage power off is disabled.

OK

Quectel
Confidential

15 Others Commands

15.1. A/ Re-issue the Last Command Given

A/ Re-issue the Last Command Given

Execution Command A/	Response Re-issue the previous command
Maximum Response Time	300ms
Reference V.25ter	

NOTE

This command does not work when the serial multiplexer is active. It does not have to end with the terminating character.

Example

```
AT
OK
A/ //Re-issue the previous command
OK
```

15.2. ATE Set Command Echo Mode

ATE Set Command Echo Mode

Execution Command ATE[<value>]	Response This setting determines whether or not the TA echoes characters received from TE during command state. OK
Maximum Response Time	300ms
Reference	

V.25ter

Parameter

<value>	0	Echo mode off
	1	Echo mode on

15.3. AT3 Set Command Line Termination Character

AT3 Set Command Line Termination Character

Read Command AT3?	Response <n> OK
Write Command AT3=<n>	Response This parameter setting determines the character recognized by TA to terminate an incoming command line. The TA also returns this character in output. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n>	0-13-127	Command line termination character (Default 13=<CR>)
-----	----------	--

15.4. AT4 Set Response Formatting Character

AT4 Set Response Formatting Character

Read Command AT4?	Response <n> OK
Write Command AT4=<n>	Response This parameter setting determines the character generated

	by the TA for result code and information text. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n> 0-10-127 Response formatting character (Default 10=<LF>)

15.5. AT55 Set Command Line Editing Character

AT55 Set Command Line Editing Character

Read Command AT55?	Response <n> OK
Write Command AT55=<n>	Response This parameter setting determines the character recognized by TA as a request to delete the immediately preceding character from the command line. OK
Maximum Response Time	300ms
Reference V.25ter	

Parameter

<n> 0-8-127 Response editing character (Default 8=<Backspace>)

15.6. AT+QRIMODE Set RI Time

AT+QRIMODE Set RI Time

Test Command AT+QRIMODE=?	Response +QRIMODE: (list of supported <timemode>s)
-------------------------------------	--

	OK
Read Command AT+QRIMODE?	Response +QRIMODE: <timemode>
	OK
Write Command AT+QRIMODE=<timemode>	Response OK
	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<timemode>	Time mode
0	120ms low pulse for RI when receiving SMS or other URCs
1	120ms low pulse for RI when receiving SMS; 50ms low pulse when receiving other URCs
2	When a new SMS is received, RI changes to LOW and holds low level for 120ms; when other URCs are received, it takes no effect on RI

15.7. AT+QCFG="RFTXburst" Burst Transition Signal Indication

AT+QCFG="RFTXburst" Burst Transition Signal Indication


Read Command AT+QCFG="RFTXburst"	Response +QCFG: "RFTXburst",<indmode>
	OK
Write Command AT+QCFG="RFTXburst",<indmode>	Response OK
	If error is related to ME functionality: +CME ERROR: <err>
Maximum Response Time	300ms
Reference Quectel	

Parameter

<indmode>	Burst transition signal indication through GPIO line.
0	Disable TX burst indication. The pin output LOW level as GPIO function.
1	Enable TX burst indication. The output wave as notes
2	Enable TX burst indication. The pin will be HIGH during a call and the pin will become LOW after the call is released.

NOTES

1. This AT command will be saved by **AT&W**.
2. Below is the output wave of **<indmode>=1**:

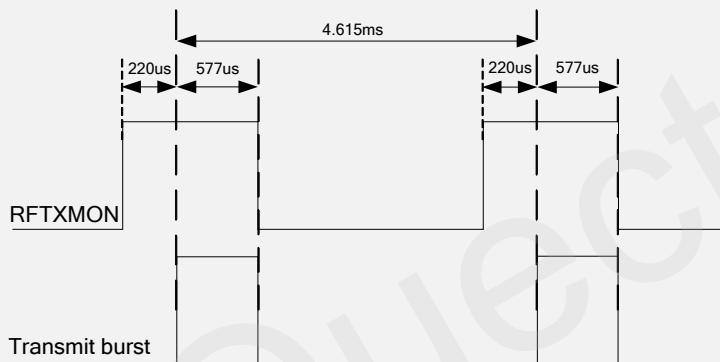

16 Appendixes

16.1. Related Documents

Table 4: Related Documents

SN	Document Name	Remark
[1]	V.25ter	Serial asynchronous automatic dialing and control
[2]	GSM 07.07	Digital cellular telecommunications (Phase 2+); AT command set for GSM Mobile Equipment (ME)
[3]	GSM 07.05	Use of Data Terminal Equipment - Data Circuit terminating Equipment (DTE- DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)
[4]	GSM 07.10	Support GSM 07.10 multiplexing protocol
[5]	Quectel_GSM_TCPIP_Application_Note	GSM TCPIP Application Note
[6]	Quectel_GPRS_Startup_User_Guide	GPRS Startup User Guide
[7]	Quectel_GSM_MUX_Application_Note	MUX Application Note
[8]	Quectel_SMS_Application_Note	SMS Application Note
[9]	Quectel_MC60_Hardware_Design	MC60 Hardware Design

16.2. Terms and Abbreviations

Table 5: Terms and Abbreviations

Abbreviation	Description
AMR	Adaptive Multi-Rate
CSD	Circuit Switch Data
DCD	Dynamic Content Delivery
DCE	Data Communication Equipment
DTE	Data Terminal Equipment
DTR	Data Terminal Ready
GPRS	General Packet Radio Service
ME	Mobile Equipment
MS	Mobile Station
PDP	Packet Data Protocol
PSC	Primary Synchronization Code
RTS/CTS	Request To Send/Clear To Send
TA	Terminal Adapter
TCP	Transmission Control Protocol
TE	Terminal Equipment
UDP	User Datagram Protocol

16.3. Factory Default Settings Restorable with AT&F

Table 6: Factory Default Settings Restorable with AT&F

AT Command	Parameters	Factory Defaults
ATE	<value>	1
ATQ	<n>	0
ATS0	<n>	0
ATS3	<n>	13
ATS4	<n>	10
ATS5	<n>	8
ATS6	<n>	2
ATS7	<n>	60
ATS8	<n>	2
ATS10	<n>	15
ATV	<value>	1
ATX	<value>	4
AT&C	<value>	1
AT&D	<value>	0
AT+ILRR	<value>	0
AT+CREG	<n>	0
AT+CCUG	<n>,<index>,<info>	0,0,0
AT+CCWA	<n>	0
AT+CSCS	<chset>	"GSM"
AT+CSTA	<type>	129
AT+CLIP	<n>	0
AT+CLIR	<n>	0

AT+CMEE	<n>	1
AT+COLP	<n>	0
AT+CR	<mode>	0
AT+QDISH	<disableath>	0
AT+CRLP	<iws>,<mws>,<T1>,<N2>,<Ver1>,<T4>	61,61,128,6,0,3
AT+CRSL	<level>	55
AT+CLVL	<level>	When AT+QAUDCH=0, the default value <level>=60; When AT+QAUDCH=1, the default value <level>=40; When AT+QAUDCH=2, the default value <level>=35;
AT+CUSD	<n>	0
AT+CSSN	<n>,<m>	0,0
AT+CSNS	<mode>	0
AT+CMOD	<mode>	0
AT+CMGF	<mode>	0
AT+CNMI	<mode>,<mt>,<bm>,<ds>,<bfr>	2,1,0,0,0
AT+CSDH	<show>	0
AT+CSMS	<service>	0
AT+QSIDET	<gainlevel>	When AT+QAUDCH=0, the default value <gainlevel>=80; When AT+QAUDCH=1, the default value <gainlevel>=144;
AT+QMIC	<gainlevel(Normal_Mic)>,<gainlevel(Headset_Mic)>,<gainlevel(Loudspeaker_Mic)>	4,9,8
AT+QSCLK	<n>	0
AT+QCLIP	<n>	0
AT+QCOLP	<n>	0
AT+QIURC	<mode>	1

AT+QEXTUNSOL	<mode>	0
AT+QRIMODE	<timemode>	0
AT+QSIMDET	<enable>,<insert_level>,<pin_choice>	0,0,0
AT+QSIMSTAT	<enable>	0

16.4. AT Command Settings Storable with AT&W

Table 7: AT Command Settings Storable with AT&W

AT Command	Parameters	Display with AT&V
ATE	<value>	Yes
ATQ	<n>	Yes
ATS0	<n>	Yes
ATS3	<n>	Yes
ATS4	<n>	Yes
ATS5	<n>	Yes
ATS6	<n>	Yes
ATS7	<n>	Yes
ATS8	<n>	Yes
ATS10	<n>	Yes
ATV	<value>	Yes
ATX	<value>	No
AT&C	<value>	Yes
AT&D	<value>	Yes
AT+ICF	<format>,<parity>	Yes
AT+IFC	<dce_by_dte>,<dte_by_dce>	Yes

AT+ILRR	<value>	Yes
AT+IPR	<rate>	Yes
AT+CREG	<n>	Yes
AT+CCUG	<n>,<index>,<info>	Yes
AT+CCWA	<n>	Yes
AT+CSCS	<chset>	Yes
AT+CSTA	<type>	Yes
AT+CLIP	<n>	Yes
AT+CLIR	<n>	Yes
AT+CMEE	<n>	Yes
AT+COLP	<n>	Yes
AT+CR	<mode>	Yes
AT+QDISH	<disableath>	No
AT+CRLP	<iws>,<mws>,<T1>,<N2>,<Ver1>,<T4>	Yes
AT+CRSL	<level>	No
AT+CLVL	<level>	No
AT+CUSD	<n>	Yes
AT+CSNS	<mode>	Yes
AT+CMGF	<mode>	Yes
AT+CNMI	<mode>,<mt>,<bm>,<ds>,<bfr>	Yes
AT+CSDH	<show>	Yes
AT+QSIDET	<gainlevel>	Yes
AT+QMIC	<gainlevel(Normal_Mic)>,<gainlevel(Headset_Mic)>,<gainlevel(Loudspeaker_Mic)>	Yes
AT+QSCLK	<n>	No

AT+QCLIP	<n>	Yes
AT+QCOLP	<n>	Yes
AT+QIURC	<mode>	No
AT+QEXTUNSOL	<mode>	No
AT+QRIMODE	<timemode>	No
AT+QSIMDET	<enable>,<insert_level>,<pin_choice>	Yes
AT+QSIMSTAT	<enable>	Yes

16.5. AT Command Settings Storable with ATZ

Table 8: AT Command Settings Storable with ATZ

AT Command	Parameters	Factory Defaults
ATE	<value>	1
ATQ	<n>	0
ATS0	<n>	0
ATS3	<n>	13
ATS4	<n>	10
ATS5	<n>	8
ATS6	<n>	2
ATS7	<n>	60
ATS8	<n>	2
ATS10	<n>	15
ATV	<value>	1
ATX	<value>	4
AT&C	<value>	1

AT&D	<value>	0
AT+ILRR	<value>	0
AT+CREG	<n>	0
AT+CCUG	<n>,<index>,<info>	0,0,0
AT+CCWA	<n>	0
AT+CSCS	<chset>	"GSM"
AT+CSTA	<type>	129
AT+CLIP	<n>	0
AT+CLIR	<n>	0
AT+CMEE	<n>	1
AT+COLP	<n>	0
AT+CR	<mode>	0
AT+QDISH	<disableath>	0
AT+CRLP	<iws>,<mws>,<T1>,<N2>,<Ver1>,<T4>	61,61,128,6,0,3
AT+CRSL	<level>	55
AT+CLVL	<level>	When AT+QAUDCH=0, the default value <level>=60; When AT+QAUDCH=1, the default value <level>=40; When AT+QAUDCH=2, the default value <level>=35;
AT+CUSD	<n>	0
AT+CSSN	<n>,<m>	0,0
AT+CSNS	<mode>	0
AT+CMOD	<mode>	0
AT+CMGF	<mode>	0
AT+CNMI	<mode>,<mt>,<bm>,<ds>,<bfr>	2,1,0,0,0
AT+CSDH	<show>	0

AT+CSMS	<service>	0
AT+QSIDET	<gainlevel>	When AT+QAUDCH=0, the default value <gainlevel>=80; When AT+QAUDCH=1, the default value <gainlevel>=144;
AT+QMIC	<gainlevel(Normal_Mic)>,<gainlevel(Headset_Mic)>,<gainlevel(Loudspeaker_Mic)>	4,9,8
AT+QSCLK	<n>	0
AT+QCLIP	<n>	0
AT+QCOLP	<n>	0
AT+QIURC	<mode>	1
AT+QEXTUNSOL	<mode>	0
AT+QRIMODE	<timemode>	0
AT+QSIMDET	<enable>,<insert_level>,<pin_choice>	0,0,0
AT+QSIMSTAT	<enable>	0

16.6. Summary of URC

Table 9: Summary of URC

Index	URC display	Meaning	Condition
1	+CMTI:<mem>,<index>	New message is received, and saved to memory	AT+CNMI=2,1
2	+CMT:[<alpha>],<length><CR><LF><pdu>	New short message is received and output directly to TE (PDU mode)	AT+CNMI=2,2
3	+CMT:<oa>,<alpha>,<scts>,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data>	New short message is received and output directly to TE (Text mode)	AT+CNMI=2,2
4	+CBM:<length><CR>	New CBM is received and output directly (PDU mode)	AT+CNMI=2,2
5	+CBM:<sn>,<mid>,<dcs>,<page>,<pages>,<CR>,<LF><data>	New CBM is received and output directly to TE (Text mode)	AT+CNMI=2,2

6	+CDS:<length><CR><LF>< pdu>	New CDS is received and output directly (PDU mode)	AT+CNMI=2,2
7	+CDS:<fo>,<mr>,<ra>,<tor>,<scts>,<dt>,<st>	New CDS is received and output directly to TE (Text mode)	AT+CNMI=2,2
8	+CGEV:NW DEACT<PDP_type>,<PDP_addr>,<cid>	GPRS network detach	AT+CGEREP=1
9	+CGEV:ME DEACT<PDP_type>,<PDP_addr>,<cid>	GPRS ME detach	AT+CGEREP=1
10	+CGEV:NW DETACH	GPRS network detach	AT+CGEREP=1
11	+CGEV:ME DETACH	GPRS ME detach	AT+CGEREP=1
12	+CGREG:1	Network registered	AT+CGREG=1
13	+CGREG:0	Network unregistered	AT+CGREG=1
14	+CGREG:1,<lac><ci>	Network registered, with location code	AT+CGREG=2
15	+CGREG:0,<lac><ci>	Network unregistered, with location code	AT+CGREG=2
16	+QCGTIND	A CS voice call, CS data, fax call or GPRS session termination indicator	AT+QCGTIND=1
17	+CSQN:<rsqi>,<ber>	Signal quality change	AT+QEXTUNSOL="SQ",1
18	+FPLMN: <status>	Forbidden network is available only	AT+QEXTUNSOL="FN",1
19	+CMWT:<store>,<index>,<voice>,<fax>,<email>,<other>	Message waiting	AT+QEXTUNSOL="MW",1
20	+QGURC:<event>	Unsolicited result code follows particular call state transition	AT+QEXTUNSOL="UR",1
21	+CBCN<bcs>,<bcl>	Display battery connection status and battery charge level	AT+QEXTUNSOL="BC",1
22	+QBAND:<band>	Band mode display	AT+QEXTUNSOL="BM",1
23	+TSMSINFO:<CMS error info>	Additional SMS information	AT+QEXTUNSOL="SM",1
24	+CCINFO:<Call is Disconnected>,<remain calls>	Displays the disconnected call ID and the remain call numbers after one of the call is disconnected	AT+QEXTUNSOL="CC",1
25	RING	Indicates incoming call	N/A

26	Call Ready	Device is ready to make/receive calls	N/A
27	UNDER_VOLTAGE POWER DOWN	Under voltage shutdown indication	N/A
28	UNDER_VOLTAGE WARNING	Under voltage warning	N/A
29	OVER_VOLTAGE POWER DOWN	Over voltage shutdown indication	N/A
30	OVER_VOLTAGE WARNING	Over voltage warning	N/A
31	NORMAL POWER DOWN	Normal power down	N/A
32	+COLP:<number>,<type>[,<subaddr>,<satype>[CLI validity]],	The presentation of the COL(connected line) at the TE for a mobile originated call	AT+COLP=1
33	+CLIP:<number>,<type>"",,<alphaID>,<CLI validity>	Mobile terminating call indication	AT+CLIP=1
34	+CRING:<type>	An incoming call is indicated to the TE with unsolicited result code instead of the normal RING	AT+CRC=1
35	+CREG:<stat>	Indicate registration status of the ME	AT+CREG=1
36	+CREG:<stat>[,<lac>,<ci>]	After cell neighborhood changing shows whether the network has currently indicated the registration of the ME, with location area code	AT+CREG=2
37	+CCWA:<number>,<type>,<class>[,<alpha>]	Call waiting indication	AT+CCWA=1,1
38	RDY	ME initialization is successful	N/A
39	+CFUN:1	All function of the ME is available	N/A
40	+CPIN:<state>	SIM card pin state	N/A
41	MO RING	MO call ringing	AT+QMOSTAT=1
42	MO CONNECTED	MO call connected	AT+QMOSTAT=1
43	ALARM RING	Alarm event is triggered	AT+QALARM=1,<time>,<repeat>,0/1
44	ALARM MODE	ME is switched on by alarm	AT+QALARM=1,<time>,<repeat>,2

16.7. Summary of CME ERROR Codes

Final result code **+CME ERROR: <err>** indicates an error related to mobile equipment or network. The operation is similar to **ERROR** result code. None of the following commands in the same command line is executed. Neither **ERROR** nor **OK** result code shall be returned.

<err> values are mostly used by common message commands. The following table lists most of general and GRPS related **ERROR** Codes. For some GSM protocol failure cause described in GSM specifications, the corresponding **ERROR** codes are not included.

Table 10: Different Coding Schemes of +CME ERROR: <err>

Code of <err>	Meaning
0	Phone failure
1	No connection to phone
2	Phone-adaptor link reserved
3	Operation not allowed
4	Operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	Incorrect password
17	SIM PIN2 required

18	SIM PUK2 required
20	Memory full
21	Invalid index
22	Not found
23	Memory failure
24	Text string too long
25	Invalid characters in text string
26	Dial string too long
27	Invalid characters in dial string
30	No network service
31	Network timeout
32	Network not allowed - emergency calls only
40	Network personalization PIN required
41	Network personalization PUK required
42	Network subset personalization PIN required
43	Network subset personalization PUK required
44	Service provider personalization PIN required
45	Service provider personalization PUK required
46	Corporate personalization PIN required
47	Corporate personalization PUK required
103	Illegal MS
106	Illegal ME
107	GPRS services not allowed
111	PLMN not allowed
112	Location area not allowed

113	Roaming not allowed in this location area
132	Service option not supported
133	Requested service option not subscribed
134	Service option temporarily out of order
148	Unspecified GPRS error
149	PDP authentication failure
150	Invalid mobile class
151	Link NS SP person PIN required
152	Link NS SP person PUK required
153	Link SIM C person PIN required
154	Link SIM C person PUK required
302	Command conflict
601	Unrecognized command
602	Return error
603	Syntax error
604	Unspecified
605	Data transfer already
606	Action already
607	Not AT command
608	Multi command too long
609	Abort COPS
610	No call disconnect
3513	Unread records on SIM
3515	PS busy
3516	Couldn't read SMS parameters from SIM

3517	SM not ready
3518	Invalid parameter
3738	CSCS mode not found
3742	CPOL operation format wrong
3765	Invalid input value
3769	Unable to get control
3771	Call setup in progress
3772	SIM powered down
3773	Invalid CFUN state
3774	Invalid ARFCN
3775	The pin is not in GPIO mode

16.8. Summary of CMS ERROR Codes

Final result code **+CMS ERROR: <err>** indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same command line is executed. Neither **ERROR** nor **OK** result code shall be returned.

<err> values are mostly used by common message commands:

Table 11: Different Coding Schemes of +CMS ERROR: <err>

Code of <err>	Meaning
300	ME failure
301	SMS ME reserved
302	Operation not allowed
303	Operation not supported
304	Invalid PDU mode

305	Invalid text mode
310	SIM not inserted
311	SIM pin necessary
312	PH SIM pin necessary
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	Memory failure
321	Invalid memory index
322	Memory full
330	SMSC address unknown
331	No network
332	Network timeout
500	Unknown
512	SIM not ready
513	Message length exceeds
514	Invalid request parameters
515	ME storage failure
517	Invalid service mode
528	More message to send state error
529	MO SMS is not allow
530	GPRS is suspended

531	ME storage full
3513	Unread records on SIM
3515	PS busy
3516	Couldn't read SMS parameters from SIM
3517	SM not ready
3518	Invalid parameter
3742	Incorrect <oper> format
3765	Invalid input value
3769	Unable to get control of required module
3771	Call setup in progress
3772	SIM powered down
3773	Unable to operate in this CFUN state
3774	Invalid ARFCN in this band
3775	The pin is not in GPIO mode

16.9. Summary of Cause for Extended Error Report

16.9.1. Location ID for the Extended Error Report

Table 12: Location ID for the Extended Error Report

ID	Description
0	No error (default)
1	Cause for protocol stack (PS) layer
2	Internal cause for Mobility Management (MM) layer
3	Cause for PPP/IP-Stack

16.9.2. Cause for Protocol Stack (PS) Layer

Table 13: Cause for Protocol Stack (PS) Layer

Cause	Description
CM Cause	
0	Radio link fail
1	Unassigned number
3	No route to destination
6	Channel unacceptable
8	Operator determined barring
10	Call barred
11	Reserved
16	Normal call clearing
17	User busy
18	No user responding
19	User alerting, no answer
21	Call rejected
22	Number changed
25	Pre-emption
26	Non-selected user clearing
27	Destination out of order
28	Invalid number format (incomplete number)
29	Facility rejected
30	Response to STATUS ENQUIRY
31	Normal, unspecified

34	No circuit/channel available
38	Network out of order
41	Temporary failure
42	Switching equipment congestion
43	Access information discarded
44	Requested circuit/channel not available
47	Resource unavailable, unspecified
49	Quality of service unavailable
50	Requested facility not subscribed
55	Incoming calls barred within the CUG
57	Bearer capability not authorized
58	Bearer capability not presently available
63	Service or option not available, unspecified
65	Bearer service not implemented
68	ACM equal or greater than ACM maximum
69	Requested facility not implemented
70	Only restricted digital information bearer capability is available
79	Service or option not implemented, unspecified
81	Invalid transaction identifier value
87	User not member of CUG
88	Incompatible destination
91	Invalid transit network selection
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type non-existent or not implemented

98	Message type not compatible with protocol state
99	Information element non-existent or not implemented
100	Conditional information element error
101	Message not compatible with protocol
102	Recovery on timer expiry
111	Protocol error, unspecified
127	Interworking, unspecified
128	Telematic interworking not supported
129	Short message Type 0 not supported
130	Cannot replace short message
143	Unspecified TP-PID error
144	Data coding scheme (alphabet) not supported
145	Message class not supported
159	Unspecified TP-DCS error
160	Command cannot be acted
161	Command unsupported
175	Unspecified TP-Command error
176	TPDU not supported
192	SC busy
193	No SC subscription
194	SC system failure
195	Invalid SME address
196	Destination SME barred
197	SM Rejected-Duplicate SM
198	TP-VPF not supported

199	TP-VP not supported
208	SIM SMS storage full
209	No SMS storage capability in SIM
210	Error in MS
211	Memory Capacity Exceeded
212	SIM Application Toolkit Busy
213	SIM data download error
224	CP retry exceed
225	RP trim timeout
226	SMS connection broken
255	Unspecified error cause
304	Invalid PDU mode parameter
305	Invalid TEXT mode parameter
313	SIM failure
320	Memory failure
321	Invalid memory index
322	Memory full
330	SMSC address unknown
340	No +CNMA acknowledgement expected
500	Unknown error
512	SMS no error
513	Message length exceeds maximum length
514	Invalid request parameters
515	ME storage failure
516	Invalid bearer service

517	Invalid service mode
518	Invalid storage type
519	Invalid message format
520	Too many MO concatenated messages
521	SMSAL not ready
522	SMSAL no more service
523	Not support TP-Status-Report&TP-Command in storage
524	Reserved MTI
525	No free entity in RL layer
526	The port number is already registered
527	There is no free entity for port number
528	More Message to Send state error
529	MO SMS is not allow
530	GPRS is suspended
531	ME storage full
532	Doing SIM refresh
CC Cause	
768	Command not allowed
769	Illegal card ID
770	Call allocation fail
771	BC fill fail
772	Call RE EST
773	Illegal DTMF tone
774	Illegal BC
775	Modify actual mode

776	Data action fail
777	No response from network
778	Call accept not allowed
896	General cause
897	CSD call is aborted by user during call establishment or MT call abort MO call/USSD
898	CSD call is disconnected due to lower layer failure
SS Cause	
1024	Cause none
1025	Unknown subscriber
1033	Illegal subscriber
1034	Bearer service not provisioned
1035	Tele service not provisioned
1036	Illegal equipment
1037	Call barred
1040	Illegal SS operation
1041	SS error status
1042	SS not available
1043	SS subscription violation
1044	SS incompatibility
1045	Facility not supported
1051	Absent subscriber
1053	Short term denial
1054	Long term denial
1058	System failure
1059	Data missing

1060	Unexpected data value
1061	PW registration failure
1062	Negative PW check
1067	Number of PW attempts violation
1078	Position method failure
1095	Unknown alphabet
1096	USSD busy
1145	Rejected by user
1146	Rejected by network
1147	Deflection to served subscriber
1148	Special service code
1149	Invalid deflection to number
1150	Max number of MPTY participants exceeded
1151	Resources not available
1152	General problem, unrecognized component
1153	General problem, mistyped component
1154	General problem, badly structured component
1155	Invoke problem, duplicate invoked
1156	Invoke problem, unrecognized operation
1157	Invoke problem, mistyped parameter
1158	Invoke problem, resource limitation
1159	Invoke problem, initiating release
1160	Invoke problem, unrecognized linked ID
1161	Invoke problem, linked resource unexpected
1162	Invoke problem, unexpected linked operation

1163	Return result problem, RR unrecognized invoked
1164	Return result problem, RR, return result unexpected
1165	Return result problem, RR mistyped parameter
1166	Return error problem, RE, unrecognized invoked
1167	Return error problem, RE return error unexpected
1168	Return error problem, RE unrecognized error
1169	Return error problem, RE unexpected error
1170	Return error problem, RE mistyped parameter
MM Cause	
2048	Cause none
2050	IMSI unknown in HLR
2051	Illegal MS
2052	IMSI unknown in VLR
2053	IMEI not accepted
2054	Illegal ME
2055	GPRS not allowed
2056	None GPRS not allowed
2057	MS ID not derived by network
2058	Implicit detach
2059	PLMN not allowed
2060	Location area not allowed
2061	Roaming area not allowed
2062	GPRS not allowed in PLMN
2063	No suitable cells in LA
2064	MSC temp not reachable

2065	Network failure
2068	MAC failure
2069	Sync failure
2070	Congestion
2080	Serve option not supported
2081	Request serve option not subscribed
2082	Serve option temp out of order
2086	Call cannot be identified
2088	No PDP context activated
2096	Retry upon entry into a new cell
2111	Retry upon entry into a new cell
2143	Semantically incorrect message
2144	Invalid MM info
2145	Message type non existent
2146	Message type incompatible with protocol state
2147	IE not implemented
2148	Conditional MM IE error
2149	Message not compatible with protocol state
2159	Protocol error unspecified
2160	Access barred
2161	Assignment reject
2162	Random access failure
2163	RR no service
2164	PLMN search reject emergency
2165	RR connection release

2166	Authentication failure
2167	IMSI detach
2168	Abort by network
2169	Connection timeout
2170	Enqueue fail
2171	Not updated
2172	State not allowed
2173	Emergency not allowed
2174	No service
2175	Access class barred
SIM Cause	
2560	Command success
2561	Command fail
2562	Fatal error
2563	No inserted
2564	CHV not init
2565	CHV verify error
2566	CHV block
2567	Access not allow
2568	SAT command busy
2569	DL error
2570	Memory problem
2571	Technical problem
2572	PUK unlock
SM Cause	

3080	Operator determined barring
3097	LLC SND failure
3098	Insufficient resource
3099	Unknown APN
3100	Unknown PDP address or type
3101	Authentication failure
3102	Activation reject GGSN
3103	Activation reject
3104	Unsupported service option
3105	Unsubscribed service option
3106	Out of order service option
3108	Regular deactivation
3109	QOS not accepted
3110	Network fail
3111	Reactivation required
3112	Unsupported network context activation
3113	Semantic error in TFT operation
3114	Syntactical error in TFT operation
3115	Unknown PDP context
3116	Semantic error in packet filter
3117	Syntax error in packet filter
3118	PDP context WO TFT already act
3153	Invalid TI
3167	Incorrect message
3168	Invalid MAND info

3169	Unimplemented message type
3170	Incompatible message type protocol state
3171	Unimplemented IE
3172	Conditional IE error
3173	Incompatible message protocol state
3183	Unspecified
3184	Startup failure
ABM Cause	
3273	Success
3274	Invalid network account ID
3275	GPRS reactivate
3276	GPRS protocol rejection
3277	CSD reactivate
3278	CSD PPP negotiated failed
3279	CSD action failed
3280	CSD call setup failed
3283	Rejected
3284	Slot limited
3285	Abort
3286	None auto deactivation
TCM Cause	
3372	Invalid parameter
3373	NSAPI not in use
3374	ACL action not allowed
3375	ACL SIM file full

3376	ACL add entry failed
3377	ACL del entry failed
3378	ACL set entry failed
3379	ACL SIM read failed
3380	ACL SIM write failed

16.9.3. Internal Cause for MM Layer

Table 14: Internal Cause for MM Layer

Cause	Description
112	Forbidden PLMN
113	Access class barred
114	No coverage
115	GPRS service not allowed
116	Timer expiry
117	SIM inserted
118	SIM removed
119	SIM absent
120	SIM invalid for PS
121	SIM invalid for CS
122	SIM invalid for PS and CS
123	Low layer fail
124	Connection in progress
125	Not updated
126	Connection establish failure
127	Connection abort

128	Connection failure
129	Emergency not allowed
130	No GPRS coverage
131	Abnormal LU
132	Abnormal LU less than 4 times
133	Same LAI IMSI attaching

16.9.4. Cause for PPP/IP-Stack

Table 15: Cause for PPP/IP-Stack

Cause	Description
0	No error
1	LCP fail
2	Authentication fail
3	IPCP fail
4	ESC detect
5	Plug out detect
6	PPP GPRS dialup already activated
7	PPP not activated by external modem yet
8	PPP already activated by external modem
9	PPP not activated by WAP over CSD yet
10	PPP already activated by WAP over CSD
11	PPP wrong CSD mode ID
12	PPP detect AT command during dialup
13	PPP detect escape during dialup